

M0146

**OPERATOR & PARTS
MANUAL**

**MODEL 2000
PULL TYPE PLANTER**

This manual is applicable to: Model: PT2000 Pull Type Planters
Serial Number: 12113 and on

Model: 2000 Pull Type Planters
Serial Number: 607500 and on

Record the model number and serial number of your planter with date purchased:

Model Number _____

Serial Number _____

Date Purchased _____

PREDELIVERY/DELIVERY CHECK LIST

TO THE DEALER

Preelivery service includes assembly, lubrication, adjustment and test. This service helps to assure that the planter will be delivered to the customer ready for field use.

PREDELIVERY CHECK LIST

After the planter has been completely assembled, use the following check list and inspect the planter. Check off each item as it is found satisfactory or after proper adjustment is made.

- ☐ Recheck to be sure row units and optional attachments are properly spaced and assembled.
- ☐ Be sure all grease fittings are in place and lubricated.
- ☐ Check planter and make sure all working parts are moving freely, bolts are tight and cotter pins are spread.
- ☐ Check all drive chains for proper tension and alignment.
- ☐ Check for oil leaks, proper hydraulic operation and proper chain alignment.
- ☐ Inflate tires to specified PSI air pressure. Tighten wheel bolts to specified torque.
- ☐ Check to be sure all safety decals are correctly located and legible. Replace if damaged.
- ☐ Check to be sure the red reflectors and amber reflectors are correctly located and visible when the planter is in transport position.
- ☐ Check to be sure SMV sign is in place.
- ☐ Check to be sure flashing warning lights are installed correctly and working properly.
- ☐ Paint all parts scratched in shipment or assembly.
- ☐ Be sure all safety lockups are on the planter and correctly located.

This planter has been thoroughly checked and to the best of my knowledge is ready for delivery to the customer.

(Signature of Set-up Person/Date)

OWNER REGISTER

Name _____

Date Sold _____

Street Address _____

Model _____

City & State _____

Serial Number _____

DELIVERY CHECK LIST

At the time the planter is delivered, the following check list is a reminder of very important information which should be conveyed to the customer. Check off each item as it is fully explained to the customer.

- ☐ Advise the customer that the life expectancy of this or any other machine is dependent on regular lubrication as directed in the operator's manual.
- ☐ Tell the customer about all the safety precautions.
- ☐ Along with the customer, check to be sure the red and amber reflectors and SMV sign are clearly visible with the planter in transport position and attached to the tractor. Check to be sure flashing warning lights are in working condition. Tell the customer to check federal, state and local regulations before towing or transporting on a road or highway.
- ☐ Give the operator's manual to the customer and explain all operating adjustments.
- ☐ Read warranty to customer.
- ☐ Complete Warranty And Delivery Report Form.

To the best of my knowledge this machine has been delivered ready for field use and customer has been fully informed as to proper care and operation.

(Signature of Delivery Person/Date)

AFTER DELIVERY CHECK LIST

The following is a list of items we suggest to check during the first season of use of the equipment.

- ☐ Check with the customer as to the performance of the planter.
- ☐ Review with the customer the importance of proper maintenance and safety precautions.
- ☐ Check for parts that may need to be adjusted or replaced.
- ☐ Check to be sure all safety decals, SMV sign and reflectors are correctly located and legible. Replace if damaged or missing.
- ☐ Check to be sure safety warning lights are working properly.

(Signature of Follow-up Person/Date)

**RETURN THIS COMPLETED FORM TO KINZE® IMMEDIATELY, along with Warranty And Delivery Report.
Retain photocopy of this form at dealership for After Delivery Check.**

TABLE OF CONTENTS

TO THE OWNER	1-1
WARRANTY	1-2
INTRODUCTION	2-1
SPECIFICATIONS	3-1
SAFETY PRECAUTIONS	4-1/4-2
SAFETY WARNING SIGNS	5-1/5-3
MACHINE OPERATION	
Initial Preparation Of The Planter	6-1
Tractor Requirements	6-1
Tractor Preparation And Hookup	6-1
Leveling The Planter	6-1
Tire Pressure	6-2
Transmission Adjustment	6-2
2 To 1 Drive Reduction	6-3
Contact Drive Wheel Spring Adjustment	6-3
Tire Scraper	6-4
Ridge Planting	6-4
Shear Protection	6-4
Hydraulic Marker Operation	6-5
Hydraulic Planter Lift Operation	6-5
Marker Speed Adjustment	6-6
Marker Adjustment	6-6
Electronic Seed Monitor System	
KM1000 Monitor	6-7/6-8
KM3000 Monitor	6-9/6-11
Transporting The Planter	6-12
Tractor Speed	6-12
Metric Conversion Table	6-12
Field Test	6-12
Double Disc Fertilizer Opener	6-13
Single Disc Fertilizer Opener	6-14/6-15
Dry Fertilizer Attachment	6-16/6-17
Liquid Fertilizer Attachment	6-18/6-19
Interplant Rock Shaft Attachment	6-19
Checking Seed Population	6-20/6-21
Checking Granular Chemical Application Rate	6-21
General Planting Rate Information	6-22
Planting And Application Rate Charts	6-23/6-28
ROW UNIT OPERATION	
Planting Depth	7-1
Closing Wheel Pressure	7-1
Closing Wheel Lateral Adjustment	7-1
Seed Meter Drive Release	7-2
Finger Pickup Corn Meter	7-2
Brush-Type Seed Meter	7-3/7-4
Seed Hopper	7-4
Granular Chemical Hopper	7-4
Seed Meter Drive Adjustment	7-5
Row Unit Chain Routing	7-6
Quick Adjustable Down Force Springs	7-6/7-7

TABLE OF CONTENTS

ROW UNIT OPERATION (Continued)

Frame Mounted Coulter	7-8/7-9
Disc Furrowers (For use with Frame Mounted Coulter)	7-9
Row Unit Mounted Disc Furrower	7-10
Row Unit Mounted Bed Leveler	7-10
Row Unit Mounted No Till Coulter	7-11
Row Unit Chain Shield	7-11
Dual Gauge Wheel	7-12
Row Unit Gauge Wheel Cover	7-12
Granular Chemical Restrictor Plate	7-12
Spring Tooth Incorporator	7-12
Closing Wheel Troubleshooting	7-13
Brush-Type Seed Meter Troubleshooting	7-13
Finger Pickup Corn Meter Troubleshooting	7-14

LUBRICATION

Lubrication Symbols	8-1
Sealed Bearings	8-1
Drive Chains	8-1
Bushings	8-2
Wheel Bearings	8-3
Grease Fittings	8-3/8-7

MAINTENANCE

Mounting Bolts And Hardware	9-1
Torque Values Chart	9-1
Chain Tension Adjustment	9-1
Finger Pickup Corn Meter Inspection/Adjustment	9-2/9-3
Finger Pickup Corn Meter Cleaning	9-3
Brush-Type Seed Meter Maintenance	9-4/9-5
Gauge Wheel Adjustment	9-6
15" Seed Opener Disc/Bearing Assembly	9-6
Seed Tube Guard	9-7
Row Unit Mounted No Till Coulter	9-7
Electronic Seed Monitor System Troubleshooting	9-8/9-14
Seed Monitor Row Indicator Bulb Replacement (KM1000 Only)	9-14
Seed Monitor Display Backlite Bulb Replacement (KM3000 Only)	9-14
Valve Block Assembly Inspection	9-15
Marker Operation Troubleshooting	9-16
Marker Bearing Lubrication Or Replacement	9-17
Wheel Bearing Lubrication Or Replacement	9-17
Preparation For Storage	9-18
Wiring Diagram	9-18

PARTS LIST INDEX	P1
------------------------	----

PARTS SECTION NUMERICAL INDEX	a
-------------------------------------	---

TO THE OWNER

Kinze Manufacturing, Inc. would like to thank you for your patronage. We appreciate your confidence in KINZE® farm machinery. Your KINZE® planter has been carefully designed and sturdily built to provide dependable operation in return for your investment.

This manual has been prepared to aid you in the operation and maintenance of the planter and should be considered a permanent part of the machine and should remain with the machine when you sell it.

It is the responsibility of the user to read and understand the Operator's Manual in regards to safety, operation, lubrication and maintenance before operation of this equipment. It is the user's responsibility to inspect and service the machine routinely as directed in the Operator's Manual. We have attempted to cover all areas of safety, operation, lubrication and maintenance; however, there may be times when special care must be taken to fit your conditions.

Throughout this manual the symbol  and the words, **NOTE**, **CAUTION**, **WARNING** and **DANGER** are used to call your attention to important safety information. The definition of each of these terms used follows:

NOTE: Indicates a special point of information.

CAUTION: Indicates that a failure to observe can cause damage to the machine or equipment.



WARNING: Indicates that a failure to observe can cause damage to the machine or equipment and/or personal injury.



DANGER: Indicates that a failure to observe can cause most serious damage to the machine or equipment and/or most serious personal injury.



WARNING: Some photos in this manual may show safety covers, shields or lockups removed for visual clarity. **NEVER OPERATE** the machine without all safety covers, shields and lockups in place.

NOTE: Some photos in this manual may have been taken of prototype machines. Production machines may vary in appearance.

NOTE: Some photos and illustrations in this manual show optional attachments installed. Contact your KINZE Dealer for purchase of optional attachments.

WARRANTY

The KINZE Limited Warranty for your new machine is stated on the back of the retail purchaser's copy of the Warranty And Delivery Report form.

Warranty, within the warranty period, is provided as part of KINZE's support program for registered KINZE products which have been operated and maintained as described in this manual. Evidence of equipment abuse or modification beyond original factory specifications will void the warranty. Normal maintenance, service and repair is not covered by KINZE warranty.

To register your KINZE product for warranty, a Warranty And Delivery Report form must be completed by the KINZE Dealer and signed by the retail purchaser, with copies to the Dealer, to the retail purchaser and to KINZE. Registration must be completed and sent to KINZE within 30 days of delivery of the KINZE product to the retail purchaser. KINZE reserves the right to refuse warranty on serial numbered products which have not been properly registered.

Additional copies of the Limited Warranty can be obtained through your KINZE Dealer.

If service or replacement of failed parts which are covered by the Limited Warranty are required, it is the user's responsibility to deliver the machine along with the retail purchaser's copy of the Warranty And Delivery Report to the KINZE Dealer for service. KINZE warranty does not include cost of travel time, mileage, hauling or labor. Any prior arrangement made between the Dealer and the retail purchaser in which the Dealer agrees to absorb all or part of this expense should be considered a courtesy to the retail purchaser.

KINZE warranty does not include cost of travel time, mileage, hauling or labor.

INTRODUCTION

The Model 2000 Pull Type planter is available in various configurations and row spacings. A Double Frame® package option, liquid or dry fertilizer application equipment, and push row units are also available.

GENERAL INFORMATION

The information used in this manual was current at the time of printing. However, due to KINZE's continual attempt to improve its product, production changes may cause your machine to appear slightly different in detail. Kinze Manufacturing, Inc. reserves the right to change specifications or design without notice and without incurring obligation to install the same on machines previously manufactured.


Right hand and left hand as used throughout this manual is determined by facing in the direction the machine will travel when in use unless otherwise stated.

SERIAL NUMBER

The serial number plate is located on the planter frame to be readily available. It is suggested that the serial number and purchase date also be recorded on the first page of this manual.


The serial number provides important information about your planter and may be required to obtain the correct replacement part. Always provide the serial number and model number to your KINZE Dealer when ordering parts or anytime correspondence is made with Kinze Manufacturing, Inc.

59542-51

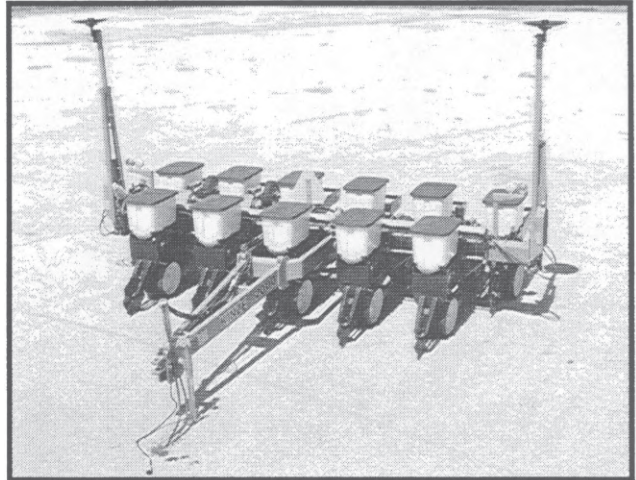


Shown with interplant push units option installed

59542-35

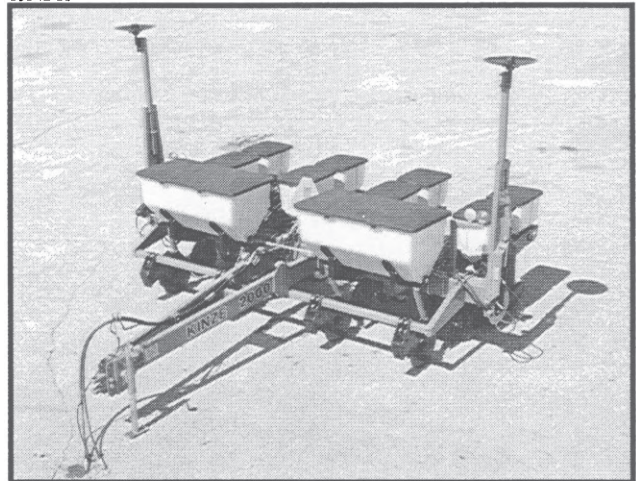

Shown with dry fertilizer option installed

48618-29

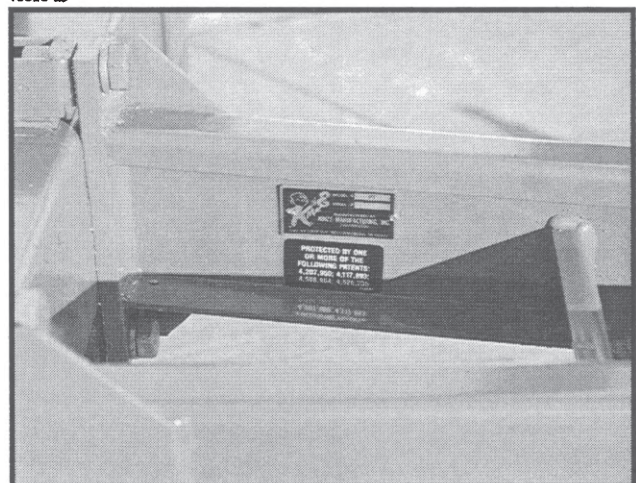

SPECIFICATIONS

TYPE - Pull Type (Rigid Frame)

PLANTING UNIT TYPES - Push and Pull Type Row Units

ROW SPACING	<u>Standard</u>	<u>Interplant</u>
	4 Row Narrow - 30" Rows 4 Row Wide - 36" or 38" Rows 6 Row Narrow - 30" Rows 6 Row Wide - 36" or 38" Rows 8 Row Narrow - 30" Rows 8 Row Wide - 36" or 38" Rows 8 Row Wide - 40" Rows	7 - 15" Rows 7 - 18" or 19" Rows 11 - 15" Rows 11 - 18" or 19" Rows 15 - 15" Rows 15 - 18" or 19" Rows 15 - 20" Rows

DRIVE SYSTEM

4.10" x 6" spring-loaded contact drive tire with No. 40 chain. One on 4 row. Two on 6 and 8 row.
Quick-adjust end mounted seed transmission with machined sprockets.
7/8" hex drive and drill shafts.

TRANSPORT TIRES

7.60" x 15" or 7.50" x 20". Two on 4 row. Four on 6 and 8 row.
Adjustable height wheels for ridge planting.

TYPE LIFT Master/slave hydraulics.
4 Row master/slave rephasing (2 cylinders).
6 and 8 Row master/slave rephasing with assist cylinders (4 cylinders)

MARKERS 4 Row Narrow/Wide and 6 Row Narrow: Heavy duty conventional.
6 Row Wide and 8 Row Narrow/Wide: Low profile two-fold.
(8 row wide utilizes depth band on marker discs.)

HYDRAULICS Single SCV standard. Dual SCV for independent operation of lift and markers optional.
Hydraulic alternating sequence valve with flow controls for markers.

Dimensions/Operating

PLANTER SIZE	4 Row 30"	4 Row 36"/38"	6 Row 30"	6 Row 36"/38"	8 Row 30"	8 Row 36"/38"	8 Row 40"
Width	12' 8"	14' 8"	17' 8"	20' 2"	21' 10"	26' 6"	27' 8"
Single Frame Length	11' 8"	11' 8"	11' 8"	11' 8"	11' 8"	11' 8"	11' 8"
Double Frame® Length	14' 2"	14' 2"	14' 2"	14' 2"	14' 2"	14' 2"	14' 2"
*Single Frame Weight	2025 lbs.	2095 lbs.	3235 lbs.	3485 lbs.	4580 lbs.	4880 lbs.	4915 lbs.
*Double Frame® Weight	2435 lbs.	2543 lbs.	3817 lbs.	4135 lbs.	5314 lbs.	5648 lbs.	5707 lbs.

* Base machine weights include planter frame including row markers, drive components, tires and wheels, hydraulic cylinders and KINZE plateless row units with seed hopper and lid and dual quick adjustable down force springs.

SAFETY PRECAUTIONS

Safe and careful operation of the tractor and planter at all times will contribute significantly to the prevention of accidents.

Since a large portion of farm accidents occur as a result of fatigue or carelessness, safety practices should be of utmost concern. Read and understand the instructions provided in this manual. Listed below are a few other safety suggestions that should become common practice.


 **Never allow the planter to be operated by anyone who is unfamiliar with the operation of all functions of the unit. All operators should read and thoroughly understand the instructions given in this manual prior to moving the unit.**

 **Never permit any persons other than the operator to ride on the tractor.**

 **Never ride on the planter or allow others to do so.**

 **Always make sure there are no persons near the planter when marker assemblies are in operation.**

61111-8

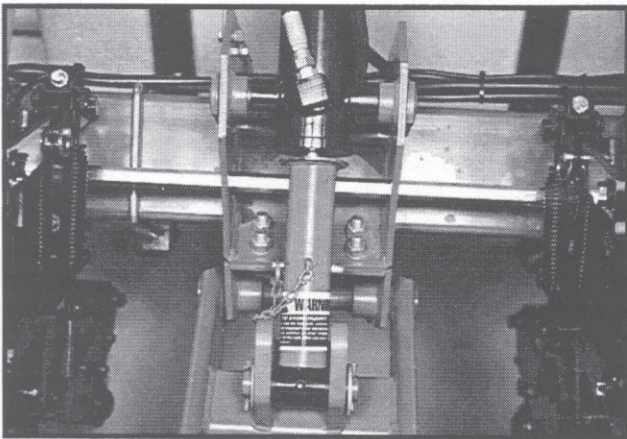

Lift Cylinder Lockup


 **Always install all cylinder lockup brackets before transporting the planter.**

 **Never work under the planter while in raised position without installing cylinder lockup brackets.**

 **Before operating the planter for the first time and periodically thereafter, check to be sure the lug nuts on the transport wheels are tight. This is especially important if the planter is to be transported for a long distance.**

 **Watch for obstructions such as wires, tree limbs, etc., when folding markers.**

46331-89

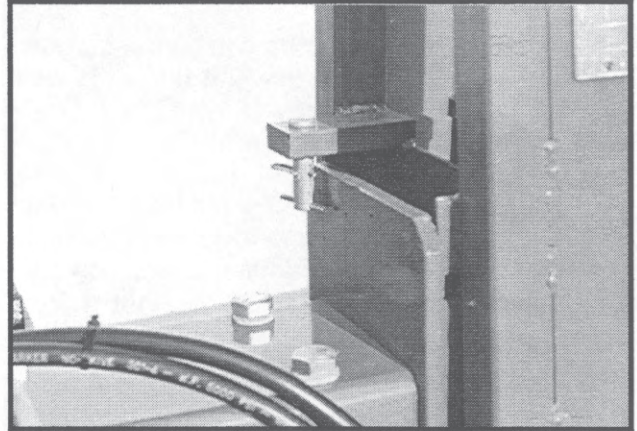

Conventional Marker Lockup

 **Install lockup brackets on markers prior to towing the planter or working around the unit. (Where Applicable)**

 **Limit towing speed to 15 MPH. Tow only with farm tractor of at least 50 HP size.**

 **Always make sure flashing safety lights, reflectors and SMV emblem are in place and visible prior to transporting the machine on public roads. In this regard, check federal, state and local regulations.**

 **Check to be sure all safety warning lights are working before transporting the machine on public roads.**

 **This planter is designed to be DRIVEN BY GROUND TIRES ONLY. The use of hydraulic, electric or PTO drives may create serious safety hazards to you and the people near by. If you install such drives you must follow all appropriate safety standards and practices to protect you and others near this planter from injury.**

SAFETY PRECAUTIONS

 This machine has been designed and built with your safety in mind. Any alteration to the design or construction may create safety hazards. Do not make any alterations or changes to the equipment, but if any alterations or changes are made you must follow all appropriate safety standards and practices to protect you and others near this machine from injury.

 Rim and tire servicing can be dangerous. Explosive separation of a tire and rim parts can cause serious injury or death.


 Agricultural chemicals used with this unit can be dangerous. Improper selection or use can seriously injure persons, animals, plants, soil and other property. **BE SAFE:** Select the right chemical for the job. Handle it with care. Follow the instructions of the chemical manufacturer.

SAFETY WARNING SIGNS


The "WARNING" signs illustrated on this page are placed on the machine to warn of hazards. The warnings found on these signs are for your personal safety and those around you. **OBSERVE THESE WARNINGS!**

- Keep these signs clean so they can be readily observed. Wash with soap and water or cleaning solution as required.
- Replace "WARNING" signs should they become damaged, painted over or if they are missing.
- Check the SMV decal periodically. Replace if it shows loss of any of its reflective property.
- When replacing decals, clean the machine surface thoroughly using soap and water or cleaning solution to remove all dirt and grease.

46331-86

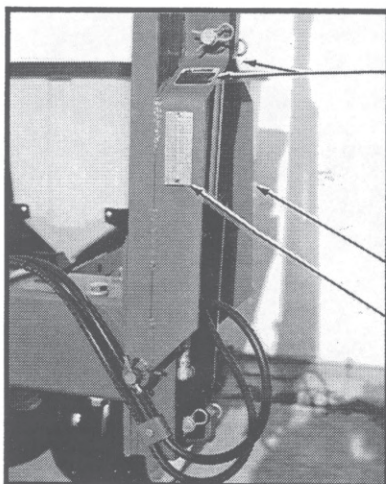


Part No. 7100-42

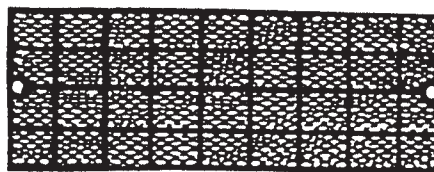

Part No. 7200-03 Red Reflector

Part No. 7200-04 Amber Reflector


61048-5

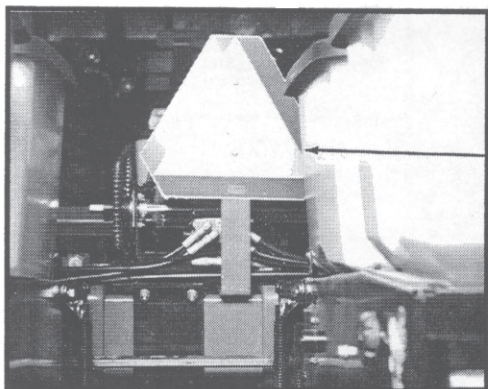

Part No. D2199 SMV Emblem

SAFETY WARNING SIGNS

61010-15

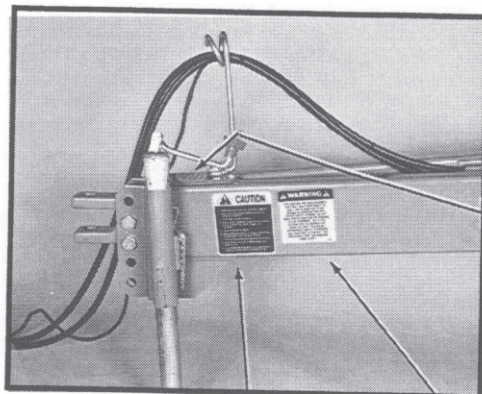

Part No. 7100-56




Part No. 7100-46




Part No. 7100-90

61010-32

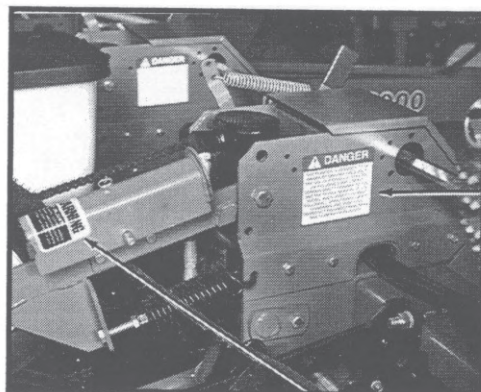


Part No. 7100-89

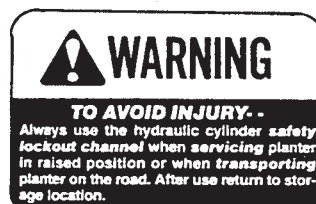

Part No. 7100-47

SAFETY WARNING SIGNS

59386-15

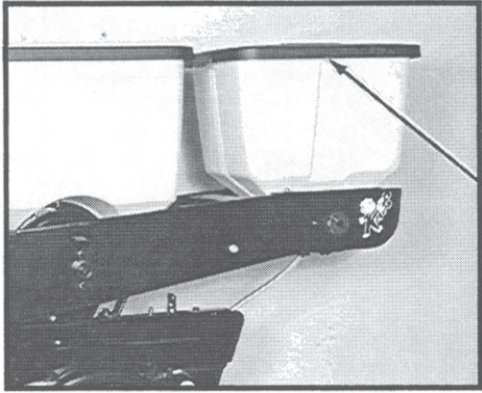

CAUTION

AGRICULTURAL CHEMICALS CAN BE DANGEROUS. IMPROPER SELECTION OR USE CAN SERIOUSLY INJURE PERSONS, ANIMALS, PLANTS, SOIL OR OTHER PROPERTY. **BE SAFE:** SELECT THE RIGHT CHEMICAL FOR THE JOB. HANDLE IT WITH CARE. FOLLOW THE INSTRUCTIONS ON THE CONTAINER LABEL AND OF THE EQUIPMENT MANUFACTURER.

7100-115

Part No. 7100-115
Located on under side of granular
chemical hopper lid.

MACHINE OPERATION

The following information is general in nature and was written to aid the operator in preparation of the tractor and planter for use, and to provide general operating procedures. The operator's experience, familiarity with the machine and the following information should combine for efficient planter operation and good working habits.

INITIAL PREPARATION OF THE PLANTER


Lubricate the planter and row units per the lubrication information in this manual. Make sure all tires have been properly inflated. Check all drive chains for proper tension, alignment and lubrication.

TRACTOR REQUIREMENTS

Consult your dealer for information on horsepower requirements and tractor compatibility. Requirements will vary with planter options, tillage and terrain. One dual remote hydraulic outlet (SCV) is required on models equipped with the standard single valve hydraulic system. Two dual remote hydraulic outlets (SCV) are required on models equipped with the optional dual valve hydraulic system.

TRACTOR PREPARATION AND HOOKUP

61048-31

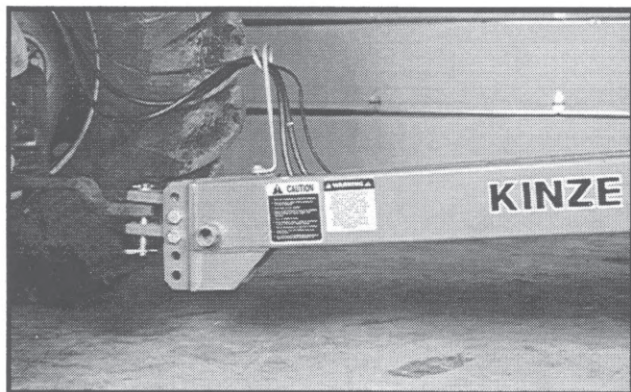

1. Adjust tractor drawbar so it is 13 to 17 inches above the ground. Adjust the drawbar so the hitch pin hole is directly below the center line of the PTO shaft. Make sure the drawbar is in a stationary position.
2. Back tractor to planter and connect with hitch pin. Make sure hitch pin is secured with locking pin or cotter pin.
3. Connect hydraulic hoses to tractor ports in a sequence which is both familiar and comfortable to the operator.



DANGER: Before applying pressure to the hydraulic system, make sure all connections are tight and hoses and fittings have not been damaged. Hydraulic fluid escaping under pressure can have sufficient force to penetrate skin, causing injury or infection.

CAUTION: Always wipe hose ends to remove any dirt before connecting couplers to tractor ports.


4. Raise jack stand and remount horizontally on storage bracket.
5. Lower planter to the planting position and check to be sure planter is level fore and aft. If hitch height is too high or low, disconnect planter and adjust hitch clevis up or down as necessary.

LEVELING THE PLANTER

For proper operation of the planter and row units, it is important that the unit operate level.

Unless the tractor drawbar is adjustable for height, the fore and aft level adjustment must be maintained by the position of the hitch clevis. Holes in the hitch bracket allow the clevis to be raised or lowered. When installing clevis mounting bolt, tighten hex nut to proper torque setting.

61048-50

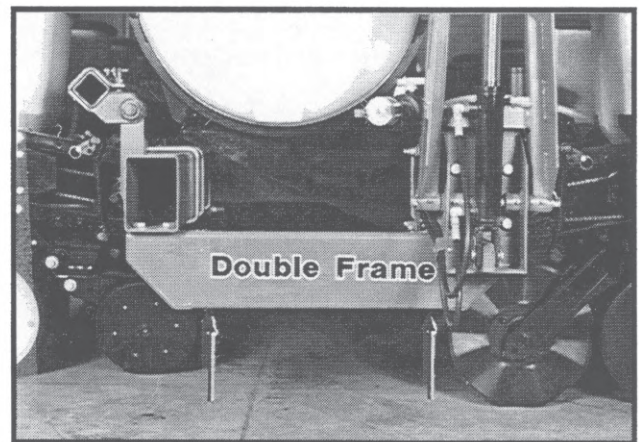


With the planter lowered to proper operating depth, check to be sure the frame is level fore and aft. Recheck once planter is in the field.

It is important for the planter to operate level laterally. Tire pressure must be maintained at pressures specified. See "Tire Pressure".

MACHINE OPERATION


TIRE PRESSURE

61010-9

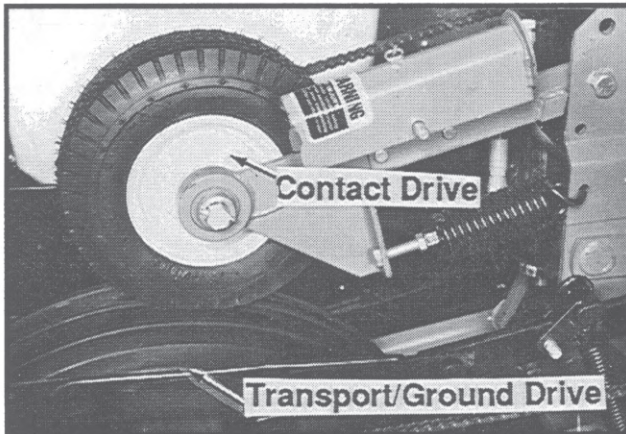

Tire pressure should be checked regularly and maintained as follows:

Transport/Ground Drive 7.60" x 15"	40 PSI
Transport/Ground Drive 7.50" x 20"	40 PSI
Contact Drive 4.10" x 6"	60 PSI

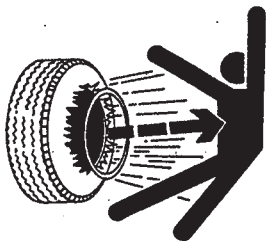

DANGER: Rim and tire servicing can be dangerous. Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job. This should only be done by persons properly trained and equipped to do the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure.

When inflating tires, use a clip-on air chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage to enclose the tire and rim assembly when inflating.

Inspect tires and wheels daily. Do not operate with low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts


TRANSMISSION ADJUSTMENT

Planting population rate changes are made at the end mounted transmission. The planter is designed to allow simple, rapid changes in sprockets to obtain the desired planting population. By removing the lynch pins on the hexagon shafts, sprockets can be interchanged with those from the sprocket storage rod bolted to the transmission.

Chain tension is controlled by a spring-loaded dual-sprocket idler. The idler assembly is adjusted with a ratchet arm. This arm has a release position to remove spring tension for replacing sprockets. The amount of spring tension on the chain can be controlled by the ratchet arm.

The planting rate charts found at the back of this section will aid you in selecting the correct sprocket combinations.


61010-28

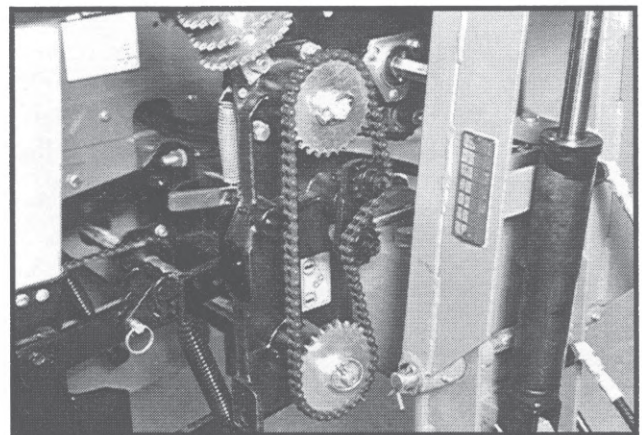

MACHINE OPERATION

2 TO 1 DRIVE REDUCTION

48496-46

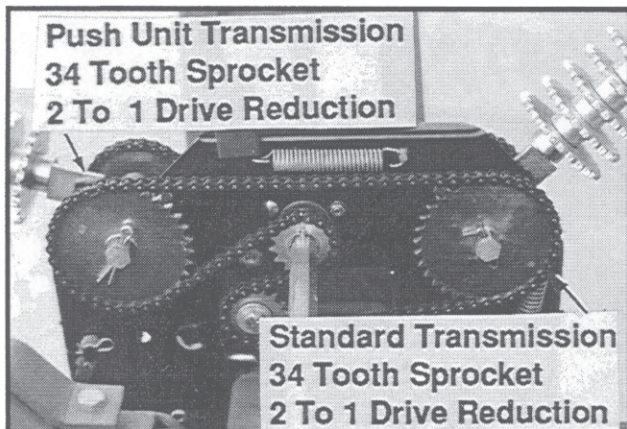

Replacing the 17 tooth drive sprocket located on the inner side of the top transmission shaft, with the 34 tooth 2 to 1 drive reduction sprocket will reduce the planter transmission speed and reduce planting rates by 1/2.


IMPORTANT: After each sprocket combination adjustment, make a field check to be sure you are planting at the desired rate.

CONTACT DRIVE WHEEL SPRING ADJUSTMENT


There are two down pressure springs on each contact drive wheel. The down pressure is factory preset and should need no further adjustment.

The spring tension is set leaving 2 1/4" between the spring plug and the bolt head.

61010-9

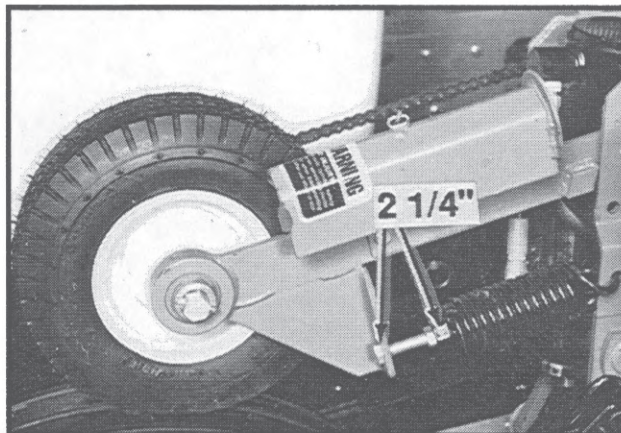

61010-9

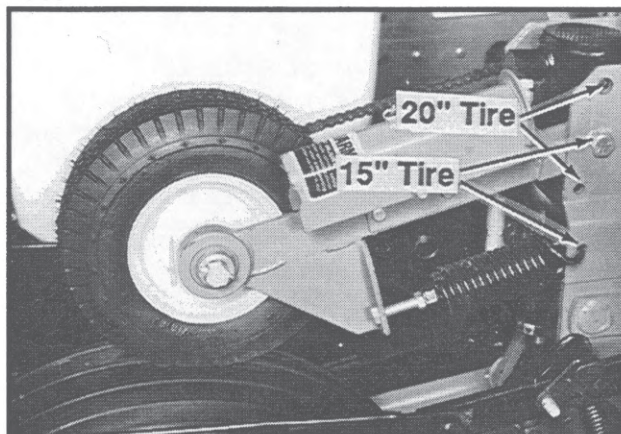

On planters equipped with 15" transport tires, the contact drive wheel arms and down pressure springs are attached to the wheel module mount using the lower set of mounting holes. On planters equipped with 20" transport tires, the contact drive wheel arms and down pressure springs are attached to the wheel module mount using the upper set of mounting holes.


15" tires are mounted using the lower forward holes in the ground drive wheel arm. 20" tires are mounted using the upper holes in the ground drive-wheel arm.

MACHINE OPERATION

TIRE SCRAPER

Due to the clearance between the wheel assembly and the transport tire when a planter is equipped with the 20" transport tire, a tire scraper should always be used. This will prevent a buildup of dirt/mud between the wheel arm assembly and the tire. Adjust the scraper so it does not contact the tire.

54813-48

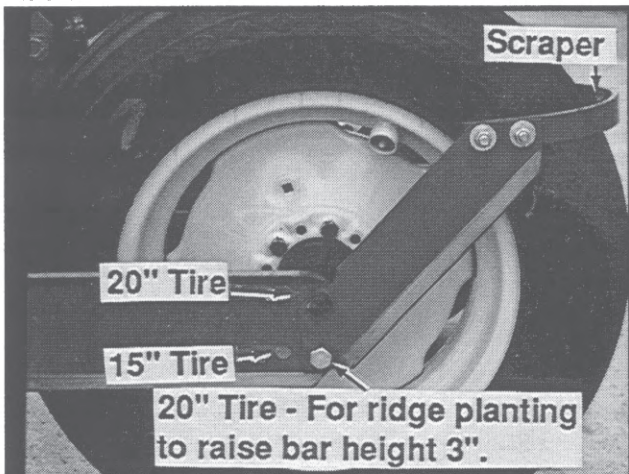


RIDGE PLANTING

For ridge planting to raise the bar height 3", mount the 20" tires in the lower rear holes in the ground drive wheel arm. Mount the contact drive wheel arm and springs in the lower set of mounting holes in the wheel module mount and raise the hitch height to maintain fore and aft levelness.

SHEAR PROTECTION


The planter drive line and row unit components are protected from damage by shear pins.

61658-27

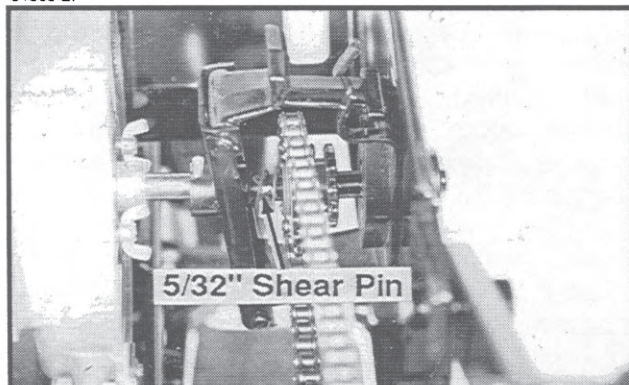


Row unit seed meter drive

61048-42

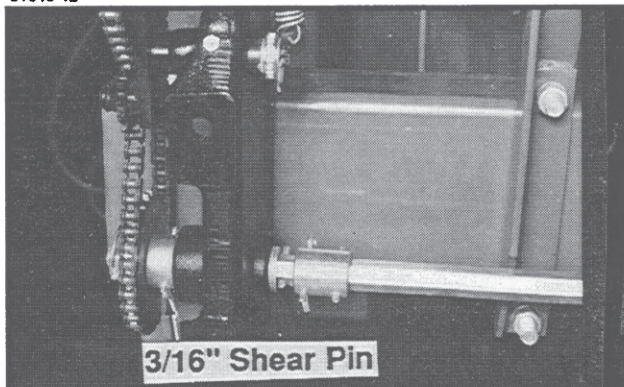

Transmission shaft

61111-5

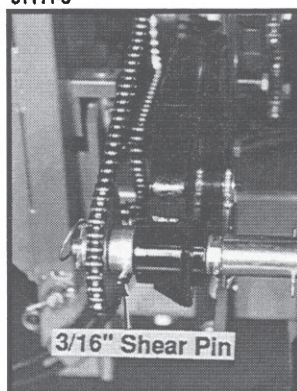

Dry fertilizer drive line


61111-33



Liquid Fertilizer drive line

If excessive load should cause a pin to shear, it is important to determine where binding has occurred before replacing the pin. Turn the shaft by hand, checking for misalignment and for the possibility of seized parts. When the shaft can be turned by hand (with the aid of a wrench) replace shear pins with same size and type. To prevent future binding or breakage of components, check drive line alignment and follow prescribed lubrication schedules.

61010-1

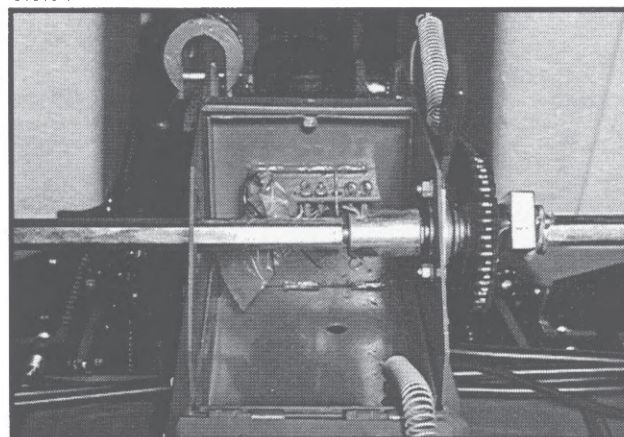

Additional shear pins can be found in the storage area located on the wheel module.

MACHINE OPERATION

HYDRAULIC MARKER OPERATION

2000 Planters are equipped with a single valve hydraulic system or an optional dual valve hydraulic system. The single valve system requires the planter to be raised in order to lift the markers. Each time the planter is lowered, the markers will alternately be lowered. If the planter is raised to cross a waterway, the opposite marker will be lowered when the planter is lowered back into the ground. Therefore, it will be necessary to stop and again raise and lower the planter to restore correct marker operation.

If planting in this type of situation, dual valve hydraulics are highly recommended. The optional dual hydraulic system allows the markers to be operated independently of the planter lift cylinders. Each time a marker is raised, the sequencing valve will direct flow to lower the opposite marker.

Both markers can be used at the same time if desired. To do this, lower the planter and the marker that has been selected. Move the tractor control lever to the raise position and immediately return it to the lower position. This will shift the marker control valve and the remaining marker will be lowered. This is useful in planting contours and terraces.



WARNING: Always stand clear of the marker assemblies and blades when planter is in operation.

HYDRAULIC PLANTER LIFT OPERATION

The planter lift system consists of a master cylinder on one side of the planter and a slave cylinder on the other side of the planter. On 6 row and larger models, lift assist cylinders are also used.

With the master/slave hydraulic lift system, oil is forced into the butt end of the master and lift assist cylinders when the the hydraulic lever on the tractor is moved to the raise position. As the master cylinder is extended, oil from the rod end of the master cylinder is forced into the butt end of the slave cylinder. This displacement on the rod end of the master cylinder is equal to the displacement on the butt end of the slave cylinder. This causes the two cylinders to move at the same rate so the planter will raise and lower evenly.

IMPORTANT: The planter lift cylinders may get out of phase and the planter will lift unevenly. On each master cylinder and each slave cylinder a valve located in the piston in the cylinder allows the lift system to be rephased when the cylinders are cycled by lowering the planter to the ground and holding the hydraulic lever for 5 seconds. Cycle the system until the planter lifts and lowers evenly.




WARNING: Always position lockups in "safety" position when transporting or storing planter. See "Safety Precautions".

MACHINE OPERATION

MARKER SPEED ADJUSTMENT

The marker hydraulic system has two flow control valves. One flow control valve controls the lowering speed of both markers and one controls the raising speed of both markers. To adjust marker speed, loosen the jam nut and turn the control clockwise or IN to slow the travel speed and counterclockwise or OUT to increase the travel speed. The adjusting bolt determines the amount of oil flow restriction through the valve, therefore determining travel speed of the markers.

54813-30

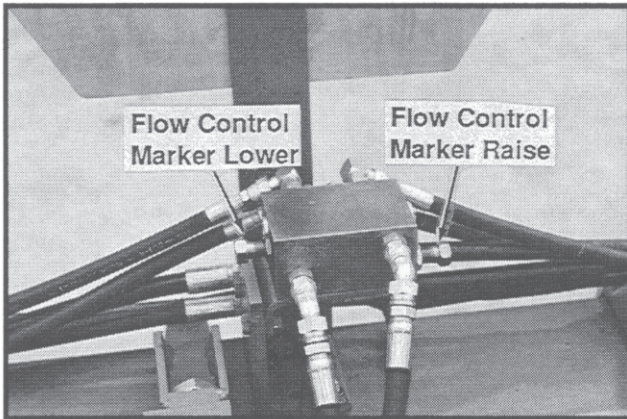

⚠ DANGER: The flow controls should be properly adjusted before the marker assembly is first put into use. Excessive travel speed of the markers can be dangerous and/or damage the marker assembly.

NOTE: When oil is cold, hydraulics operate slowly. Make sure all adjustments are made with warm oil.

NOTE: On a tractor where the oil flow can not be controlled, the rate of flow of oil from the tractor may be greater than the rate at which the marker cylinder can accept it. The tractor hydraulic control lever will have to be held until the cylinder reaches the end of its stroke. This occurs most often on tractors with an open center hydraulic system.

On tractors with a closed center hydraulic system, the tractor's hydraulic flow control can be set so the tractor's detent will function properly.


MARKER ADJUSTMENT

To determine the correct length at which to set the marker assemblies, multiply the number of rows by the average row spacing in inches. This provides the total planting width. Adjust the marker extension so the distance from the marker blade to the center line of the planter is equal to the total planting width previously obtained. Both the planter and marker assembly should be lowered to the ground when measurements are being taken. The measurement should be taken from the point where the blade contacts the ground. Adjust right and left marker assemblies equally and securely tighten clamping bolts. An example of marker length adjustment follows:

Number of rows	X	Row spacing (Inches)	=	Dimension between planter center line and marker blade.
-------------------	---	----------------------------	---	--

8 Rows X 30" Spacing = 240" Marker Dimension

60569-53

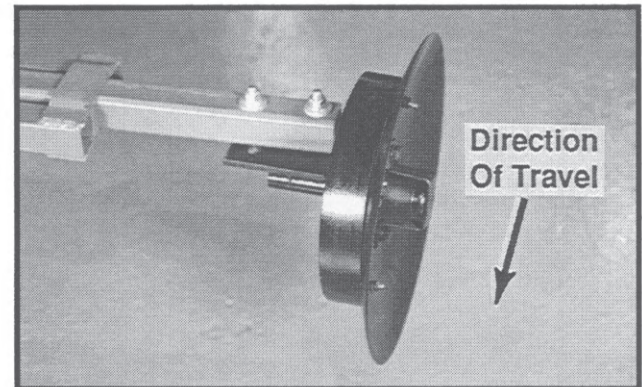

Marker blade shown with depth band.
(Standard on 8 row wide - up.)

The marker blade is installed so the concave side of the blade is outward to throw dirt away from the grease seals. The spindle bracket is slotted so the hub and blade can be angled to throw more or less dirt. To adjust the hub and spindle, loosen the 1/2" x 3 1/2" cap screws and move the bracket as required. Tighten bolts to the specified torque.

IMPORTANT: A marker blade assembly that is set at a sharper angle than necessary will add unnecessary stress to the complete marker assembly and shorten the life of bearings and blades. Set the blade angle only as needed to leave a clear mark.

A field test is recommended to ensure the markers are properly adjusted. After the field test is made, make any minor adjustments necessary.


MACHINE OPERATION

ELECTRONIC SEED MONITOR SYSTEM

The electronic seed monitor system consists of a console, which is mounted on the tractor; seed tubes with sensors, one of which is installed in each planter row unit; and a planter harness (harness, Y-connector and/or extension cable where applicable), which connects the individual seed tube sensors to the console.

The monitor is powered by the tractor battery (requires 12 volts DC).

KM1000 MONITOR

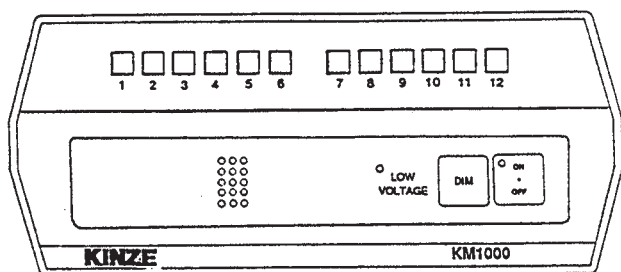

The console receives information from each of the sensors and translates this information for the operator, to let him know whether or not all rows are planting.

Turn the console ON by pressing the ON-OFF switch.

Each time the console is powered up it performs a sensor check and self-check. All row indicator lamps are turned on, the alarm sounds momentarily and then the console enters the operate mode. If a row indicator lamp does not come on when the console is powered up, it indicates that a problem exists with either the sensor, planter harness or a burned out row indicator lamp. See Troubleshooting in the Maintenance Section of this manual.

Begin planting and observe the row indicator lamps. All indicator lamps should be flashing at approximately the same rate. If one of the row lamps is flashing at a slower rate than the others it would indicate that row is planting at a slower rate and it should be checked for proper seed population.

The monitor continuously checks for seed flow while planting, as indicated by the flashing row indicator lamps on the console. If any planter unit seed sensor is not detecting seeds, the alarm will sound continuously and the row indicator lamp corresponding to the planter row unit will stop flashing. When this happens, stop planting and check to see what is wrong with the row unit.

When you lift your planter at the end of a row and seed flow stops in all planter units, the alarm will sound and all row indicator lamps will stop flashing. After approximately 2-4 seconds the alarm will stop sounding.

The intensity of the Row Indicator Lamps can be controlled by pressing and holding the switch labeled DIM. To set the intensity, press and hold the DIM switch until the lamps are at the desired intensity, release the switch. Holding the DIM switch will cause the intensity to decrease to its lowest level and then increase to its maximum level. This cycle will continue as long as the switch is depressed. When the console is turned OFF and then ON the row lamp intensity will return to maximum.

If you are only using a portion of the number of rows on your planter, the alarm can be silenced by disconnecting the seed sensors of the unused rows and turning the monitor OFF then back ON. The monitor will then ignore these unused rows and monitor the other rows normally.

When disabling planter rows, the monitor may look at the system as a different planter setup. Example, if you have an 8 row planter and you disable the right four rows (for planting point rows, etc.) by unplugging the seed sensors and turning the monitor OFF and back to ON, the monitor will look at it as a 4 row planter and shift the row indicator lamps to the center four positions. Therefore, planter row 1 will be indicated on the monitor as row 3, planter row 2 as row 4, etc. Row lamps 1, 2, 7 and 8 will be off.

If you disable the left four rows (planter rows 1, 2, 3 and 4) the monitor will operate normally as an 8 row system. Row indicators 1, 2, 3 and 4 will be off.

MACHINE OPERATION

3/91

KM1000 Bezel Decal Selection Chart

NO. ROWS	BEZEL DECAL	ROW LAMPS
4	12	 1 2 3 4 5 6 7 8 9 10 11 12
6	6	 1 2 3 4 5 6
8	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
*8	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
12	12	 1 2 3 4 5 6 7 8 9 10 11 12
*12	12	 1 2 3 4 5 6 7 8 9 10 11 12
16	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
*4 & 3 Solid Interplant	12	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
*6 & 3 Skip Row Interplant	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
*6 & 5 Solid Interplant	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
*8 & 5 Skip Row Interplant	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
*8 & 7 Solid Interplant	16	 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

 Row lamp indicates planter row in use.

 Row lamp not used.


* With "Y" connector.

NOTE: Interplant diagrams assume that first interplant row is connected to row 1 of harness and harness is connected to R.H. half of "Y" connector.

MACHINE OPERATION

KM3000 MONITOR

D-0841-0001

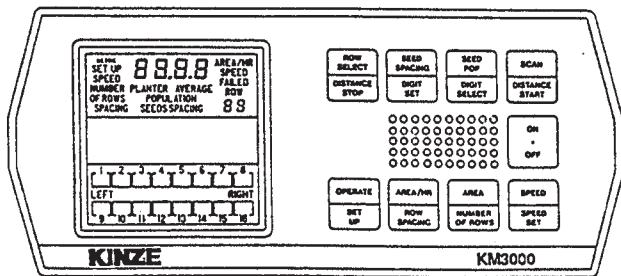

The KM3000 console may be equipped with one of two optional distance sensor features, a radar sensor which is mounted on the tractor or a pulse wheel (magnetic distance sensor) which is installed on the planter drive.

The operator's controls on the front panel of the console consist of nine pressure sensitive switches. Eight of the nine switches are dual function switches, performing one function during the OPERATE MODE and another function during the SET UP MODE. All switch functions are color coded to define between the OPERATE and SET UP modes. The upper half of each dual function switch is olive brown in color and contains the Operate functions. The lower half of each dual function switch is tan in color and contains the Set Up functions.

Turn console ON by pressing the ON-OFF switch. Note that the upper display shows random segments for a short time then sequences through all entered SET UP constants (SPEED, NUMBER OF ROWS and ROW SPACING). If the constants are not valid the alarm will sound for approximately four seconds and the monitor will enter the SET UP mode. See "Entering Constants". If all constants are valid (as previously entered) the alarm will sound momentarily and the monitor will enter the OPERATE mode.

Select the desired OPERATE function to be displayed by pressing the labelled switch.

SEED POP displays the seed population of each planter row in thousands of seeds per acre or hectare. In the SCAN mode the display will sequence through all planter rows. After the population for the highest planter row number is displayed, the average population for the total planter is shown. In the ROW SELECT mode a specific row can be selected and continuously monitored.

SEED SPACING displays the seed spacing of each planter row in inches or centimeters. In the SCAN mode the display will sequence through all planter rows. After the seed spacing for the highest planter row number is displayed, the average seed spacing for the total planter is shown. In the ROW SELECT mode a specific row can be selected and continuously monitored.

AREA/HR displays the predicted area in acres or hectares that will be covered in the next hour if the same planting rate is maintained. This prediction is based on the last 10 seconds of operation.

AREA displays the actual area covered in acres or hectares since the last reset. To reset area to 0000, press and hold the AREA switch for approximately 5 seconds.

SPEED displays current vehicle ground speed in MPH or KMPH.

A row failure will be indicated by the FAILED ROW number being displayed in the lower right hand corner of the upper display, the corresponding segment in the lower display will be blank, and the alarm will sound continuously. Failures of more than one row will be indicated by the FAILED ROW number in the upper display sequencing through all failed rows, the corresponding segments of all failed rows in the lower display will be blank, and the alarm will sound continuously. When you lift your planter at the end of a row or stop in the field and seed flow stops in all planter units, the alarm will sound for approximately four seconds and all row indicator segments (lower display) will stop flashing. The upper display will show the FAILED ROW message and will sequence through all planter row numbers.

In the all row failure mode or immediately following power up, the operate functions (population, seed spacing and area) can be displayed by pressing the touch switch labeled with the desired function. This display condition will remain for one minute after the last time a switch is pressed or until seeds are detected by the seed sensors.

MACHINE OPERATION

A ground speed failure will be indicated by the SPEED FAILED message being displayed in the upper display. To continue using the monitor system until a replacement ground speed sensor is obtained, disconnect the ground speed sensor cable, enter the SET UP mode and enter your normal planting speed in MPH or KmPH in place of the SPEED SET calibration number. **IMPORTANT:** The accuracy of the POPULATION, SEED SPACING and AREA readouts will depend on the vehicle ground speed. If you do not drive at the speed entered in SPEED SET memory these functions will not be accurate. AREA will not accumulate in this mode.

IMPORTANT: Under normal use the monitor will accumulate area whenever there is seed flow in at least one seed sensor. In the all rows failed condition, such as when turning around at the end of the field, the area accumulation will stop.

The monitor can be used to count seeds in a selected row by performing the following:

1. Place console in SET UP mode. (Before performing Step 2 make sure you have recorded the SPEED constant.)
2. Set the SPEED constant to 0000. This can be done by manually setting each digit to zero using the DIGIT SELECT and DIGIT SET switches or by pressing and holding the SPEED SET switch for approximately 5 seconds.
3. Enter the OPERATE mode by pressing the OPERATE switch.
4. Press and release the ROW SELECT switch until the desired planter row number is displayed in the lower right corner of the upper display. The monitor will now show seed counts for the selected row.

To reset the display to zero and continue to monitor the same row unit, press the SCAN switch then the ROW SELECT.

To select another row unit, press the ROW SELECT switch until the desired planter row number is displayed. Each time the ROW SELECT switch is pressed the row number will be incremented one unit and the four digit display will be reset to zero.

IMPORTANT: To return to normal operation, enter the SET UP mode and re-enter the SPEED constant.

NOTE: The KM3000 is shipped from the factory setup for use with American measures. To convert the console to Metric measures, cut the wire loop (red wire) adjacent to the signal cable on the back of the console and tape the ends of the cut wire to prevent the two ends making contact with each other or the vehicle.

LOWER DISPLAY

The lower visual display contains up to sixteen segments and each one corresponds to a planter row unit. When the monitor is turned on the console senses the number of seed sensors connected to the planter harness and activates a segment for each one which flashes dark each time a seed is detected by the seed sensor. If up to 16 seed sensors are sensed the display will show segments for all sensors all the time. If more than 16 (17-32) seed sensors are sensed, then the display is split and up to 16 sensors are shown for the LEFT and RIGHT side of the planter.

EXAMPLE: If a 24 row planter is being used and the display message LEFT is on, the segments are showing seed flow for planter rows 1 through 12. When the display message RIGHT is on, the segments are showing seed flow for planter rows 13 through 24. When the RIGHT planter half is shown, the segment numbers 1 through 12 will represent planter rows 13 through 24 (segment 1 is planter row 13, segment 2 is row 14, up to segment 12 which is row 24).

ENTERING CONSTANTS (KM3000 Only)

Upon initial power-up or whenever memory is lost the following three constants must be entered before the system will enter the "operate" mode. The following examples are for an 8 row planter with 30" row spacing.

1. ROW SPACING - The distance between the rows on your planter.

Press the "row spacing" switch. The upper display will show "set up", "row spacing" and "000.0".

Press the "digit select" switch (a short alarm burst will be heard each time the switch activates) until the second "0" to the left of the decimal point is flashing. Press the "digit set" switch until a "3" is shown in this location: 030.0.

NOTE: Holding the "digit set" switch will cause the digit to increment from 0 through 9.

NOTE: If you have a solid row planter of 15", 18", 19", 30", 36" or 38" row spacing, program that number in for row spacing. If you have a skip row planter, determine row spacing by taking the total distance between the two outside rows (in inches) and divide by the number of planter rows minus 1.

MACHINE OPERATION

EXAMPLE: 8 row 30" planter with 13 row 15" skip row interplant

Step 1. Total distance between center of outside row on left end of planter to center of outside row on right end of planter = 210"

Step 2. 13 rows (number of total rows) minus 1 = 12

Step 3. $210" \div 12 = 17.5"$ average row spacing

Step 4. Program 17.5 (round to closest tenth acre)

2. NUMBER OF ROWS - The number of active rows on your planter. (Example for 8 row planter)

Press the "number of rows" switch. The upper display will show "set up", number of rows" and "00".

Press the "digit set" switch until the right hand "0" is flashing.

Press the "digit set" switch until a 8 is shown in this location: 08.

3. SPEED - A number that is the result of the speed calibration procedure. Used with both radar and magnetic distance sensors.

The speed set calibration number matches the console to the ground speed sensor when calibrated over a specified measured distance. When the calibration procedure is completed and the speed set constant established, the value should be written down and retained in the event battery voltage is removed from the console and the information in memory is lost. In this event, the constant may be re-entered manually using the "digit select" and "digit set" switches. The speed set calibration procedure must be repeated and new speed set number established if the radar or magnetic distance sensor mounting is changed for any reason.

NOTE: When obtaining the following speed set number, actual in-field conditions should be simulated as close as possible.

A. Measure an accurate 400 foot (150 meter) in-field course, preferably on level ground. Mark the "start" and "finish" of the course so it will be plainly visible from the cab as you drive past.

B. With the upper display showing messages "set up" and "speed" and the four digit display showing all zero's (to reset four digit display to zero's, press and hold the "speed set" switch for approximately 5 seconds), drive up to the marked course at normal planting speed.

C. When even with the "start" marker, press the "distance start" switch. Four dashes will appear on the console display.

D. Drive at a steady speed through the entire course. When even with the "finish" marker, press the "distance stop" switch.

E. The speed set number will be displayed. Record this number for future reference.

SPEED SET NUMBER _____

IMPORTANT: This procedure may have to be repeated after performing the Radar Vibration Test. See Radar Vibration Test.

NOTE: The accuracy of the area computations, population, seed spacing and vehicle ground speed readout are dependent upon the accuracy of the operator entered constants. Use care when determining the constants which describe your planter.

RADAR VIBRATION TEST (KM3000 With Radar Sensor Only)

To check for vibration, start vehicle engine and slowly increase engine RPM (while watching the ground speed readout) to approximately 1800 RPM. If the ground speed readings are above zero, the radar sensor must be mounted in an alternate, more stable location.

INTERPLANT ROWS

The half of the "Y" connector marked row 1 is used for the main rows on the planter and the other half for interplant rows. When interplant rows are not being used, switch the console to the OFF position and disconnect the interplant rows at the "Y" connector. Switch the console back ON. It will be necessary to reprogram "row spacing" and "number of rows" on the KM3000 console.

To activate the interplant rows, switch the console to the OFF position and reconnect the interplant rows at the "Y" connector. Switch the console ON. Reprogram "row spacing" and "number of rows" on the KM3000 console.

MACHINE OPERATION

TRANSPORTING THE PLANTER



WARNING: Always make sure flashing safety lights, reflectors and SMV emblem are in place and visible prior to transporting the machine on public roads. In this regard, check federal, state and local regulations.



WARNING: Always install lockups on lift cylinders.

TRACTOR SPEED

Planters are designed to operate within a speed range of 2 to 8 MPH. Variations in ground speed will produce variations in rates. Corn meter populations will tend to be disproportionately higher at high ground speeds.

METRIC CONVERSION TABLE

Multiply	By	To Get
Inches (in.)	x 2.54	= centimeters (cm)
Inches (in.)	x 25.4	= millimeters (mm)
Feet (ft.)	x 30.48	= centimeters (cm)
Acres	x 0.405	= hectares (ha)
Miles per hour (mph)	x 1.609	= kilometers per hour (kmph)
Pounds (lbs.)	x 0.453	= kilograms (kg)
Bushels (bu.)	x 35.238	= liters (l)
Gallons (gal.)	x 3.785	= liters (l)
Pounds per square inch (psi)	x 6.894	= kilopascals (kPa) (100 kPa = 1 bar)
Inch pounds (in. lbs.)	x 0.113	= newtons-meters (N•m)
Foot pounds (ft. lbs.)	x 1.356	= newtons-meters (N•m)
Centimeters (cm)	x .394	= inches (in.)
Millimeters (mm)	x .0394	= inches (in.)
Centimeters (cm)	x .0328	= feet (ft.)
Hectares (ha)	x 2.469	= acres
Kilometers per hour (kmph)	x 0.621	= miles per hour (mph)
Kilograms (kg)	x 2.208	= pounds (lbs.)
Liters (l)	x 0.028	= bushels (bu.)
Liters (l)	x 0.264	= gallons (gal.)
Kilopascals (kPa) (100 kPa = 1 bar)	x 0.145	= pounds per square inch (psi)
Newtons-meters (N•m)	x 8.85	= inch pounds (in. lbs.)
Newtons-meters (N•m)	x 0.738	= foot pounds (ft. lbs.)

FIELD TEST

With any change of field and/or planting conditions or seed size, we recommend a field test be made to ensure proper seed placement and operation of row units. See "Rate Charts", "Checking Seed Population", and "Checking Granular Chemical Application Rate" at end of this section.

☐ Check the planter for fore and aft and lateral level operation. See "Leveling The Planter".

☐ Check all row units to be certain they are running level. When planting, the row unit parallel arms should be parallel to the ground.

☐ Check row markers for proper operation and adjustment. See "Marker Adjustment" and "Marker Speed Adjustment".

☐ Check for proper application rates and placement of granular chemicals on all rows. See "Checking Chemical Application Rates".

☐ Check for desired depth placement and seed population on all rows. See "Checking Seed Population".

☐ Check for proper application rates of fertilizer on all rows. See proper "Fertilizer Application Rate Chart".

After the planter has been field tested, reinspect the machine.

☐ Hoses and fittings

☐ Bolts and nuts

☐ Cotter pins and spring pins

☐ Drive chain alignment

MACHINE OPERATION

DOUBLE DISC FERTILIZER OPENER


The double disc fertilizer openers should be positioned during assembly to place the fertilizer no closer than 2" to either side of the row. If planter frame is level and at proper planting height, fertilizer depth will be approximately 4". Soil conditions can affect depth slightly.

The down pressure spring is factory preset at 250 pounds down pressure but may be adjusted for various soil conditions. To adjust spring tension, loosen the jam nut with 15/16" wrench and use a 1" wrench to turn the adjustment bolt clockwise to increase tension or counter-clockwise to decrease tension. Securely tighten the jam nut upon completion of tension adjustment. Do not attempt to set opener depth with spring pressure. The opener is designed to operate against depth stop and spring up when encountering a foreign object or hard ground.

CAUTION: Do not operate the double disc openers at full down pressure tension when planting in rocky ground. Chipping of the blades will occur.

A gap of 1/32" to 1/16" should be maintained between the opener blades at the closest point. Blade adjustment can be made by moving inside spacer washers to the outer side of the blade. After making this adjustment, check to be sure bearing assembly rivets are not hitting shank.

60389-23

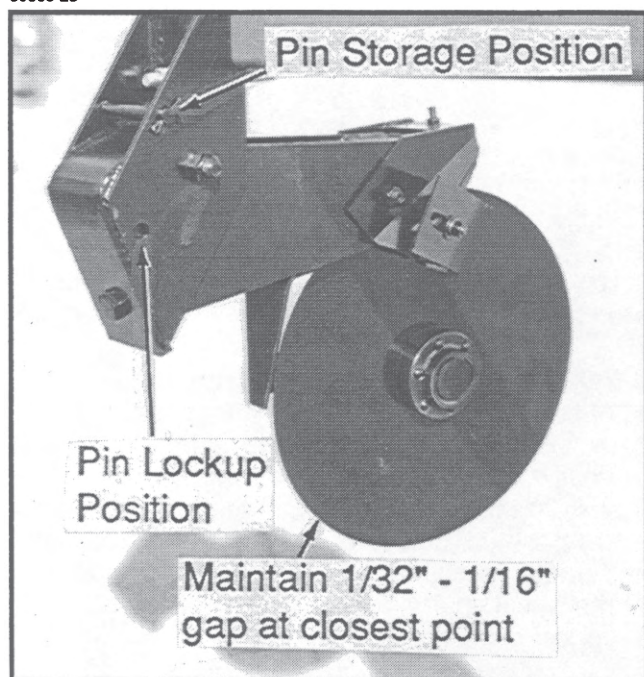

The outer scrapers on each blade may also be adjusted to make up for wear that may occur. Make sure the scraper is adjusted to allow only slight contact with the blade.

The opener assembly is designed to be locked in a raised position when the fertilizer attachment is not in use or during storage. To lock the opener, first raise the planter and place blocks under the openers. Then lower the planter until the hole in the pivot section aligns with the hole in the mounting bracket. Remove the lockup pin from the storage position in the mounting bracket and install it through the lockup hole and secure with cotter pins.




DANGER: Always install all cylinder lockup brackets before working under the unit.

MACHINE OPERATION

SINGLE DISC FERTILIZER OPENER

60389-49

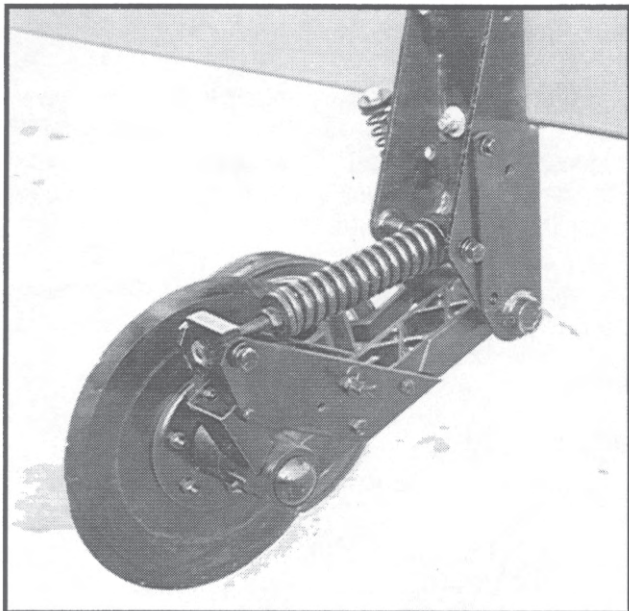

Placement of fertilizer with the single disc fertilizer opener is recommended at 3 1/2" - 4" from the row. **Never locate the opener to place fertilizer closer than 3".** With the single disc fertilizer opener mount located centered ahead of the row unit and the rear of the blade angled away from the row, the opener will place the fertilizer 3 1/2" beside the row.


If planter frame is level and at approximately 20" planting height, maximum blade depth for placement of fertilizer is approximately 5". Soil conditions can affect depth slightly.

To adjust blade depth, raise planter to remove weight from the fertilizer opener. Loosen inside adjustment nut (A) with 1 1/8" wrench. Turn outside nut (B) clockwise to decrease blade depth or counterclockwise to increase blade depth. One full turn of blade depth adjustment nuts changes blade depth 3/8". Tighten inside nut tight against block (C). Adjust all fertilizer openers to the same depth.

L0114

(Overhead View)

Direction Of Travel

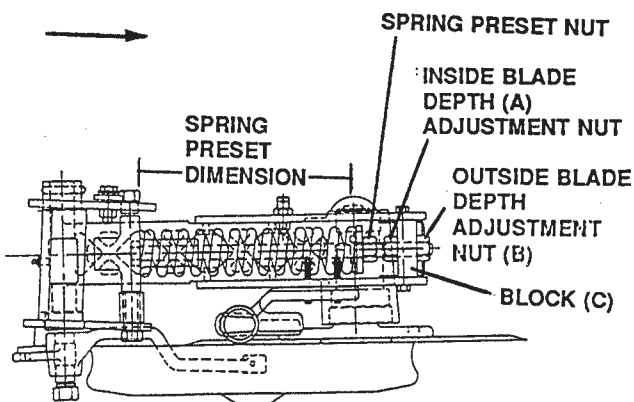

R.H. Configuration Shown

Fertilizer opener down pressure can be adjusted from 250 pounds to 640 pounds. **To make down pressure adjustments,** raise planter to remove weight from the fertilizer opener and turn spring preset nut clockwise to increase down pressure and counterclockwise to decrease down pressure. Adjust all rows to a similar setting. Minimal spring pressure for acceptable operation is recommended. See chart for setting spring length specifications.

SPRING PRESET DIMENSION	DOWN PRESSURE
11"	250 Pounds
10 3/4"	320 Pounds
*10 1/2"	370 Pounds
10 1/4"	450 Pounds
10"	520 Pounds
9 3/4"	580 Pounds
9 1/2"	640 Pounds

* Suggested initial setting.

CAUTION: DO NOT adjust spring preset dimension to less than 9 1/2"

IMPORTANT: Excessive down pressure can cause up-lift on the planter frame and affect performance of the machine. When lowered to planting position, planter frame should be at a height of approximately 20". In loose ground conditions, excessive down pressure can cause openers to run too deep and push dirt ahead of opener and may stop soil press wheel and/or opener blade from turning.




DANGER: Always install all lockup brackets before working under the machine.

MACHINE OPERATION

CAUTION: Do not operate the single disc openers at full down pressure tension when planting in rocky ground. Chipping or breakage of the blade will occur.


The spring loaded scraper should be adjusted periodically to maintain 1/8" between drop tube and opener blade. If this dimension is not maintained the fertilizer may not drop into the proper location.

60607-32

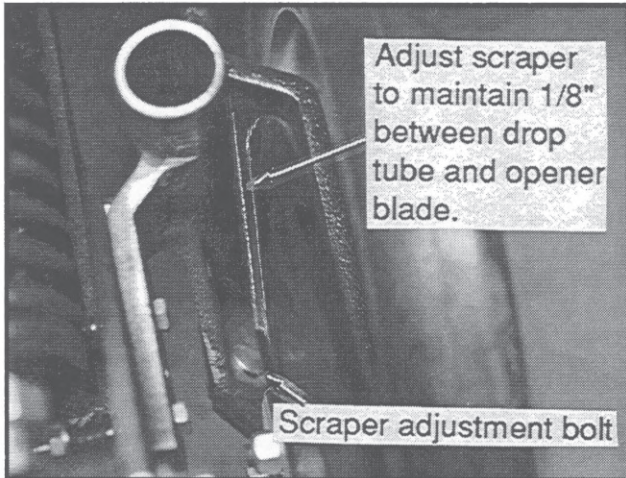

Additional press wheel down pressure may be desirable in heavy moist soils. **To increase press wheel spring pressure** turn press wheel spring adjustment bolt clockwise.

60389-63

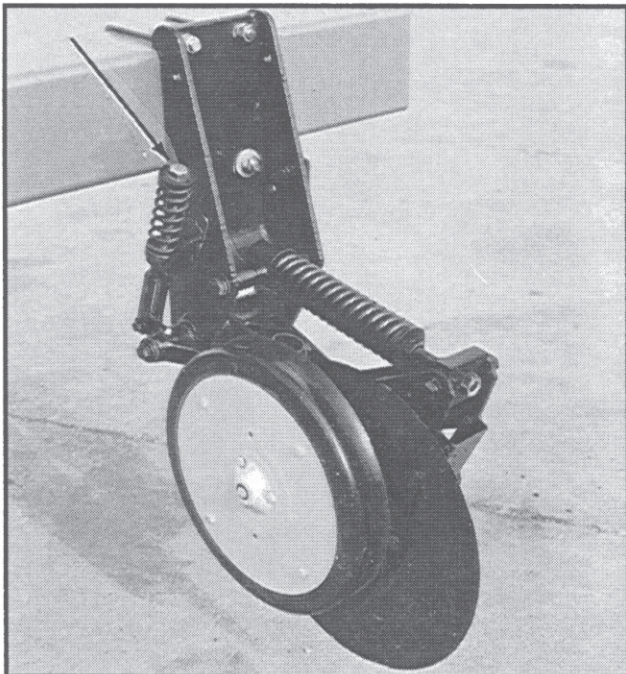

NOTE: The soil press wheel is not intended to be used for gauging fertilizer opener operating depth.

The single disc fertilizer opener is designed to be locked in a raised position when the fertilizer attachment is not in use or during storage. To accomplish this the fertilizer opener blade is raised out of the ground and the soil press wheel locked up as instructed in the following procedures:


Step 1. With the planter in the planting position, remove outside blade depth adjustment nut.

Step 2. Raise planter until adjustment bolt clears adjustment block.

Step 3. Raise spring to clear blade assembly and at the same time raise blade assembly until storage strap can be positioned onto lockup pin and install hair pin clip.

Step 4. Re-install depth adjustment nut and tighten.

60356-4

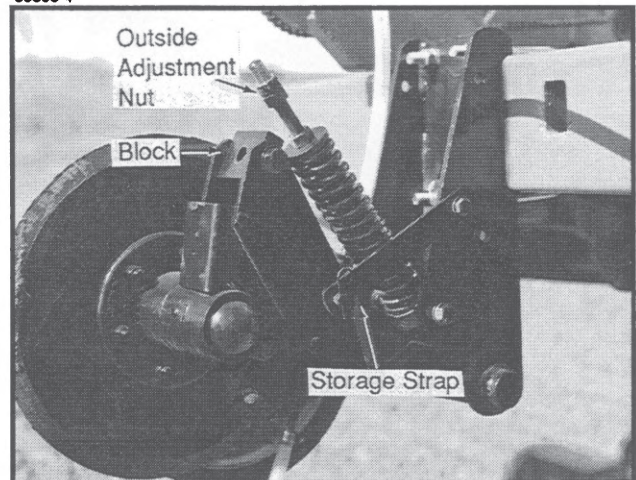

Step 5. Raise soil press wheel until lockup hole in soil press wheel spring adjustment bolt is visible. Remove hair pin clip from storage position and install in lockup hole.

60389-63




60355-32



MACHINE OPERATION


DRY FERTILIZER ATTACHMENT

59542-41

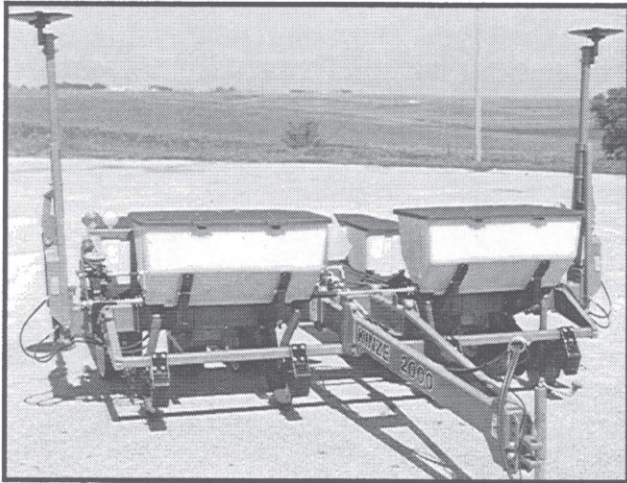

The rate of fertilizer application is determined by the drive/driven sprocket combination on the fertilizer drive and by the auger position in the hopper.

61111-7

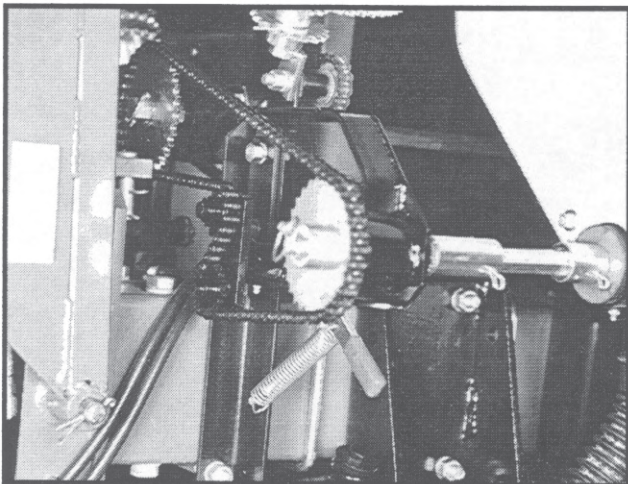

Shown with augers positioned for low rate delivery



Shown with augers positioned for high rate delivery

Remove 1/4" stainless steel cap screws holding augers in place on shaft and reposition augers to change delivery rate.

See Dry Fertilizer Application Rate Chart at the end of this section. Uneven delivery of fertilizer will occur if the high rate position is used at too low a rate setting.

A fertilizer transmission is located on the right side of the planter directly ahead of the row unit transmission on all models. This transmission is designed to allow simple, rapid changes in sprockets to obtain the desired fertilizer application rates. By removing the pins on the hexagon shafts, sprockets can be interchanged with those on the sprocket storage rod bolted to the transmission plate. Chain tension is controlled by a spring loaded idler. This idler is adjusted with a ratchet arm located to the inside of the transmission. This arm has a release position to remove spring tension for replacing sprockets. The amount of spring tension on the chain can be controlled by the ratchet arm. The fertilizer application charts found at the end of this section will aid you in selecting the correct sprocket combinations.

IMPORTANT: After each sprocket combination adjustment, make a field check to be sure you are applying fertilizer at the desired rate.

The dry fertilizer attachment meters granules by volume rather than weight. For this reason, and given the variances in brands and fertilizer analysis, the weight metered during actual application may vary considerably. Use the chart for reference only. It is suggested that a container be used to catch and measure application (as explained following the application chart) to obtain a closer estimate.

Since most fertilizers easily absorb moisture, it is important that fertilizer be kept dry during use and storage. In addition to waste, deposits of fertilizer left in the hopper can cause metal corrosion. Hoppers should be emptied at the end of each day's use.

IMPORTANT: Certain analysis of fertilizer if placed too close to the seed may cause germination or seedling damage especially if used in amounts in excess of fertilizer manufacturer's recommendations. Check with your fertilizer dealer or manufacturer for the correct amount and placement.




WARNING: Agricultural chemicals can be dangerous if not selected and handled with care. Always read and follow directions supplied by the chemical manufacturer.

MACHINE OPERATION


CLEANING

The dry fertilizer hoppers are designed to tip forward for dumping and ease of cleaning. To dump hoppers, first disconnect the drive shaft from the transmission or adjacent hopper. **LOOSEN HOSE CLAMPS AND REMOVE HOSES FROM EACH HOPPER.** Remove the rear 1/2" x 1 1/4" cap screw from between each hopper saddle and hopper mount. Rotate each hopper lid to the back side of the hopper and carefully tip the hopper forward. After dumping contents, flush all loose fertilizer from the hoppers and hoses.

61111-45

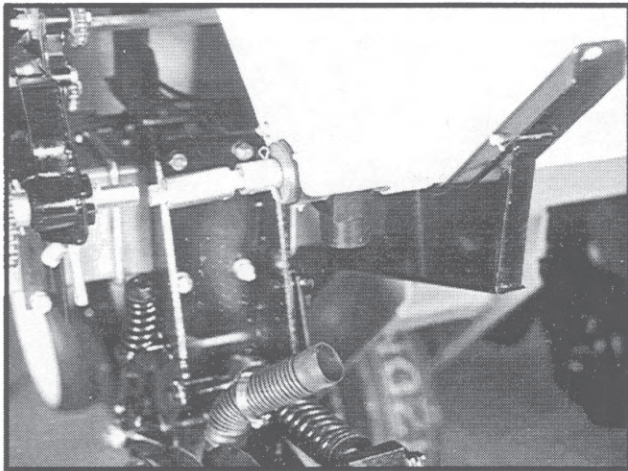

61111-14

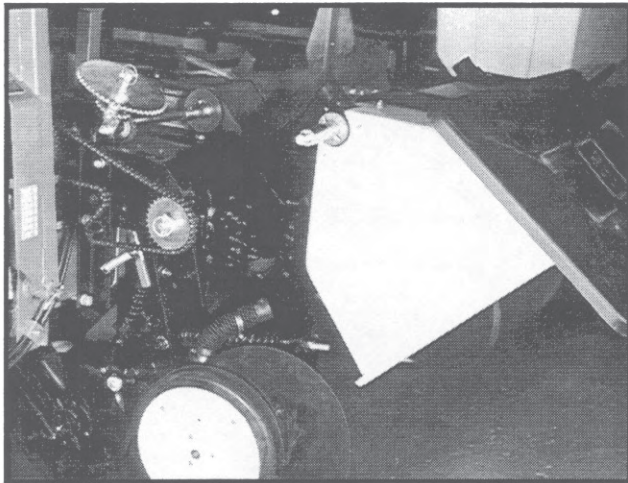


At the end of the planting season, or when fertilizer attachment is not going to be used for a period of time, the hoppers should be disassembled, cleaned and metal surfaces coated with a rust preventative.


To disassemble auger assemblies, remove 1/4" cotter pin and bearing from one end of the shaft. Pull auger assembly from opposite end of hopper. Remove stainless steel cap screws from auger shaft and remove all auger components for cleaning. Coat all parts with rust preventative before reassembly. Reinstall auger halves in proper low rate or high rate position.

To reassemble, slide auger assembly through the outlet housing back into the hopper. Secure in place by reinstalling the bearing and cotter pin.

59542-38

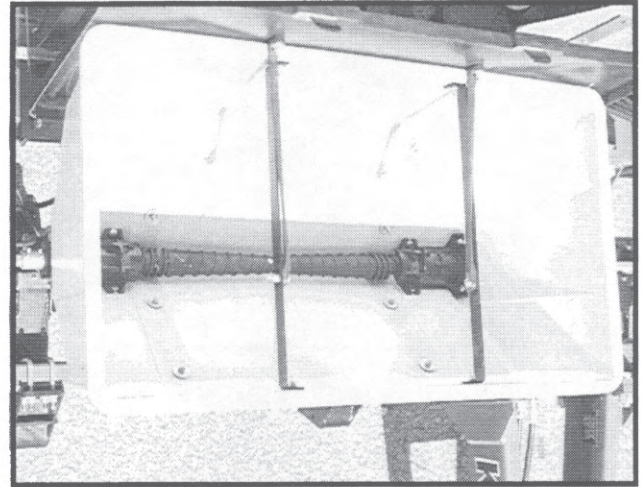

Check auger installation by rotating the shaft in the direction shown below to see that the spirals on the auger move toward the ends of the hopper. If not, remove auger assembly, turn 180° and reinstall.

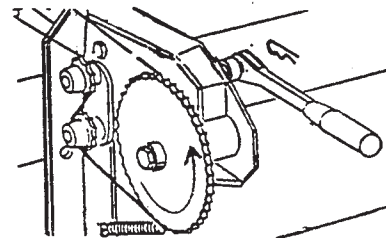

Direction of rotation

Be certain augers turn freely. If not, loosen the 5/16" carriage bolts in the outlet housings, rotate the auger several times and retighten the 5/16" carriage bolts. This should allow the housings to realign themselves with the auger.

Install auger baffles over the augers and secure in place with two hair pin clips in each hopper. Do not operate fertilizer attachment without auger baffles in place.

IMPORTANT: Frequent lubrication of auger bearings is critical to ensure that the augers will turn freely. Check lubrication section for frequency.


NOTE: Be sure the auger assembly is installed so the flighting on the augers move material to the outer openings in the hopper when the augers are rotated in the direction they will turn when the planter is in operation.

MACHINE OPERATION


LIQUID FERTILIZER ATTACHMENT

OPTIONAL SQUEEZE PUMP

59542-23

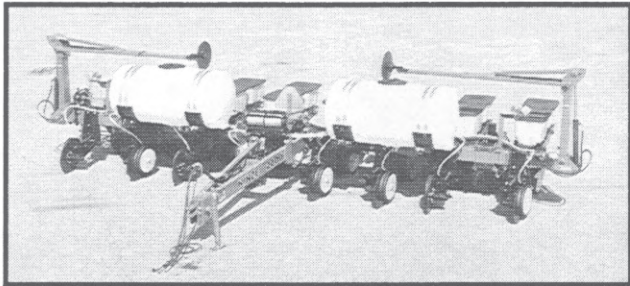

59542-23a

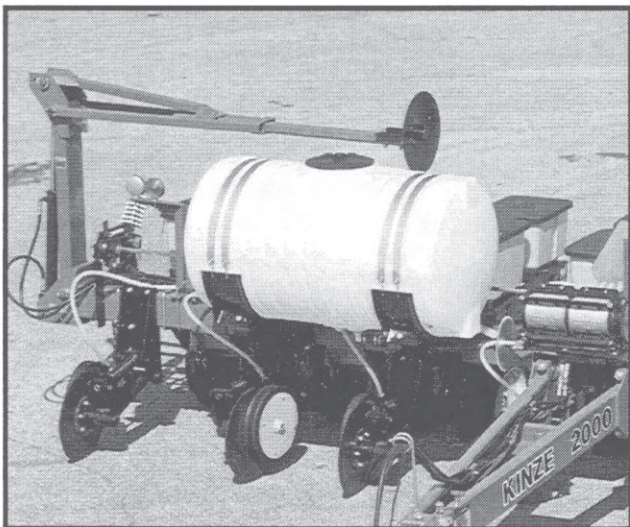

Shown with single disc fertilizer openers installed.

On machines equipped with the squeeze pump option, the rate of liquid fertilizer application is determined by the combination of sprockets on the squeeze pump driven and drive shafts. When changing sprocket combinations, make sure sprockets are in alignment, sprocket retaining collars are tight and chain tension is sufficiently restored.

The delivery rate chart found at the end of this section provides an approximate application rate only. Actual delivery will vary with temperature and the particular fertilizer being used.


IMPORTANT: Certain analysis of fertilizer if placed too close to the seed may cause germination or seedling damage especially if used in amounts in excess of fertilizer manufacturers recommendations. Check with your fertilizer dealer or manufacturer for the correct amount and placement.



WARNING: Agricultural chemicals can be dangerous if not selected and handled with care. Always read and follow directions supplied by the chemical manufacturer.


Shut-off valves provided at various locations should be closed to shut off flow when the planter sets overnight or for extended periods of time. It is also important to close the tank valves whenever service on the pump or hoses is being performed. To prolong the life of the hoses in the squeeze pump, the discharge manifold must be repositioned to the rearward position when not in use to prevent hose distortion.

00137-6

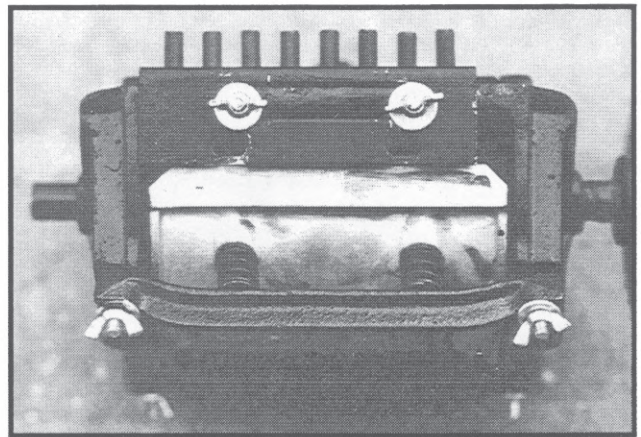

Discharge Manifold Rearward

00137-7

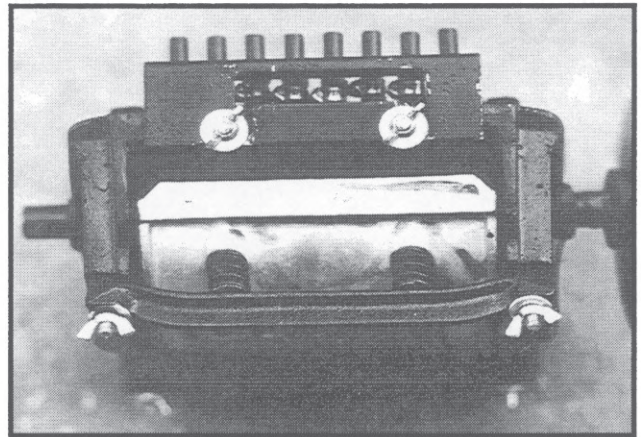

Discharge Manifold Forward


The discharge manifold must be in the forward position when the pump is in operation. To reposition the manifold, loosen the wing nuts and slide the manifold forward and sideways or rearward as required and retighten nuts.

MACHINE OPERATION

CAUTION: Avoid excessive pressure when using the quick fill attachment. The rubber plugs installed in the manifold may be forced out under pressure.

If either of the end pump hoses should run off the back plate, loosen the hose clamp on the intake manifold and rotate the hose as follows.

61010-5

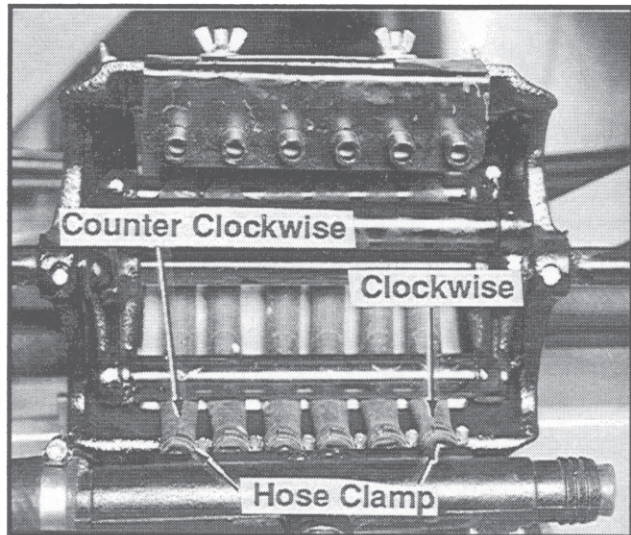


For the right hand hose (facing the pump from front of planter) twist the hose 1/4 turn in the clockwise direction.

For the left hand hose (facing front of pump) twist the hose 1/4 turn in the counter clockwise direction.

Retighten hose clamp.

OPTIONAL PISTON PUMP

69045-6

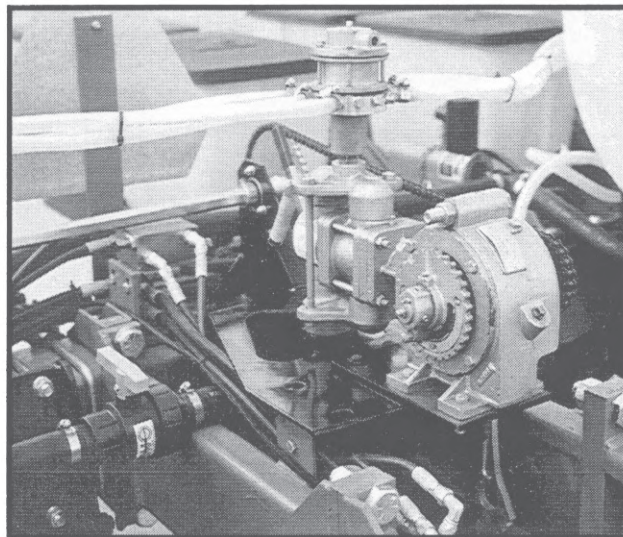

If the machine is equipped with the piston pump option, the rate of liquid fertilizer application is determined by the piston pump settings.

The delivery rate chart found at the end of this section provides an approximate application rate only. Actual delivery will vary with temperature and the particular fertilizer being used.

The operator and instruction manual shipped with the pump and flow divider should be kept and stored with this manual for future reference.

NOTE: Periodically check flow to all rows. If one or more lines are plugged, set rate will be delivered to remaining rows.

CLEANING

The tanks and all hoses are made of sturdy plastic and rubber to resist corrosion. However, the tanks, hoses and metering pump should be thoroughly cleaned with water at the end of the planting season or prior to an extended period of non-use. Do not allow fertilizer to crystalize due to cold temperature or evaporation.


MACHINE OPERATION

MACHINE OPERATION

INTERPLANT ROCK SHAFT ATTACHMENT


The rock shaft is tied to each push unit parallel arm assembly by a lift chain. The rock shaft lift cylinder is plumbed into the planter lift system. As the planter is raised the rock shaft raises the the push units to the maximum upward travel of the parallel arm for clearance in transporting and turning during field operation. By installing the rock shaft cylinder lockup, push units are held in the extreme raised position while only the rear standard pull units are being used.

69045-16

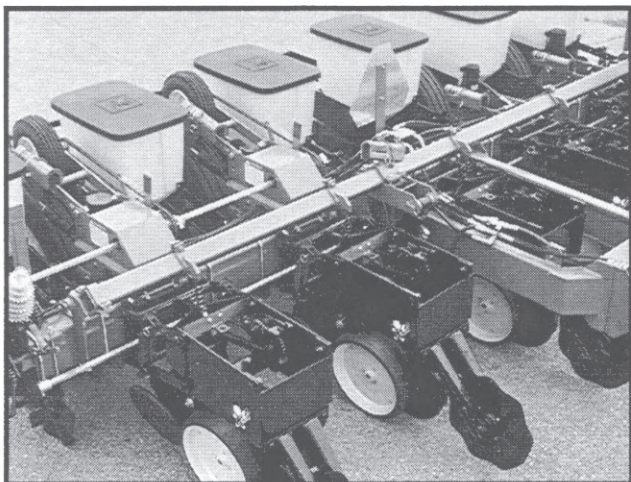


Shown with push unit hoppers removed for clarity.

69045-26

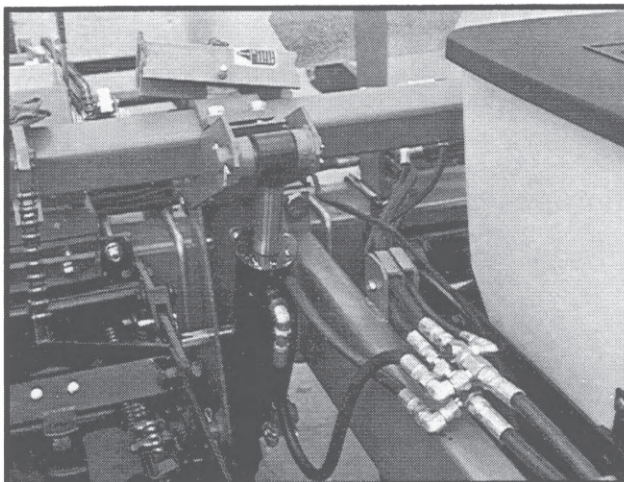

69045-22

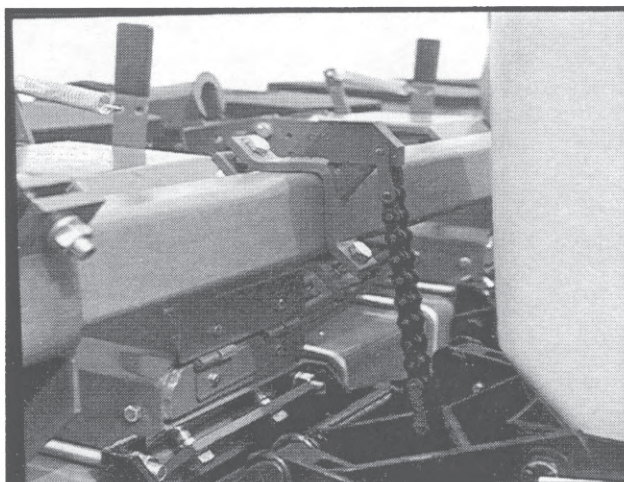


MACHINE OPERATION

CHECKING SEED POPULATION


1. Tie up one or more sets of closing wheels by running a light chain between the hopper support panel and closing wheels. It may be necessary to decrease closing wheel arm spring tension.

L0069

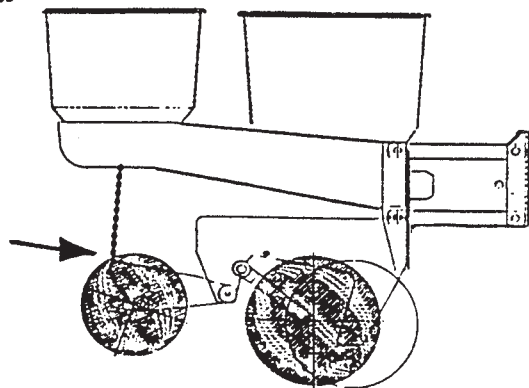

2. Plant a short distance and check to see if seed is visible in the seed trench. Adjust planting depth to a shallower setting if seed is not visible and recheck.

50677-13

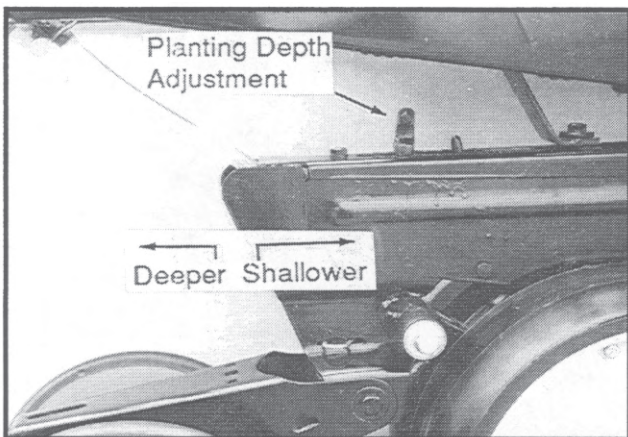

3. Measure 1/1000 of an acre. See chart for correct distance for row width spacing being planted. For example, if planting 30" rows 1/1000 of an acre would be 17'5".

LENGTH OF ROW IN FEET AND INCHES				
Fraction Of Acre	Row Width			
	30"	36"	38"	40"
1/1000	17'5"	14'6"	13'10"	13' 1"

NOTE: When planting with closing wheels raised and planting depth set shallow, seeds may bounce or roll affecting seed spacing accuracy.

4. Count seeds in measured distance.

5. Multiply the number of seeds placed in the 1/1000 of an acre by 1000. This will give you total population.

EXAMPLE: With 30" row spacing 17'5" equals 1/1000 acre.

26 Seeds				
Counted	x	1000	=	26,000 Seeds Per Acre

Seed count can be affected by drive ratio between drive wheel and seed meter, tire pressure and/or seed meter malfunction.

If seed check shows the average distance between seeds in inches is significantly different than the seed rate chart indicates, first check drive ratio between drive wheel and seed meter. Check drive wheel air pressure, check for incorrect sprocket(s) in drive line and check drive and driven sprockets in transmission for proper selection.

Second, check for seed meter malfunction. For example, if spacing between kernels of corn at the transmission setting being used is 8" and a gap of 16" is observed, a finger has lost its seed and not functioned properly. If two seeds are found within a short distance of each other, the finger has metered two seeds instead of one.

See "Finger Pickup Corn Meter Troubleshooting" and/or "Brush-Type Seed Meter Troubleshooting" in the Row Unit Operation Section of this manual.

MACHINE OPERATION

Determining Pounds Per Acre (Brush-Type Seed Meter)

To determine pounds per acre:

Seeds Per Acre On Chart	+	Seeds Per Pound From Seed Tag On Bag	=	Pounds Per Acre
-------------------------------	---	---	---	-----------------------

To determine bushels per acre:

Pounds Per Acre	+	Unit Weight Of Seed	=	Bushels Per Acre
--------------------	---	------------------------	---	---------------------

The unit weight of:

- 1 Bushel Soybeans = 60 Pounds
- 1 Bushel Cottonseed = 32 Pounds
- 1 Bushel Milo = 56 Pounds

If seeds per pound information is not available the following is an average:

- 2,600 seeds per pound for medium size soybeans
- 15,000 seeds per pound for medium size milo
- 4,500 seeds per pound for medium size cotton


If seed check shows planting rate is significantly different than seed rate chart shows or if a particular meter is not planting accurately, remove seed disc and check meter for buildup of foreign material in the meter or the brush. Check the brush for damaged bristles. Remove foreign material from meter and replace upper and lower brushes if necessary.

CHECKING GRANULAR CHEMICAL APPLICATION RATE

Many things can affect the rate of delivery of granular chemicals. Temperature, humidity, speed, ground conditions, flowability of different material or any obstruction in the meter.

A field check is important to determine correct application rates.

60569-39

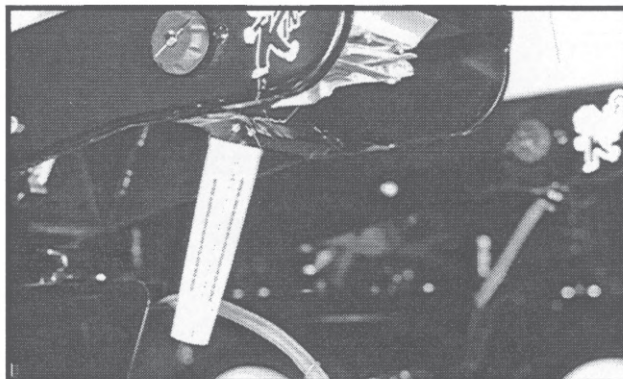

To check, fill insecticide and/or herbicide hoppers. Attach a calibrated vial to each granular diffuser. Lower the planter and proceed as follows.

NOTE: It is not necessary for seed meter clutch to be engaged during test. Disengage clutch to avoid dropping seed.

Drive 1320 feet at planting speed. Weigh the chemical in ounces that was caught in one vial. Multiply that amount by the factor shown to determine pounds per acre.

LBS. PER ACRE FACTOR FOR GIVEN WIDTH	
Row Width	Factor
30 Inch	0.83
36 Inch	0.69
38 Inch	0.65
40 Inch	0.62

EXAMPLE: You are planting 30" rows. You have planted for 1320 feet at the desired planting speed. You caught 12.0 ounces of chemical in one vial. 12.0 ounces times 0.83 equals 9.96 pounds per acre.

NOTE: It is important to check calibration of all rows.

Metering Gate

Use the metering gate setting for distributing insecticide or herbicide as a starting point. The chart is based on a 5 miles per hour planting speed. For speeds faster than 5 miles per hour a higher gate setting should be used. For speeds slower than 5 miles per hour a lower gate setting should be used.



WARNING: Agricultural chemicals can be dangerous if not selected and handled with care. Always read and follow directions supplied by the chemical manufacturer.

MACHINE OPERATION

GENERAL PLANTING RATE INFORMATION

These planting rate charts are for KINZE Model 2000 Pull Type Planters. See "Tire Pressure" for recommended tire pressures.

Not all row spacings listed are applicable to all model planters.

IMPORTANT: The sprocket combinations listed in these charts are best for average conditions. Changes in sprocket combinations may be required to obtain desired planting population. TO PREVENT PLANTING MISCALCULATIONS, MAKE FIELD CHECKS TO BE SURE YOU ARE PLANTING AT THE DESIRED RATE.

The size and shape of seed may affect the planting rate.

Finger Pickup Corn Meter

Larger grades will generally plant more accurately at the high end of the ground speed range than small grades. Higher than optimum speeds may result in population rate increase or higher incidence of doubles, particularly with small seed.

Brush-Type Seed Meter (Soybean, Milo/Sorghum, Acid-delinted Cotton)

Rate charts are given in seeds per acre as well as seed spacing in inches rounded off to the nearest tenth of an inch. Because of the large range in seed size, pounds per acre is not a suggested method of selecting transmission settings. When using smaller size seeds it may appear the pounds per acre is below what was expected and vice versa on large seed. To determine pounds per acre, use the formula given in "Determining Pounds Per Acre (Brush-Type Seed Meter)" in the "Checking Seed Population" section of this manual.

Seed population per acre with 15" rows will be double the rate for 30" rows, as well as 18" rows verses 36" rows, 19" rows verses 38" rows and 20" rows verses 40" rows, at the listed sprocket combination.

In some cases, for example, when planting 15" row soybeans or milo/grain sorghum, the 2:1 (1/2) rate sprockets on the drive may be required to obtain the desired population and seed spacing.

NOTE: Use of the 2 to 1 drive reduction package will reduce the planter transmission speed. The seeding rate will be approximately 1/2 of the chart reading when using the 2 to 1 drive reduction package. Planting speed can affect actual seeding rate. Make a field check and adjust setting in the transmission as needed to obtain the desired seed drop.

MACHINE OPERATION

Z202

PLANTING RATES FOR FINGER PICKUP CORN METERS APPROXIMATE SEED POPULATIONS/ACRE FOR VARIOUS ROW WIDTHS

30 Inch	36 Inch	38 Inch	40 Inch	Transmission Sprockets		Recomm. Speed Range (MPH)	Average Seed Spacing In Inches
				Drive	Driven		
16,186	13,488	12,778	12,139	17	28	4 to 8	12.9
16,785	13,988	13,251	12,589	17	27	4 to 8	12.5
17,431	14,526	13,761	13,073	17	26	4 to 8	12.0
18,090	15,075	14,281	13,567	19	28	4 to 8	11.6
18,128	15,107	14,312	13,596	17	25	4 to 8	11.5
18,760	15,633	14,810	14,070	19	27	4 to 8	11.1
18,883	15,736	14,908	14,162	17	24	4 to 8	11.1
19,481	16,234	15,380	14,611	19	26	4 to 8	10.7
19,704	16,420	15,556	14,778	17	23	4 to 8	10.6
20,261	16,884	15,995	15,195	19	25	4 to 8	10.3
21,104	17,587	16,662	15,829	19	24	4 to 8	9.9
21,898	18,249	17,288	16,424	23	28	4 to 8	9.5
22,022	18,352	17,386	16,517	19	23	4 to 8	9.5
22,709	18,924	17,928	17,032	23	27	4 to 8	9.2
22,850	19,042	18,040	17,138	24	28	4 to 8	9.2
23,583	19,652	18,618	17,687	23	26	4 to 8	8.9
23,697	19,747	18,708	17,772	24	27	4 to 8	8.8
23,802	19,835	18,791	17,852	25	28	4 to 8	8.8
23,853	19,877	18,831	17,889	17	19	4 to 7.5	8.8
24,526	20,438	19,363	18,395	23	25	4 to 7.5	8.5
24,608	20,507	19,427	18,456	24	26	4 to 7.5	8.5
24,684	20,570	19,487	18,513	25	27	4 to 7.5	8.5
24,755	20,629	19,543	18,566	26	28	4 to 7.5	8.4
25,548	21,290	20,169	19,161	23	24	4 to 7.5	8.2
25,592	21,327	20,205	19,194	24	25	4 to 7.5	8.2
25,633	21,361	20,237	19,225	25	26	4 to 7.5	8.2
25,671	21,393	20,267	19,254	26	27	4 to 7.5	8.1
25,707	21,422	20,295	19,280	27	28	4 to 7.5	8.1
26,659	22,216	21,046	19,994	23	23	4 to 7	7.8
27,646	23,038	21,826	20,735	28	27	4 to 7	7.6
27,684	23,070	21,856	20,763	27	26	4 to 7	7.6
27,770	23,141	21,923	20,827	25	24	4 to 7	7.5
27,818	23,181	21,961	20,863	24	23	4 to 7	7.5
28,709	23,924	22,665	21,532	28	26	4 to 6.5	7.3
28,791	23,993	22,730	21,594	27	25	4 to 6.5	7.3
28,977	24,147	22,876	21,733	25	23	4 to 6.5	7.2
29,795	24,829	23,522	22,346	19	17	4 to 6.5	7.0
29,858	24,881	23,572	22,393	28	25	4 to 6.5	7.0
29,991	24,993	23,677	22,493	27	24	4 to 6.5	7.0
30,136	25,113	23,792	22,602	26	23	4 to 6.5	7.0
31,102	25,918	24,554	23,326	28	24	3 to 6	6.7
31,295	26,079	24,707	23,471	27	23	3 to 6	6.7
32,271	26,893	25,477	24,203	23	19	3 to 5.5	6.5
32,454	27,045	25,622	24,341	28	23	3 to 5.5	6.5
33,674	28,062	26,585	25,256	24	19	3 to 5.5	6.2
35,077	29,231	27,693	26,308	25	19	3 to 5	6.0
36,068	30,056	28,474	27,051	23	17	3 to 5	5.8
36,480	30,400	28,800	27,360	26	19	3 to 5	5.7
37,636	31,363	29,713	28,227	24	17	3 to 5	5.6
37,883	31,570	29,908	28,413	27	19	3 to 5	5.5
39,204	32,670	30,951	29,403	25	17	3 to 4.5	5.3
39,287	32,739	31,016	29,465	28	19	3 to 4.5	5.3
40,772	33,977	32,189	30,579	26	17	3 to 4.5	5.1
42,340	35,284	33,427	31,755	27	17	3 to 4.5	4.9
43,908	36,590	34,665	32,931	28	17	3 to 4.5	4.8

IMPORTANT: See "General Planting Rate Information" and "Checking Seed Population" pages for additional information. Always check seed population in the field to ensure planting rates are correct.

MACHINE OPERATION

Z214/RH

PLANTING RATES FOR BRUSH-TYPE SEED METERS

APPROXIMATE SEEDS/ACRE FOR VARIOUS ROW WIDTHS

Transmission Sprockets		60 Cell Soybean Or High Rate Milo/ Grain Sorghum				Average Seed Spacing In Inches	48 Cell Specialty Soybean Or High Rate Acid-delinted Cotton				Average Seed Spacing In Inches	Speed Range (MPH)
		30 Inch	36 Inch	38 Inch	40 Inch		30 Inch	36 Inch	38 Inch	40 Inch		
17	28	80,928	67,440	63,891	60,696	2.6	64,742	53,952	51,113	48,557	3.2	2 to 8
17	27	83,926	69,938	66,257	62,944	2.5	67,141	55,950	53,006	50,355	3.1	2 to 8
17	26	87,154	72,628	68,805	65,365	2.4	69,723	58,102	55,044	52,292	3.0	2 to 8
19	28	90,449	75,374	71,407	67,837	2.3	72,359	60,299	57,126	54,270	2.9	2 to 8
19	27	93,799	78,166	74,052	70,349	2.2	75,039	62,533	59,242	56,279	2.8	2 to 8
17	24	94,416	78,680	74,539	70,812	2.2	75,533	62,944	59,631	56,650	2.8	2 to 8
17	23	98,521	82,101	77,780	73,891	2.1	78,817	65,681	62,224	59,113	2.7	2 to 8
19	25	101,303	84,419	79,976	75,977	2.1	81,042	67,535	63,981	60,782	2.6	2 to 8
19	24	105,524	87,937	83,309	79,143	2.0	84,419	70,350	66,647	63,314	2.5	2 to 8
23	28	109,491	91,243	86,440	82,118	1.9	87,593	72,994	69,152	65,694	2.4	2 to 8
19	23	110,112	91,760	86,931	82,584	1.9	88,090	73,408	69,545	66,067	2.4	2 to 8
24	28	114,252	95,210	90,199	85,689	1.8	91,402	76,168	72,159	68,551	2.3	2 to 8
24	27	118,483	98,736	93,539	88,862	1.8	94,786	78,989	74,831	71,090	2.2	2 to 8
17	19	119,263	99,386	94,155	89,447	1.8	95,410	79,509	75,324	71,558	2.2	2 to 8
24	26	123,040	102,534	97,137	92,280	1.7	98,432	82,027	77,710	73,824	2.1	2 to 8
26	28	123,773	103,144	97,715	92,829	1.7	99,018	82,515	78,172	74,263	2.1	2 to 8
24	25	127,962	106,635	101,023	95,971	1.6	102,370	85,308	80,818	76,777	2.0	2 to 8
26	27	128,357	106,964	101,334	96,268	1.6	102,686	85,571	81,067	77,014	2.0	2 to 8
23	23	133,294	111,078	105,232	99,970	1.6	106,635	88,862	84,186	79,976	2.0	2 to 8
27	26	138,420	115,350	109,279	103,815	1.5	110,736	92,280	87,423	83,052	1.9	2 to 8
24	23	139,089	115,907	109,807	104,317	1.5	111,271	92,726	87,846	83,454	1.9	2 to 8
25	23	144,884	120,737	114,382	108,663	1.4	115,907	96,590	91,506	86,930	1.8	2 to 8
19	17	148,975	124,146	117,612	111,731	1.4	119,180	99,317	94,090	89,385	1.8	2 to 8
27	24	149,955	124,963	118,386	112,466	1.4	119,964	99,970	94,709	89,973	1.7	2 to 8
28	24	155,509	129,591	122,770	116,632	1.3	124,407	103,673	98,216	93,306	1.7	2 to 8
23	19	161,355	134,463	127,386	121,017	1.3	129,084	107,570	101,909	96,814	1.6	2 to 8
28	23	162,270	135,225	128,108	121,703	1.3	129,816	108,180	102,486	97,362	1.6	2 to 8
24	19	168,371	140,309	132,924	126,278	1.2	134,696	112,247	106,339	101,022	1.6	2 to 8
25	19	175,386	146,155	138,463	131,540	1.2	140,309	116,924	110,770	105,232	1.5	2 to 8
23	17	180,338	150,282	142,372	135,254	1.2	144,270	120,226	113,898	108,203	1.5	2 to 8
26	19	182,402	152,001	144,001	136,801	1.1	145,922	121,601	115,201	109,441	1.4	2 to 7
27	19	189,417	157,848	148,540	142,063	1.1	151,534	126,278	118,832	113,650	1.4	2 to 7
28	19	196,433	163,694	155,078	147,325	1.1	157,146	130,955	124,062	117,860	1.3	2 to 7
26	17	203,861	169,884	160,943	152,896	1.0	163,089	135,907	128,754	122,317	1.3	2 to 7
27	17	211,702	176,418	167,133	158,776	0.9	169,362	141,134	133,706	127,021	1.2	2 to 7
28	17	219,542	182,952	173,323	164,657	0.9	175,634	146,362	138,658	131,726	1.2	2 to 7

IMPORTANT: See "General Planting Rate Information" and "Checking Seed Population" pages for additional information.

NOTE: When using the 2 to 1 Drive Reduction Package, rates will be approximately 1/2 of given numbers.

IMPORTANT: Always check seed population in the field to ensure planting rates are correct.

MACHINE OPERATION

RH/Z215

PLANTING RATES FOR BRUSH-TYPE SEED METERS (Continued)

APPROXIMATE SEEDS/ACRE FOR VARIOUS ROW WIDTHS

Transmission Sprockets		36 Cell				Average Seed Spacing In Inches	30 Cell Milo/Grain Sorghum Or Acid-delinted Cotton				Average Seed Spacing In Inches	Speed Range (MPH)
		Acid-delinted Large Cotton										
		30 Inch	36 Inch	38 Inch	40 Inch		30 Inch	36 Inch	38 Inch	40 Inch		
Drive	Driven											
17	28	48,557	40,464	38,335	36,418	4.3	40,464	33,720	31,945	30,348	5.2	2 to 5
17	27	50,356	41,963	39,754	37,766	4.2	41,963	34,969	33,129	31,472	5.0	2 to 8
17	26	52,292	43,577	41,283	39,219	4.0	43,577	36,314	34,403	32,683	4.8	2 to 8
19	28	54,269	45,224	42,844	40,702	3.9	45,225	37,687	35,704	33,918	4.6	2 to 8
19	27	56,279	46,900	44,431	42,209	3.7	46,900	39,083	37,026	35,175	4.5	2 to 8
17	24	56,650	47,208	44,723	42,487	3.7	47,208	39,340	37,270	35,406	4.4	2 to 8
17	23	59,113	49,261	46,668	44,335	3.5	49,261	41,051	38,890	36,946	4.2	2 to 8
19	25	60,782	50,651	47,986	45,586	3.4	50,652	42,210	39,988	37,989	4.1	2 to 8
19	24	63,314	52,762	49,985	47,486	3.3	52,762	43,968	41,654	39,572	4.0	2 to 8
23	28	65,695	54,746	51,864	49,271	3.2	54,746	45,621	43,220	41,059	3.8	2 to 8
19	23	66,067	55,056	52,159	49,550	3.2	55,056	45,880	43,465	41,292	3.8	2 to 8
24	28	68,551	57,126	54,119	51,413	3.0	57,126	47,605	45,099	42,844	3.7	2 to 8
24	27	71,090	59,242	56,123	53,317	2.9	59,242	49,368	46,770	44,431	3.5	2 to 8
17	19	71,558	59,632	56,493	53,668	2.9	59,631	49,693	47,077	44,724	3.5	2 to 8
24	26	73,824	61,520	58,282	55,368	2.8	61,520	51,267	48,569	46,140	3.4	2 to 8
26	28	74,264	61,886	58,629	55,697	2.8	61,886	51,572	48,858	46,415	3.4	2 to 8
24	25	76,772	63,981	60,614	57,583	2.7	63,981	53,317	50,511	47,986	3.3	2 to 8
26	27	77,014	64,178	60,800	57,761	2.7	64,178	53,482	50,667	48,134	3.3	2 to 8
23	23	79,976	66,647	63,139	59,982	2.6	66,647	55,539	52,616	49,985	3.1	2 to 8
27	26	83,052	69,210	65,567	62,289	2.5	69,210	57,675	54,640	51,908	3.0	2 to 8
24	23	83,453	69,544	65,884	62,690	2.5	69,544	57,954	54,904	52,158	3.0	2 to 8
25	23	86,930	72,442	68,629	65,198	2.4	72,442	60,368	57,191	54,332	2.9	2 to 8
19	17	89,385	74,488	70,567	67,039	2.3	74,488	62,073	58,806	55,866	2.8	2 to 8
27	24	89,973	74,978	71,032	67,480	2.3	74,978	62,481	59,193	56,233	2.8	2 to 8
28	24	93,305	77,755	73,662	69,979	2.2	77,755	64,796	61,385	58,316	2.7	2 to 8
23	19	96,813	80,678	76,432	72,610	2.2	80,678	67,231	63,693	60,508	2.6	2 to 8
28	23	97,362	81,135	76,864	73,022	2.1	81,135	67,613	64,054	60,851	2.6	2 to 8
24	19	101,023	84,185	79,754	75,767	2.1	84,185	70,155	66,462	63,139	2.5	2 to 8
25	19	105,232	87,693	83,078	78,924	2.0	87,693	73,078	69,231	65,770	2.4	2 to 8
23	17	108,233	90,169	85,423	81,152	1.9	90,169	75,141	71,186	67,627	2.3	2 to 8
26	19	109,441	91,201	86,401	82,081	1.9	91,201	76,001	72,001	68,401	2.3	2 to 7
27	19	113,650	94,709	89,124	85,238	1.8	94,709	78,924	74,770	71,031	2.2	2 to 7
28	19	117,860	98,216	93,047	88,395	1.8	98,216	81,847	77,539	73,662	2.1	2 to 7
26	17	122,317	101,930	96,566	91,738	1.7	101,930	84,942	80,471	76,448	2.1	2 to 7
27	17	127,021	105,851	100,280	95,266	1.6	105,851	88,209	83,566	79,388	2.0	2 to 7
28	17	131,725	109,771	103,994	98,794	1.6	109,771	91,476	86,661	82,328	1.9	2 to 7

IMPORTANT: See "General Planting Rate Information" and "Checking Seed Population" pages for additional information.

NOTE: When using the 2 to 1 Drive Reduction Package, rates will be approximately 1/2 of given numbers.

IMPORTANT: Always check seed population in the field to ensure planting rates are correct.

MACHINE OPERATION

Z202

PLANTING RATES FOR BRUSH-TYPE SEED METERS (Continued) APPROXIMATE HILLS/ACRE FOR VARIOUS ROW WIDTHS

Due to variations in cotton seed size, meters equipped with the 12 cell acid-delinted hill-drop cotton disc will plant from 3 to 6 seeds per cell.

To determine planter transmission setting, determine desired hill spacing and select the transmission ratio closest to the hill spacing in inches on the chart. To decrease population increase spacing. To increase population decrease spacing.

To determine population per acre, determine average seeds per hill and hills per acre by doing a field check. Measure 1/1000 of an acre (1/1000 acre = Length of row 17' 5" for 30" row widths, 14' 6" for 36" row widths, 13' 10" for 38" row widths and 13' 1" for 40" row widths). Multiply average seeds per hill by hills per acre. EXAMPLE: 4 seeds per hill x (13 hills x 1000) = 52,000

Transmission Sprockets Drive Driven		NUMBER OF HILLS PER ACRE 12 Cell Hill-drop Cotton, Acid-delinted				Average Hill Spacing In Inches	Speed Range (MPH)
		30 Inch	36 Inch	38 Inch	40 Inch		
17	28	16,186	13,488	12,778	12,139	12.9	2 to 8
17	27	16,785	13,988	13,251	12,589	12.5	2 to 8
17	26	17,431	14,526	13,761	13,073	12.0	2 to 8
19	28	18,090	15,075	14,281	13,567	11.6	2 to 8
19	27	18,760	15,633	14,810	14,070	11.1	2 to 8
17	24	18,883	15,736	14,908	14,162	11.1	2 to 8
17	23	19,704	16,420	15,556	14,778	10.6	2 to 8
19	25	20,261	16,884	15,995	15,195	10.3	2 to 8
19	24	21,105	17,587	16,662	15,829	9.9	2 to 8
23	28	21,898	18,249	17,288	16,424	9.5	2 to 8
19	23	22,022	18,352	17,386	16,517	9.5	2 to 8
24	28	22,850	19,042	18,040	17,138	9.2	2 to 8
24	27	23,697	19,747	18,708	17,772	8.8	2 to 8
17	19	23,853	19,877	18,831	17,889	8.8	2 to 8
24	26	24,608	20,507	19,427	18,456	8.5	2 to 8
26	28	24,755	20,629	19,543	18,566	8.4	2 to 8
24	25	25,592	21,327	20,205	19,194	8.2	2 to 8
26	27	25,671	21,393	20,267	19,254	8.1	2 to 8
23	23	26,659	22,216	21,046	19,994	7.8	2 to 8
27	26	27,684	23,070	21,856	20,763	7.6	2 to 8
24	23	27,818	23,181	21,961	20,863	7.5	2 to 8
25	23	28,977	24,147	22,876	21,733	7.2	2 to 8
19	17	29,795	24,829	23,522	22,346	7.0	2 to 8
27	24	29,991	24,993	23,677	22,493	7.0	2 to 8
28	24	31,102	25,918	24,554	23,326	6.7	2 to 8
23	19	32,271	26,893	25,477	24,203	6.5	2 to 8
28	23	32,454	27,045	25,622	24,341	6.5	2 to 8
24	19	33,674	28,062	26,585	25,256	6.2	2 to 8
25	19	35,077	29,231	27,693	26,308	6.0	2 to 8
23	17	36,068	30,056	28,474	27,051	5.8	2 to 8
26	19	36,480	30,400	28,800	27,360	5.7	2 to 7
27	19	37,883	31,570	29,908	28,413	5.5	2 to 7
28	19	39,287	32,739	31,016	29,465	5.3	2 to 7
26	17	40,772	33,977	32,189	30,579	5.1	2 to 7
27	17	42,340	35,284	33,427	31,755	4.9	2 to 7
28	17	43,908	36,590	34,665	32,931	4.8	2 to 7

IMPORTANT: See "General Planting Rate Information" and "Checking Seed Population" pages for additional information.

NOTE: When using the 2 to 1 Drive Reduction Package, rates will be approximately 1/2 of given numbers.

IMPORTANT: Always check seed population in the field to ensure planting rates are correct.

MACHINE OPERATION

DRY INSECTICIDE APPLICATION RATES APPROXIMATE POUNDS/ACRE AT 5 MPH FOR VARIOUS ROW WIDTHS

Meter Setting	30 Inch	36 Inch	38 Inch	40 Inch
CLAY GRANULES				
10	4.9	4.1	3.9	3.7
11	5.4	4.5	4.3	4.1
12	6.1	5.1	4.8	4.6
13	6.9	5.7	5.4	5.2
14	7.7	6.4	6.0	5.7
15	8.5	7.1	6.7	6.4
16	9.6	8.0	7.6	7.2
17	10.7	8.9	8.4	8.0
18	11.4	9.5	9.0	8.6
19	13.1	10.9	10.3	9.8
20	14.2	11.8	11.2	10.6
21	15.5	12.9	12.3	11.6
22	16.4	13.7	12.9	12.3
23	17.2	14.3	13.6	12.9
24	18.8	15.7	14.9	14.1
25	20.9	17.4	16.5	15.6
26	23.0	19.2	18.1	17.2
27	24.1	20.0	19.0	18.0
28	25.4	21.2	20.1	19.1
29	27.8	23.2	22.0	20.9
30	29.6	24.7	23.4	22.2
SAND GRANULES				
5	2.9	2.4	2.3	2.2
6	4.9	4.0	3.8	3.6
7	5.3	4.4	4.2	4.0
8	6.3	5.3	5.0	4.7
9	7.8	6.5	6.1	5.8
10	8.9	7.4	7.0	6.7
11	10.2	8.5	8.0	7.6
12	11.2	9.3	8.8	8.4
13	12.6	10.5	10.0	9.5
14	14.1	11.7	11.1	10.5
15	15.5	12.9	12.3	11.6
16	17.5	14.6	13.8	13.1
17	19.4	16.2	15.3	14.6
18	21.8	18.2	17.2	16.4
19	24.3	20.2	19.1	18.2
20	25.7	21.4	20.3	19.3
21	27.6	23.0	21.8	20.7
22	29.6	24.7	23.4	22.2
23	32.0	26.7	25.3	24.0
24	34.4	28.7	27.2	25.8
25	36.9	30.7	29.1	27.6

IMPORTANT: The above chart represents average values and should be used only as a starting point. The granular chemical flows through the given meter opening at a nearly uniform rate regardless of roller speed. Your actual rate will vary depending upon the insecticide you are using, your planting speed and your plant population. Planting speed/ground speed has the greatest affect on application rate.

Your actual rate must be checked in the field with the actual Insecticide that you are using and at the speed and population at which you will be planting.

MACHINE OPERATION

DRY HERBICIDE APPLICATION RATES

APPROXIMATE POUNDS/ACRE AT 5 MPH FOR VARIOUS ROW WIDTHS

CLAY GRANULES

Meter Setting	30 Inch	36 Inch	38 Inch	40 Inch
10	4.7	3.9	3.7	3.5
11	5.2	4.4	4.1	3.9
12	5.8	4.9	4.6	4.4
13	6.5	5.4	5.1	4.9
14	7.3	6.1	5.7	5.5
15	8.2	6.9	6.5	6.2
16	9.0	7.5	7.1	6.8
17	9.9	8.2	7.8	7.4
18	10.7	8.9	8.4	8.0
19	11.6	9.7	9.2	8.7
20	12.6	10.5	10.0	9.5
21	13.6	11.3	10.7	10.2
22	14.6	12.1	11.5	10.9
23	15.7	13.1	12.4	11.8
24	17.0	14.1	13.4	12.7
25	18.1	15.1	14.3	13.6
26	19.4	16.2	15.3	14.6
27	20.9	17.4	16.5	15.6
28	22.6	18.8	17.8	17.0
29	24.3	20.2	19.1	18.2
30	26.7	22.2	21.1	20.0

IMPORTANT: The above chart represents average values and should be used only as a starting point. The granular chemical flows through the given meter opening at a nearly uniform rate regardless of roller speed. Your actual rate will vary depending upon the herbicide you are using, your planting speed and your plant population. Planting speed/ground speed has the greatest affect on application rate.

Your actual rate must be checked in the field with the actual herbicide that you are using and at the speed and population at which you will be planting.

MACHINE OPERATION

DRY FERTILIZER APPLICATION RATES

APPROXIMATE RATE IN POUNDS PER ACRE

Drive Sprocket	Driven Sprocket	Low Rate Setting				High Rate Setting			
		30" Rows	36" Rows	38" Rows	40" Rows	30" Rows	36" Rows	38" Rows	40" Rows
15	33	36	30	28	27	109	91	86	82
15	30	39	33	31	29	120	100	95	90
30	50	47	39	37	35	144	120	114	108
19	30	50	42	39	38	153	126	120	115
33	50	52	43	41	39	158	132	125	119
15	19	58	48	46	44	174	144	136	131
30	33	67	55	52	50	200	166	157	150
33	30	81	67	64	61	241	200	190	181
19	15	93	77	73	70	278	230	219	209
50	33	111	92	87	83	332	275	262	249
30	19	116	96	91	87	347	288	274	261
50	30	122	101	96	92	365	303	288	274
33	19	127	105	100	95	382	317	301	287
30	15	146	121	115	110	440	365	347	330
33	15	161	134	127	121	482	400	380	362
50	19	193	160	152	145	578	480	455	434
50	15	244	202	192	183	730	609	575	548

NOTE: Uneven delivery may result in attempting to use lower rates than indicated by the chart.

Direction
Of Rotation



High Rate Position



Low Rate Position

Above chart for planters equipped with contact drive. See "Tire Pressure" for recommended tire pressures.

This chart was calculated with a bulk density of 65 pounds per cubic foot.

IMPORTANT: Fertilizer application rates can vary from the weights calculated in the above chart. To prevent application miscalculations, make field checks to be sure you are applying fertilizer at the desired rate.

To check the exact number of pounds your fertilizer attachment will actually deliver on a 30 inch row spacing, proceed as follows:

Remove one spout from one of the fertilizer hoppers and attach a container under the opening. Engage the fertilizer attachment and drive forward for 174 feet. Weigh the amount of fertilizer caught in the container and multiply that amount by 100. The result will be the pounds of fertilizer delivered per acre when planting in 30 inch rows. To convert this delivery rate for wider rows, multiply by the following conversion factors:

36" multiply by 0.83

38" multiply by 0.79

MACHINE OPERATION

LIQUID FERTILIZER SQUEEZE PUMP APPLICATION RATES

GALLONS PER ACRE

Drive	Driven	30 Inch Rows	36 Inch Rows	38 Inch Rows	40 Inch Rows	Drive	Driven	30 Inch Rows	36 Inch Rows	38 Inch Rows	40 Inch Rows
16	62	6.2	5.0	4.9	4.7	46	44	25.3	20.2	20.0	19.0
16	*60	6.4	5.1	5.1	4.8	20	18	26.8	21.4	21.2	20.1
18	62	7.0	5.6	5.5	5.3	18	16	27.2	21.7	21.5	20.4
18	*60	7.2	5.8	5.7	5.4	52	46	27.3	21.8	21.6	20.5
16	52	7.4	5.9	5.9	5.6	*60	52	27.9	22.4	22.0	21.0
20	62	7.8	6.2	6.2	5.9	52	44	28.5	22.8	22.5	21.4
18	52	8.4	6.7	6.6	6.3	62	52	28.8	23.1	22.7	21.6
16	46	8.4	6.7	6.6	6.3	20	16	30.2	24.1	23.8	22.7
16	44	9.2	7.0	7.0	6.9	*60	46	31.5	25.2	24.9	23.7
20	52	9.3	7.5	7.3	7.0	62	46	32.6	26.0	25.7	24.5
18	46	9.4	7.6	7.5	7.1	*60	44	32.9	26.3	26.0	24.7
18	44	9.9	7.9	7.8	7.4	62	44	34.1	27.3	26.8	25.6
20	46	10.5	8.4	8.3	7.9	44	30	35.5	28.3	28.0	26.7
20	44	11.0	8.8	8.7	8.1	30	20	36.3	29.0	28.6	27.3
30	62	11.7	9.3	9.2	8.8	46	30	37.0	29.7	29.2	27.8
30	*60	12.1	9.7	9.5	9.1	30	18	40.3	32.2	31.8	30.3
16	30	12.8	10.3	10.2	9.6	52	30	41.9	33.5	33.1	31.5
30	52	13.9	11.1	11.0	10.4	30	16	45.3	36.3	35.7	34.0
18	30	14.5	11.6	11.4	10.9	*60	30	48.3	38.6	38.2	36.3
30	46	15.8	12.6	12.4	11.9	62	30	49.9	40.0	39.4	37.5
20	30	16.1	12.8	12.8	12.1	44	20	53.2	42.5	42.0	40.0
30	44	16.5	13.2	13.0	12.4	46	20	55.5	44.4	43.9	41.7
44	62	17.2	13.7	13.6	12.9	44	18	59.0	47.3	46.6	44.3
44	*60	17.7	14.2	14.0	13.3	46	18	61.8	49.5	48.8	46.4
46	62	18.0	14.3	14.2	13.5	52	20	62.8	50.2	49.6	47.2
46	*60	18.5	14.8	14.6	13.9	44	16	66.4	52.8	52.4	49.9
16	20	19.4	15.5	15.2	14.6	46	16	69.4	55.5	54.8	52.1
52	62	20.2	16.2	16.0	15.2	52	18	69.8	55.8	55.1	52.4
44	52	20.4	16.4	16.1	15.3	*60	20	72.5	58.0	57.2	54.4
52	*60	20.9	16.7	16.5	15.7	62	20	74.9	60.0	59.1	56.2
46	52	21.4	17.1	16.9	16.1	52	16	78.5	62.8	62.0	59.0
16	18	21.5	17.2	17.0	16.1	*60	18	80.5	64.4	63.6	60.5
18	20	21.7	17.4	17.2	16.3	62	18	83.2	66.6	65.7	62.5
44	46	23.1	18.5	18.2	17.3	*60	16	90.6	72.5	71.5	68.0
*60	62	23.4	18.7	18.5	17.6	62	16	93.6	74.9	73.9	70.3
62	*60	25.0	20.0	19.7	18.8						

*Optional sprocket.

Above chart for planters equipped with contact drive. See "Tire Pressure" for recommended tire pressures.

This chart was calculated based on a solution weighing ten pounds per gallon.

IMPORTANT: Fertilizer application rates can vary from the above chart. To prevent application miscalculations, make field checks to be sure you are applying fertilizer at the desired rate.

MACHINE OPERATION

LIQUID FERTILIZER PISTON PUMP APPLICATION RATES

GALLONS PER ACRE

Pump Setting	1	2	3	4	5	6	7	8	9	10
4 Row 30	10.4	20.8	31.2	41.6	52.0	62.4	72.8	83.2	93.6	104.0
4 Row 36	8.7	17.3	26.0	34.7	43.3	52.0	60.7	69.3	78.0	86.7
4 Row 38	8.2	16.4	24.6	32.8	41.1	49.3	57.5	65.7	73.9	82.1
6 Row 30	6.9	13.9	20.8	27.7	34.7	41.6	48.5	55.5	62.4	69.3
6 Row 36	5.8	11.6	17.3	23.1	28.9	34.7	40.4	46.2	52.0	57.8
6 Row 38	5.5	11.0	16.4	21.9	27.4	32.8	38.3	43.8	49.3	54.7
8 Row 30	5.2	10.4	15.6	20.8	26.0	31.2	36.4	41.6	46.8	52.0
8 Row 36	4.3	8.7	13.0	17.3	21.7	26.0	30.3	34.7	39.0	43.3
8 Row 38	4.1	8.2	12.3	16.4	20.5	24.6	28.7	32.8	36.9	41.1
8 Row 40	3.9	7.8	11.7	15.6	19.5	23.4	27.3	31.2	35.1	39.0

Above chart for planters equipped with contact drive and 50 tooth drive sprocket and 23 tooth driven sprocket. See "Tire Pressure" for recommended tire pressures. Chart is based on average wheel slippage and liquid viscosities.

Measure and weigh one gallon of actual fertilizer solution to determine exact application rate. This chart was calculated based on a solution weighing ten pounds per gallon.

IMPORTANT: Fertilizer application rates can vary from the above chart. To prevent application miscalculations, make field checks to be sure you are applying fertilizer to all rows at the desired rate.

NOTE: Flow to all rows should be checked periodically. If one or more lines are plugged, the desired rate will be delivered to the remaining rows keeping total application rate at desired rate.


ROW UNIT OPERATION

PLANTING DEPTH

Planting depth is maintained by the row unit gauge wheels. To increase or decrease the planting depth, first raise the planter to remove weight from the wheels. Then lift the depth adjustment handle and reposition it forward to decrease depth or rearward to increase planting depth. Adjust all units to the same depth initially. Then lower the planter and check operation and planting depth of all row units. It may be necessary to readjust some rows to obtain uniform operation.

! WARNING: Never work under the planter while in raised position without using safety lock-ups.

50677-13

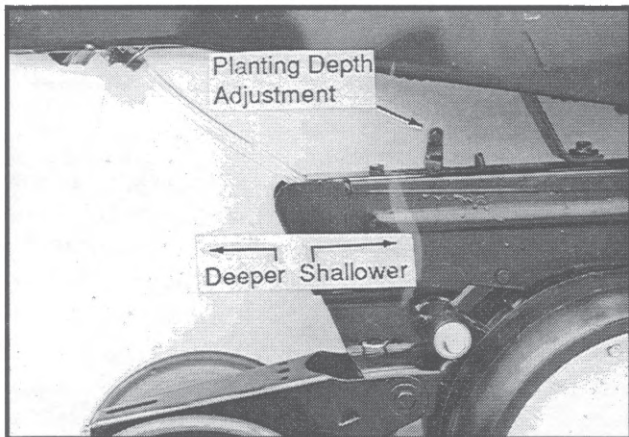


CLOSING WHEEL PRESSURE

After adjusting for planting depth, check the operation of the closing wheels. The closing wheels should gently close the row without sinking in or compacting the soil. To increase spring pressure on the closing wheels, turn the adjustment bolt located at the rear of the closing wheel arm in a clockwise direction. Turning the bolt counterclockwise decreases spring tension.

Adjust all row units to a similar setting. Tension setting can be determined by checking the position of the tension spring through the viewing slot on top of the closing wheel arm. When planting in light soil at average depth (approximately 2") start by setting the dimension between the bolt head and the rear edge of the spring plug at 2 inches. For medium soil at average depth, increase spring tension to obtain 1 1/2" between the bolt head and spring plug. For heavy soil and average planting depths of 2 to 3 inches, set the bolt dimension at approximately 1".

IMPORTANT: In field conditions that require a light soil setting of more than 2", it is recommended that a jam nut be placed on the bolt and tightened against the spring plug. This will prevent bolt loss when operating with minimum spring tension.

50677-13

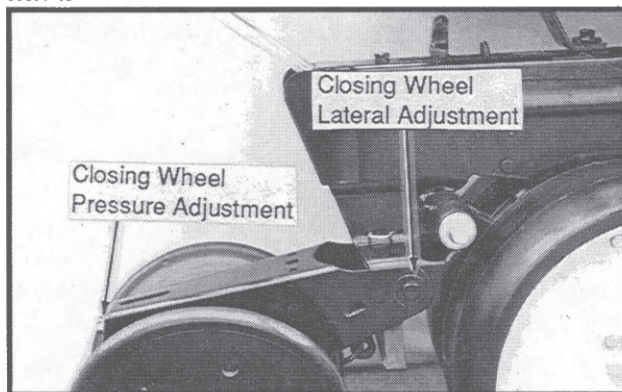

CLOSING WHEEL LATERAL ADJUSTMENT

Slotted holes in the wheel arm stop allow for lateral adjustment of the closing wheel assembly.

Loosen hardware which attaches the closing wheel arm to the wheel arm stop. Shift the closing wheel assembly within the limits of the adjustment slots until the closing wheels are aligned with the row unit. Tighten hardware.


! WARNING: Raise planter and install cylinder lockups before making closing wheel adjustments.

ROW UNIT OPERATION

SEED METER DRIVE RELEASE

The seed meter drive is equipped with a clutch release mechanism that allows the drive to be disconnected from the seed metering unit. Disconnecting the drive allows the operator to check granular chemical application rates without dropping seed. It also allows one or more of the rows to be disconnected when finishing fields.

60569-43

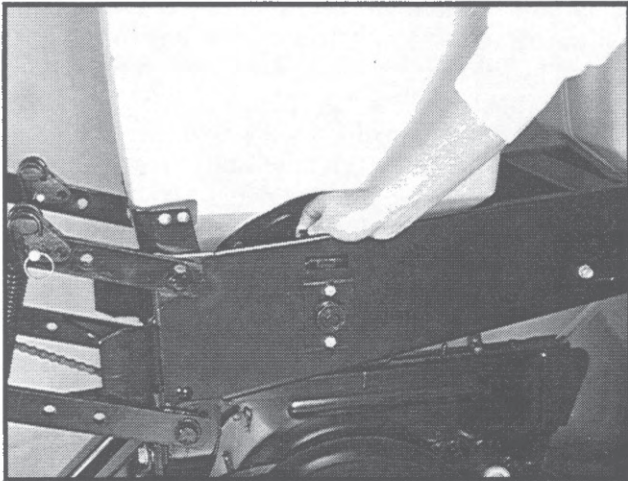


To disengage the drive, lift the release handle and pull outward until the handle locks in the slot in the side of the hopper side panel. To engage the row unit, lift and unlatch the handle. Spring tension will return the mechanism to the drive position.

Erratic seed spacing may result from misalignment between the drive coupler and seed meter input shaft. Misalignment may cause momentary stoppage of brush-type meter seed disc. Check alignment after initial installation. If adjustment is required, refer to "Meter Drive Adjustment" for correct procedure.

FINGER PICKUP CORN METER


Refer to the planting rate charts for recommended seed drive transmission sprocket combinations.

60620-14

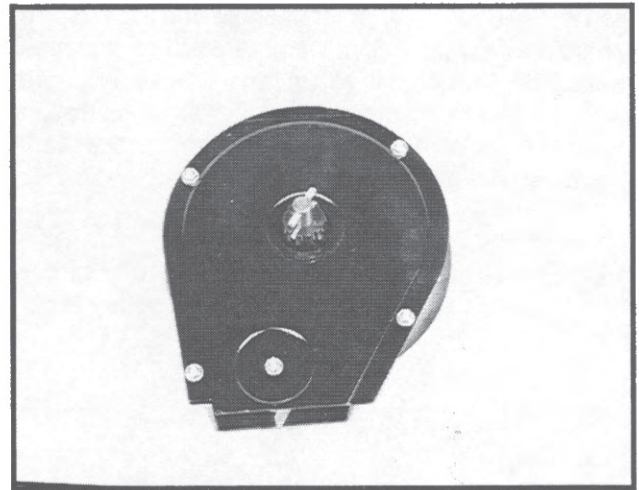

IMPORTANT: To provide efficient operation of the finger pickup corn meters and extend the life of components, sprinkle a teaspoon of powdered graphite over the top of the seed twice daily. The graphite will filter down into the seed pickup mechanism and provide lubrication.

53761-1

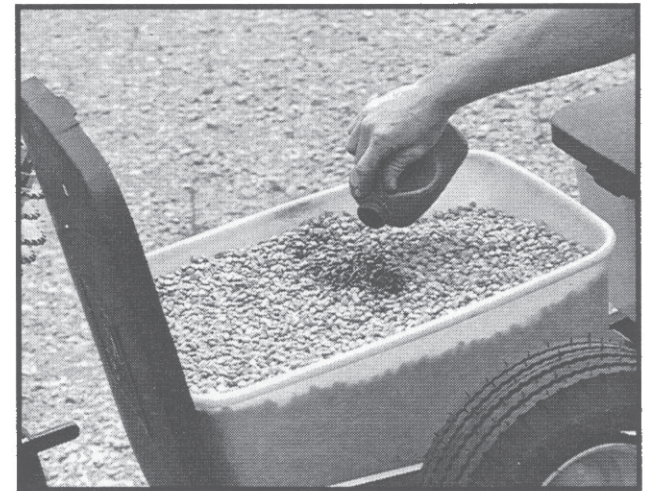


See "Finger Pickup Corn Meter Troubleshooting" and "Finger Pickup Corn Meter Inspection/Adjustment" for additional information.

ROW UNIT OPERATION

BRUSH-TYPE SEED METER


60607-40

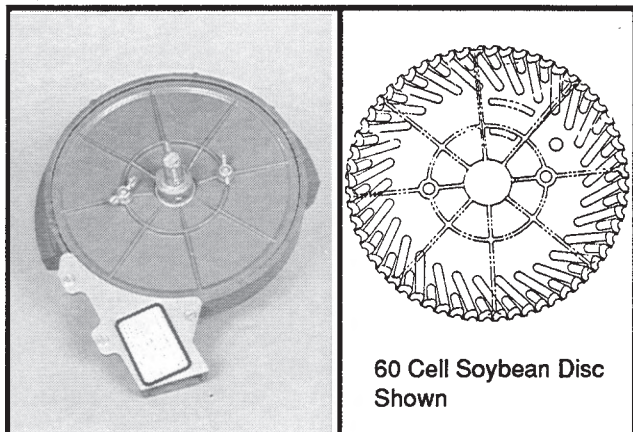


60 Cell Soybean Disc Shown

The following seed discs are available for use with the brush-type seed meter:


Soybean: 60 cells to meter seed sizes from 2200 to 4000 seeds per pound (Black color-coded).

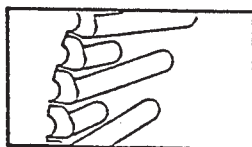


Specialty soybean: 48 cells to meter seed sizes from 1400 to 2200 seeds per pound (Dark blue color-coded).

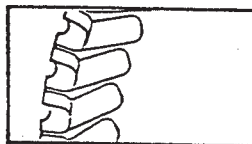


Small milo/grain sorghum: 30 cells to meter seed sizes from 14,000 to 20,000 seeds per pound (Red color-coded).

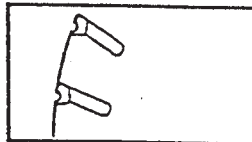


Large milo/grain sorghum: 30 cells to meter seed sizes from 10,000 to 16,000 seeds per pound (Light blue color-coded).

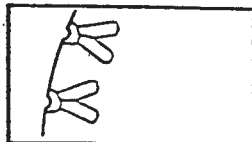


High rate milo/grain sorghum: 60 cells to meter seed sizes from 12,000 to 18,000 seeds per pound (Red color-coded).

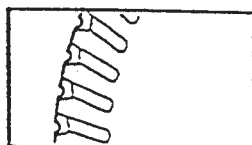

High rate large milo/grain sorghum: 60 cells to meter seed sizes from 10,000 to 14,000 seeds per pound (Yellow color-coded).

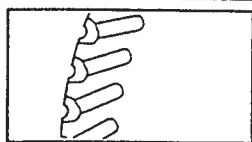


Cotton, acid-delinted: 30 cells to meter seed sizes from 4200 to 5200 seeds per pound (White color-coded).

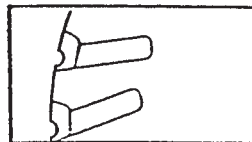


Large cotton, acid-delinted: 36 cells to meter seed sizes 3800 to 4400 seeds per pound (Tan color-coded).



High rate cotton, acid-delinted: 48 cells to meter seed sizes 4200 to 5200 seeds per pound (Light green color-coded).

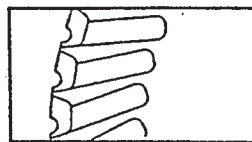

Hill-drop cotton, acid-delinted: 12 cells, 3 to 6 seeds/cell, to meter seed sizes from 4000 to 5200 seeds per pound (Brown color-coded).

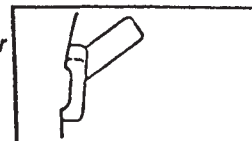

When installing the seed disc onto the meter hub, turn the disc counterclockwise while tightening the two wing nuts that retain the disc. The seed disc should have only slight resistance when rotated counterclockwise after wing nuts are tight.

The brush-type seed meter attaches to the seed hopper in the same manner as the finger pickup corn meter. Secure to bottom of seed hopper with two 5/16" flanged hex nuts. DO NOT OVER TIGHTEN.

Erratic seed spacing may result from misalignment between the drive coupler and seed meter input shaft. Misalignment may cause momentary stoppage of seed disc. Check alignment after initial installation. If adjustment is required, refer to "Meter Drive Adjustment" for correct procedure.

IMPORTANT: Use powdered graphite or talc with each hopper fill of seed. Additional graphite or talc may be required to retard buildup of seed treatments on meter components. Frequency of monitor seed tube cleaning may be affected due to use of additional graphite or talc.

53761-1



One tablespoon of powdered graphite per hopper fill of seed should be added to the seed each time the hopper is filled. This prolongs the life of the seed meter components, reduces buildup of seed treatment on components in the meter and improves seed spacing.

ROW UNIT OPERATION

Talc seed lubricant may be used in lieu of graphite to reduce seed treatment buildup on seed disc and meter components and will improve meter performance. Coat seed disc and brushes with talc before installing meter. Fill hopper 1/2 full of seed, add 1/4 cup of talc and mix thoroughly. Finish filling hopper, add another 1/4 cup of talc and mix thoroughly. Adjust rate of talc use as needed so all seeds are coated, while avoiding a buildup of talc in the bottom of the hopper. Humid conditions and/or small sized seeds with extra seed treatment may require as much as one cup of talc per hopper to prevent seed treatment buildup on seed discs and/or brushes.

CAUTION: Some liquid seed treatments or inoculants may create buildup on the seed disc or brush. Check frequently for proper population and/or seed delivery when using any liquid seed treatment. All seed treatment should be thoroughly mixed with the seed per the manufacturers' recommendations. Seed treatment dumped on top of the seed after the hopper is filled, and not mixed properly will cause bridging of the seed in the meter, reducing population or stopping the meter from planting. Additional graphite or talc may be required to retard buildup of seed treatments on meter components.

IMPORTANT: Foreign material, such as hulls, stems, etc., may affect seed delivery. Clean seed is required to ensure accurate seed metering from the brush-type seed meter. Seed discs should be removed daily to check for buildup of foreign material, such as hulls, in the seed meter or the brushes.

Refer to the planting rate charts in this manual for recommended seed drive transmission sprocket combinations.

SEED HOPPER

60620-69



The seed hopper has a capacity of 1.6 bushels.


When filling the seed hopper use clean seed and make certain there are no foreign objects in the hopper. **Replace hopper lids after hoppers are filled to prevent the accumulation of dust or dirt in the seed meter which will cause premature wear.** See "Finger Pickup Corn Meter Lubrication" and/or "Brush-Type Seed Meter Lubrication".

Periodically empty the hoppers completely to remove any foreign objects and ensure proper seed meter operation. To empty hopper, disengage drive release and hopper latch and lift hopper off the hopper support. See "Meter Drive Release".

ROW UNIT OPERATION

GRANULAR CHEMICAL HOPPER

61766-2

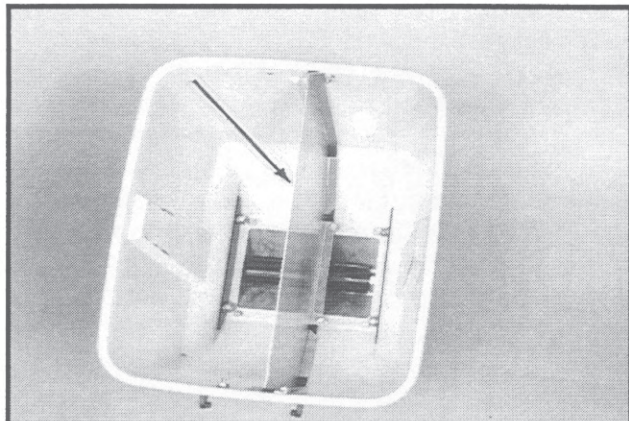

The granular chemical hopper has a 70 pound capacity. With the use of a hopper divider the hopper has two compartments with a 35 pound capacity in each.


Be sure no foreign objects get into the hopper when it is being filled. Replace the hopper lids after filling the hoppers to prevent the accumulation of dirt and moisture buildup.

The metering gate located on the bottom of the hopper regulates the application rate. See "Dry Insecticide and Dry Herbicide Application Rate Charts" in this manual. Calibrate using the chemical manufacturer's instructions.

! DANGER: Agricultural chemicals can be dangerous. Improper selection or use can seriously injure persons, animals, plants, soil or other property. **BE SAFE:** Select the right chemical for the job. Handle it with care. Follow the instructions on the container label.

The granular chemical clutch drive coupler and meter shaft can be disengaged and engaged by turning the throwout knob located at the rear of the hopper support panel. To engage the drive, turn the knob 1/4 turn clockwise. To disengage the drive, turn the knob 1/4 turn counterclockwise. Slotted holes in the hopper support panel and clutch housing allow for alignment adjustment between the clutch drive coupler and meter shaft.

54948-18

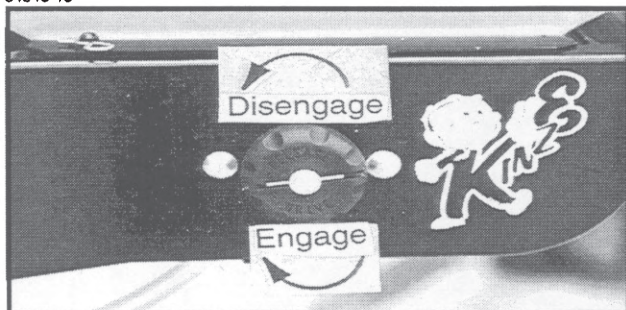


SEED METER DRIVE ADJUSTMENT

IMPORTANT: The seed meter drive coupler must be properly aligned with the meter input shaft.

Improper alignment between the drive coupler and input shaft of the meter can cause the meter housing to flex as the meter rotates. This continual flexing of the meter housing can cause damage to the housing. Any time the hopper support panel is removed or replaced vertical and horizontal alignment should be checked.

61658-27

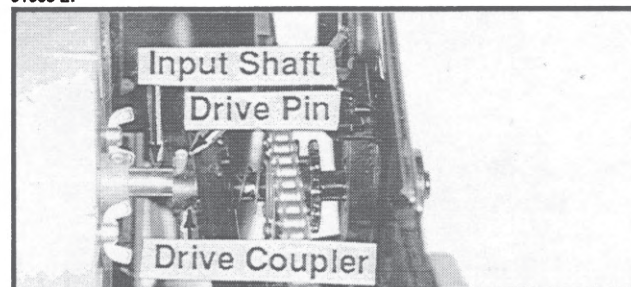


To check alignment:

- Inspect meter input shaft to make sure drive pin is centered.
- Install hopper with meter onto support panel. Latch hopper.
- Rotate meter input shaft so drive pin is vertical.
- Rotate drive clutch so slots in coupler are vertical.
- Engage clutch.
- Clutch coupler should engage meter shaft freely with equal amount of pin extending beyond each side of drive coupler.
- Disengage clutch.
- Rotate both meter shaft and drive clutch to the horizontal position.
- Re-engage clutch.
- Clutch coupler should engage meter shaft freely with equal amount of pin extending beyond each side of drive coupler.

To adjust drive clutch:

- Slightly loosen both 5/16" cap screws.
- Move clutch assembly to correct any misalignment.
- Tighten both 5/16" cap screws.

60569-12

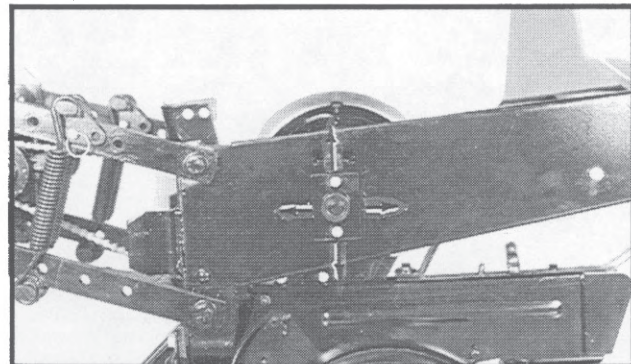


ROW UNIT OPERATION

ROW UNIT CHAIN ROUTING

For proper operation and to minimize wear, the row unit drive chains must be properly tensioned and aligned.


Inspect and replace weak, worn or broken springs and/or idlers and idler bushings.

60569-56

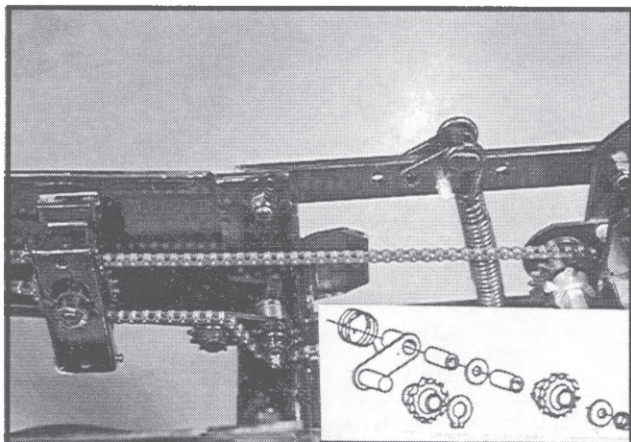


Row Unit Meter Drive

54948-12

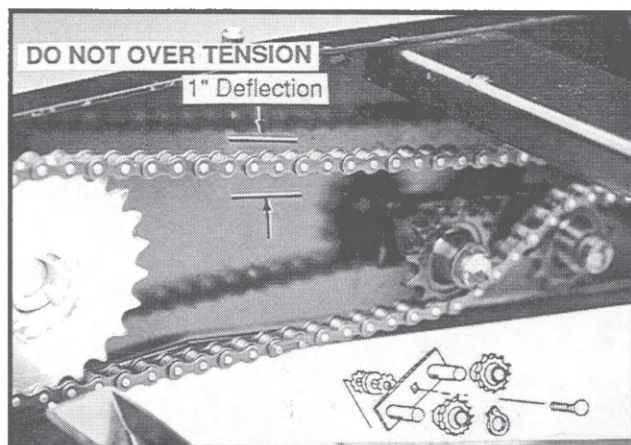

Row Unit Granular Chemical Drive

60569-46

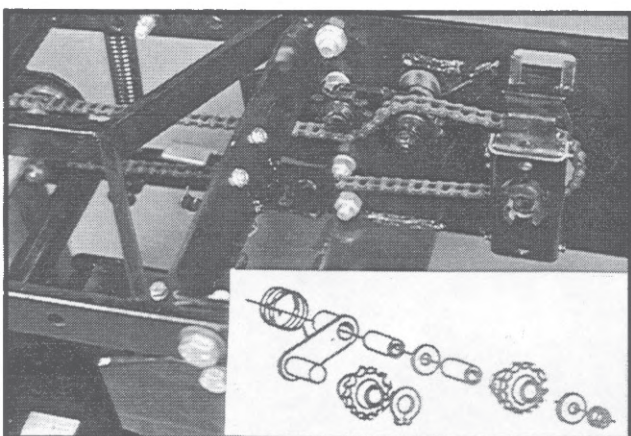


Push Unit Meter Drive

QUICK ADJUSTABLE DOWN FORCE SPRINGS

Quick adjustable down force springs are designed to increase penetration in hard soil and keep the row unit from bouncing in rough field conditions.


Two springs per row, one on the L.H. parallel arms and one on the R.H. parallel arms, are used unless equipped with row unit mounted no till coulters. Four springs per row are used with row unit mounted no till coulters. Two springs per row are used with frame mounted coulters, row unit mounted and frame mounted disc furrowers and row unit mounted bed levelers.

61703-4

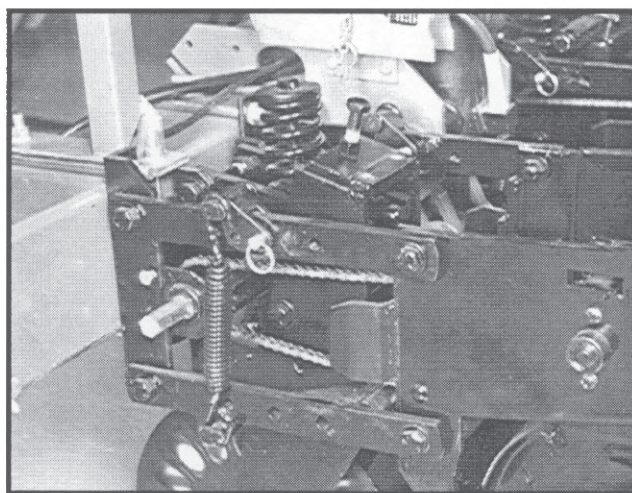

Two Springs Per Row (Dual)

60569-33

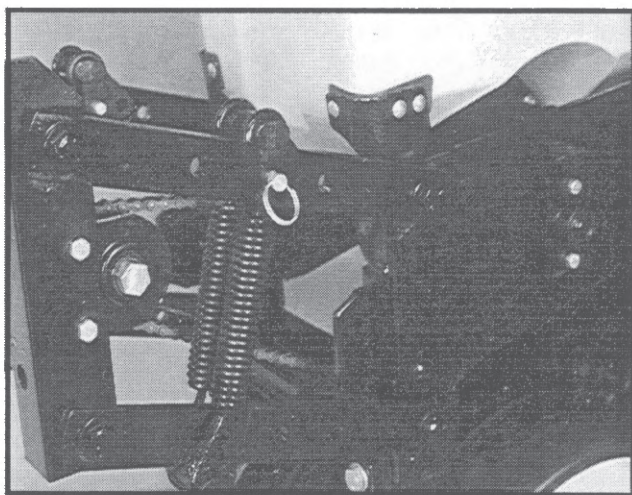


Four Springs Per Row (Quad)
(Used only in conjunction with row unit mounted no till coulters)


ROW UNIT OPERATION

There are four positions for spring tension adjustment. Position one allows for minimum down pressure and position four for maximum down pressure.


L0096

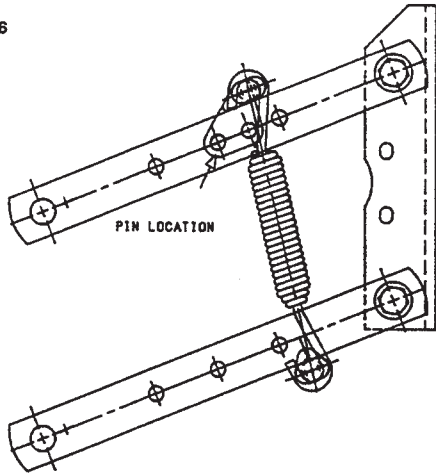


Position 1

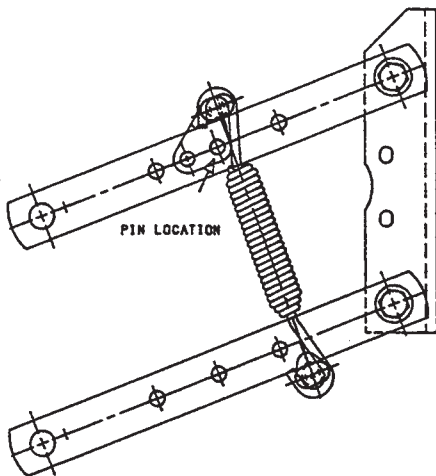

Position 2

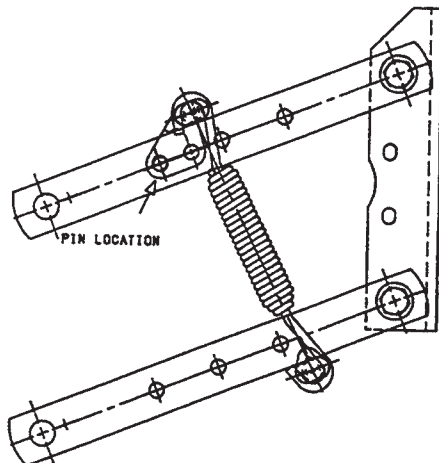

Position 3

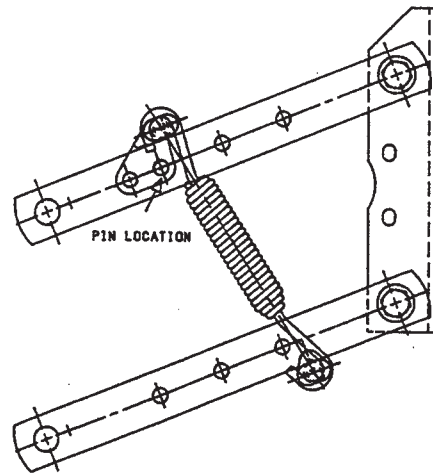

Position 4

To adjust spring tension, raise planter and remove spring mount pin at top of spring. Slide mount to desired position and install pin.

NOTE: It is necessary for the operator to adjust springs according to field conditions. If springs are adjusted for too much down pressure for field conditions, it is possible for the row units to lift the planter to the extent that the drive wheels do not make sufficient contact. Too much down pressure in soft field conditions can cause the row unit to run too deep.



DANGER: Always install safety lockups or lower machine to the ground before working under or around the machine.

NOTE: Springs must always be installed with open side of spring hooks toward seed hopper to prevent binding on spring mount adjustment pin.


ROW UNIT OPERATION

FRAME MOUNTED COULTER

The frame mounted coulters are designed to allow required spring down pressure on the coulters for maximum penetration while exerting less load shock on the row unit.

The frame mounted coulters can be used with or without the depth control bar installed. In most applications, especially in rocky planting conditions, the depth control bar **should not be used**. Use of the depth control bar transfers down force from the coulters to the row unit making less down force available to the coulters blade.


56314-14

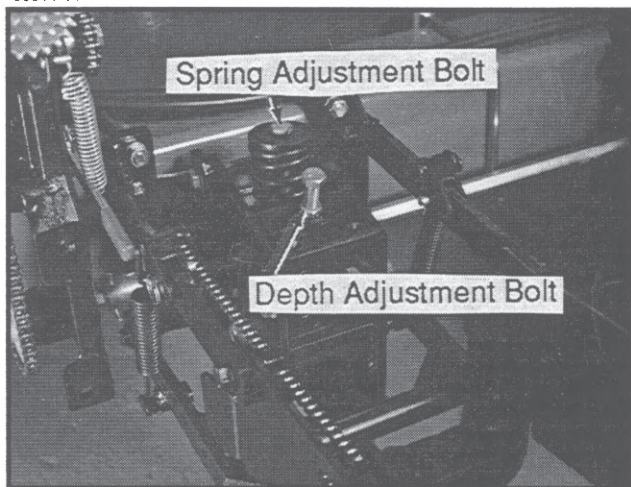

DEPTH ADJUSTMENT (Without Depth Control Bar Installed)

When the depth control bar is not used, operating depth of the coulters blade is determined by adjusting the depth adjustment bolt and positioning of the blade assembly in the fork mount. The depth adjustment bolt will stop downward travel of the coulters arm assembly. One turn of the adjusting bolt will change depth setting approximately 1/4". Initial setting of the depth adjustment bolt should be with approximately 1 3/8" of thread showing. With this setting and the bar height at 21", the coulters depth will be approximately 2" with coulters mounting spindle in top hole. Turn the adjustment bolt clockwise to decrease operating depth. Turn the depth adjustment bolt counterclockwise to increase operating depth.

56314-16

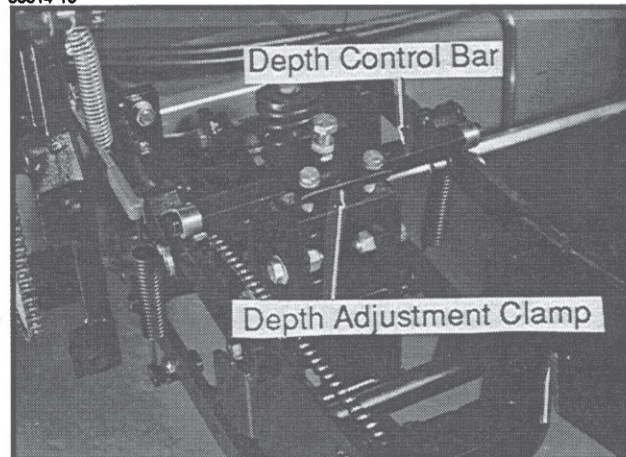


In certain applications it is desirable to use the depth control bar. In uneven terrain, use of the depth control bar allows greater depth control. The up and down movement of the row unit allows the coulters to move up and down at a rate of approximately 1/2 that of the row unit, maintaining a more uniform operating depth. When using the disc furrower attachment, the depth control bar should always be used as operating depth of the coulters is critical for the disc furrowers to operate with minimal gouging.

DEPTH ADJUSTMENT (With Depth Control Bar Installed)

When using the depth control bar, down force springs must be located in the forward position and the depth adjustment bolt used only to attach the depth adjustment clamp to the coulters assembly. Operating depth of the coulters blade is adjusted by positioning the blade assembly in the fork mount. Four blade mounting adjustment positions are available at 1/2" increments. Initial position of the blade assembly should be the top hole. This position will locate the coulters blade approximately 1/4" shallower than the row unit opener blade. In heavy residue it may be desirable to position the blade assembly in the second position to insure that the residue is cut and not forced down into the seed zone. Additional holes are used to compensate for coulters blade wear.

56314-1

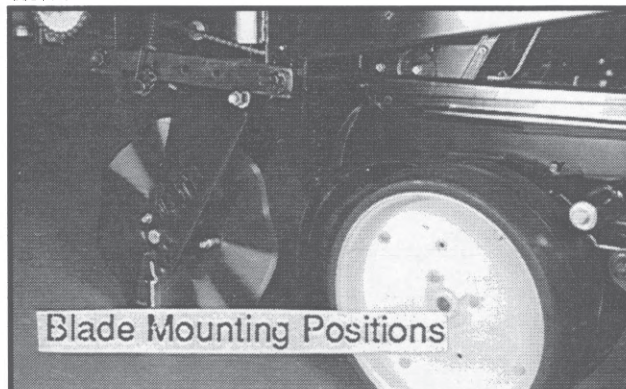


ROW UNIT OPERATION

Down force adjustment is made by tightening or loosening the spring adjustment bolt. With the planter in the raised position, turn the bolt clockwise to increase down force or counterclockwise to decrease down force. Set all rows equally.

Compressed Spring Length (Including Washer)	Pounds Down Pressure With Blade 1/2" Above Maximum Down Position	Pounds Down Pressure With Blade 4" Above Maximum Down Position
13 5/16"	90	230
12 5/16"	190	330
Suggested initial setting		
11 5/16"	300	430


A5649rev.

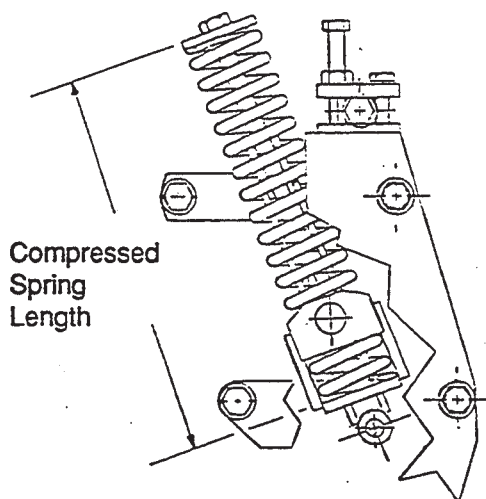

NOTE: Excessive down force may cause increased wear on components.

The coultter blade can be aligned with the row unit disc opener by moving the spacer washers from one side of the coultter blade hub to the other.

56314-12

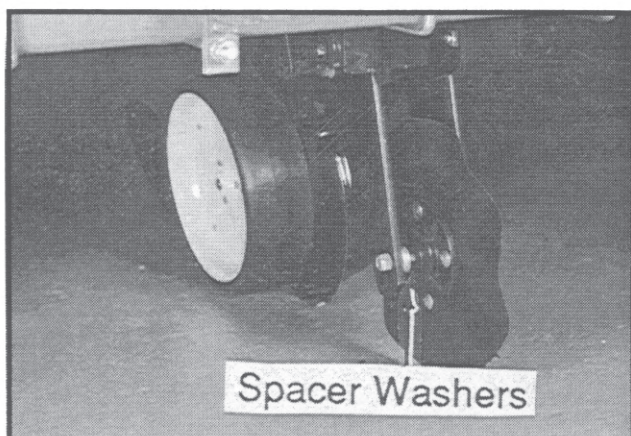

Field adjustment should be made as needed. Operating height of the planter frame will affect operating depth of the frame mounted coultter.

DISC FURROWERS

(For use with Frame Mounted Coultter)

Disc furrowers for use with the frame mounted coultter may be equipped with either 12" solid blades or 12" notched blades.

Disc furrowers are used to clear crop residue, dirt clods and dry soil from in front of the row units for a clean and smooth seed bed. Notched blades are used for heavier trash conditions. The notched blades cut crop residue and move it aside to prevent plugging or pushing the soil.


56314-19



Discs can be adjusted so front edges meet by adding spacer washers between the disc furrower arm and frame mounted coultter fork mount.

Slotted holes in the frame mounted coultter fork mount and in the disc furrower arm allow for vertical and horizontal adjustment. Discs can be adjusted so the front edges meet or one disc can be moved to the rear and the other to the front of the slot so cutting edge of one disc overlaps the edge of the other disc.

56314-17

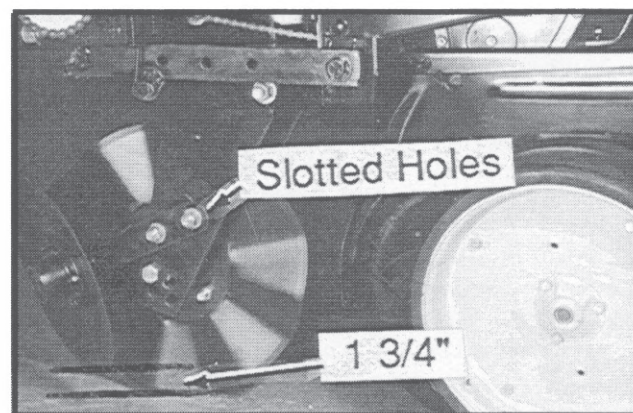

Initial setting for the disc furrowers is 1 3/4" shallower than the coultter blade. Further adjustment may be desired for various applications.

NOTE: The depth control bar should always be used when the frame mounted coultter is equipped with disc furrowers.


ROW UNIT OPERATION

ROW UNIT MOUNTED DISC FURROWER


The row unit mounted disc furrower may be equipped with either 12" solid blades or 12" notched blades.

Disc furrowers are used to clear crop residue, dirt clods and dry soil from in front of the row units for a clean and smooth seed bed. Notched blades are used for heavier trash conditions. The notched blades cut crop residue and move it aside to prevent plugging or pushing the soil.

59386-23

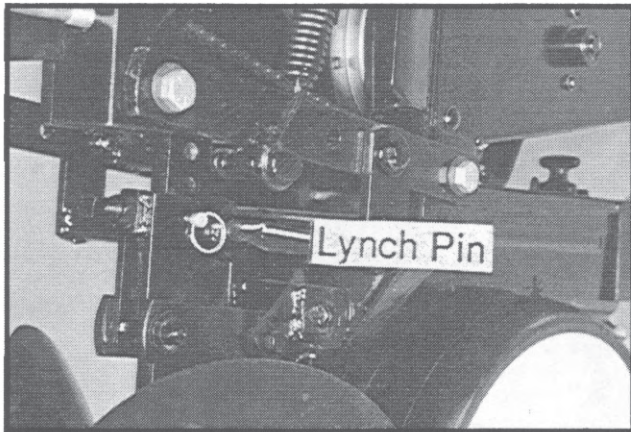

59386-20

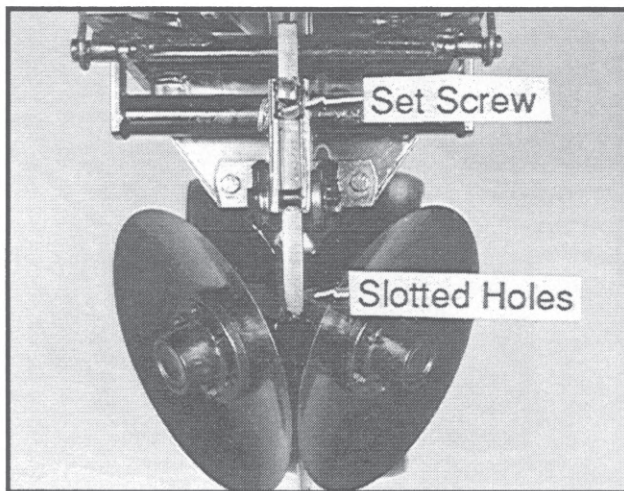


Vertical adjustment in 1/3" increments is possible by removing the lynch pin which secures the vertical support arm and moving the support arm up or down as required. Re-install lynch pin. Finer adjustment can be attained by removing the lynch pin and using the 5/8" x 2 1/4" set screw to clamp the support arm in the required position.


Slotted holes in the support arm where the discs are mounted allow fore and aft adjustment of the discs. Discs can be adjusted so the front edges meet or one disc can be moved to the rear and the other to the front of the slot so cutting edge of one disc overlaps the edge of the other disc. The dust cap must be removed to make these adjustments.

ROW UNIT MOUNTED BED LEVELER

59386-26

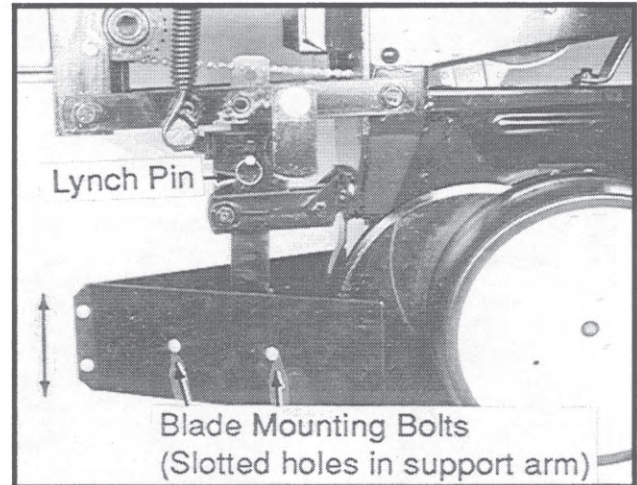

59386-30

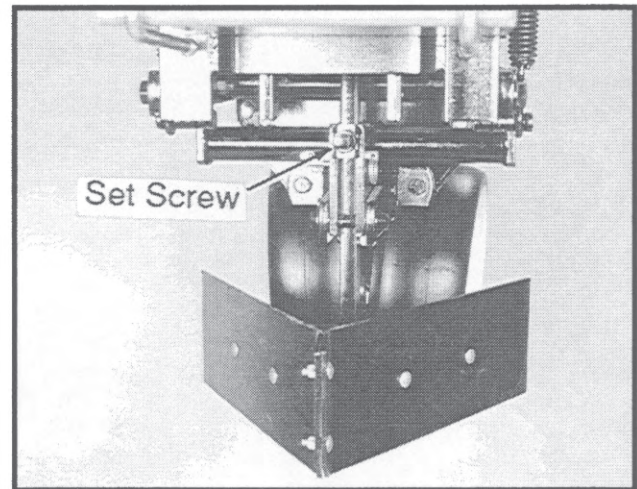

Vertical adjustment in 1/3" increments is possible by removing the lynch pin which secures the vertical support arm and moving the support arm up or down as required. Re-install lynch pin. Finer adjustment can be attained by removing the lynch pin and using the 5/8" x 2 1/4" set screw to clamp the support arm in the required position.


Slotted holes in the support arm where the blades are mounted allow tilting of the blades. The blades can be tilted up or down at the front for desired adjustment.

NOTE: The row unit mounted bed leveler is not compatible with row spacings less than 36".

ROW UNIT OPERATION

ROW UNIT MOUNTED NO TILL COULTER

60569-42

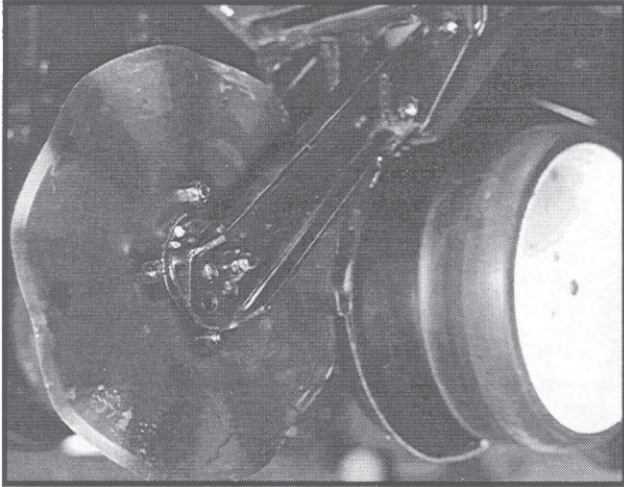

Row unit mounted no till coulters with 1" rippled, 1" fluted or 3/4" fluted blades may be used on plateless row units and interplant push row units. (1" fluted shown)

Four quick adjustable down force springs are required per row when using row unit mounted no till coulters. See "Quick Adjustable Down Force Springs".

For proper operation the coulters blade should be aligned in relation to the row unit double disc openers. The coulters assembly can be adjusted by loosening the four attaching bolts, moving coulters arm to align and tightening the four attaching bolts.

The coulters blade can be adjusted to one of four 1/2" incremental settings in the forked arm. Using the top adjustment hole places the 16" coulters blade approximately 1/4" shallower than the row unit disc opener. Using the second adjustment hole from the top places the coulters blade approximately 1/4" below the row unit disc opener. Using the third adjustment hole places the coulters blade approximately 3/4" below the row unit disc opener and using the bottom adjustment hole places the coulters blade approximately 1 1/4" below the row unit disc opener. Initially the blade should be set in the highest position. As the coulters blade wears or the disc opener blades wear or for various planting conditions the blade may be adjusted to one of the three lower settings.


It is most desirable to run the coulters blade 1/4" shallower than the row unit disc opener so it won't disturb the seed bed below the seed trench opened by the double disc opener.

In heavy residue it may be necessary to run the coulters blade deeper to insure cutting of residue and prevent pushing residue into the seed zone.

Operating depth can be checked by setting the planter down on a level concrete floor and checking the relationship between the coulters blade and row unit opener blade. Make sure the planter is level and coulters is square with the planter frame and aligned with the row unit disc opener.

ROW UNIT CHAIN SHIELD

RUB015/RUB016

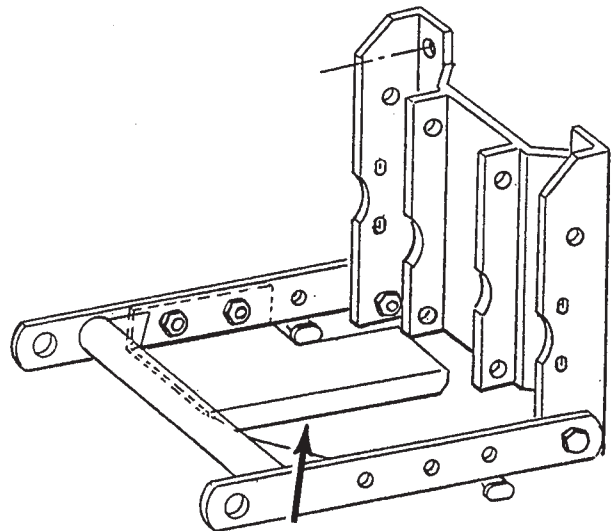


This row unit chain shield is designed for use on conventional row units when row unit mounted no till coulters are used. The shield **CAN NOT BE USED** on interplant push units or row units equipped with frame mounted coulters, row unit mounted disc furrowers or row unit mounted bed levelers.

The shield protects the row unit drive chain from damage caused by residue in no till conditions.

ROW UNIT OPERATION

DUAL GAUGE WHEEL

65249-11

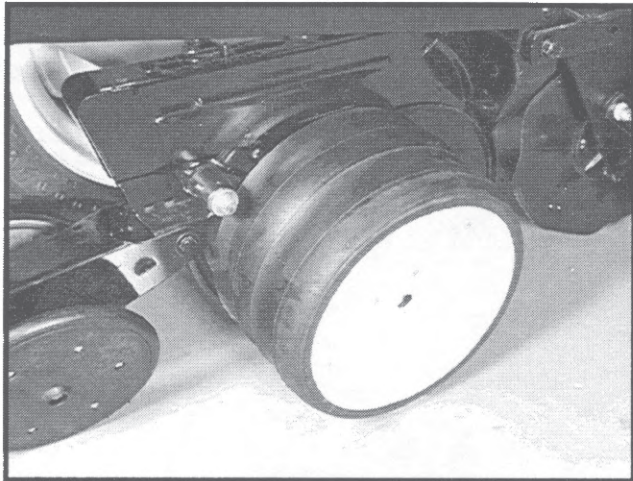


The dual gauge wheel is used to provide added width for additional row unit flotation in light sandy soil.

In some applications such as narrow row widths (less than 36") or where clearance is a problem, the added width of the dual gauge wheel may prevent its use.

ROW UNIT GAUGE WHEEL COVER


60607-37

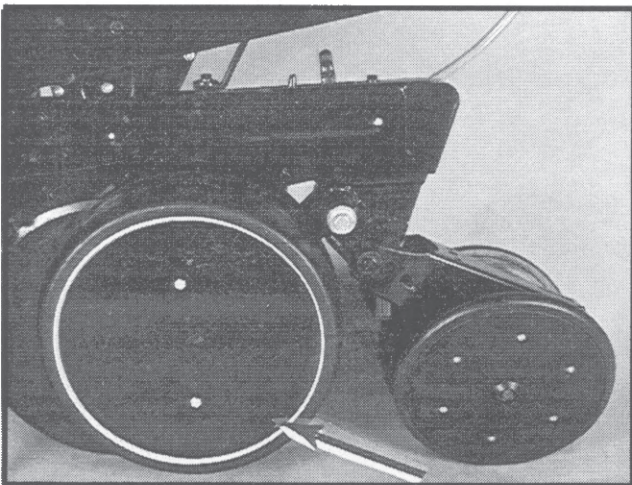

The row unit gauge wheel cover when installed on the gauge wheel next to the transport and/or drive wheel of the planter will aid in protecting the row unit from rock damage.

GRANULAR CHEMICAL RESTRICTOR PLATE

65249-18

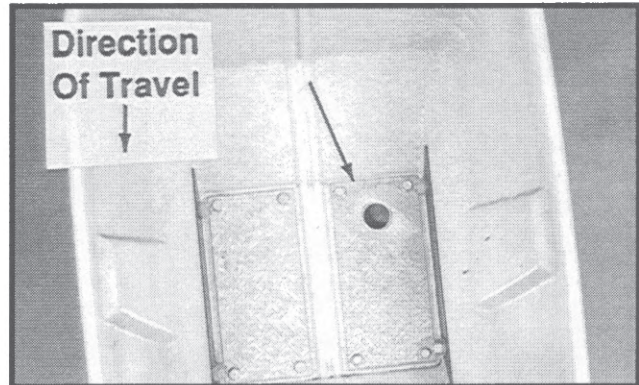

The granular chemical restrictor plate is designed for use in the granular chemical hopper when granular chemical application rates below 4 pounds are desired.


IMPORTANT: Check application rate of all rows in the field with the granular chemical you are using and at the speed and population at which you will be planting. See "Checking Granular Chemical Application Rate".

⚠ DANGER: Agricultural chemicals can be dangerous. Improper selection or use can seriously injure persons, animals, plants, soil or other property. **BE SAFE:** Select the right chemical for the job. Handle it with care. Follow the instructions on the container label.

SPRING TOOTH INCORPORATOR

The spring tooth incorporator smooths the soil behind the row unit and incorporates granular chemicals. The two mounting chains on each spring tooth incorporator should be adjusted so there is approximately 1/8" slack in the chain when the unit is lowered to planting position.

00138-17

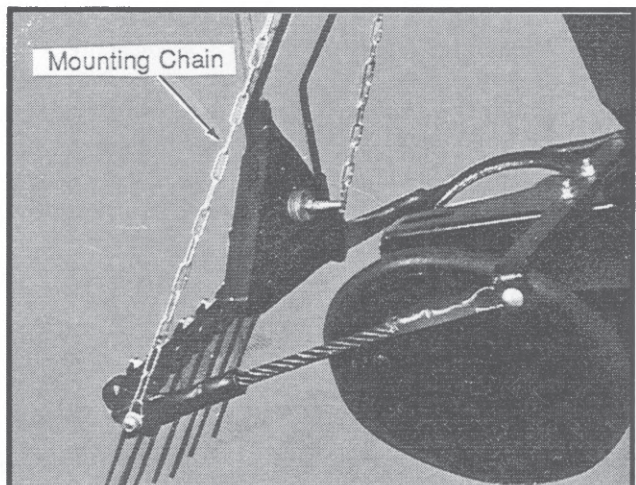

ROW UNIT OPERATION

CLOSING WHEEL TROUBLESHOOTING

Problem	Possible Cause	Solution
Closing wheels leave severe imprint in soil.	Too much closing wheel down pressure.	Adjust closing wheel pressure.
Closing wheels not firming soil around seed.	Insufficient closing wheel down pressure.	Adjust closing wheel pressure.
Closing wheel running on top of seed furrow.	Improper centering.	Align. See "Closing Wheel Lateral Adjustment".

BRUSH-TYPE SEED METER TROUBLESHOOTING

Problem	Possible Cause	Solution
Low count.	Meter RPM's too high.	Reduce planting speed.
	Misalignment between drive clutch and meter.	See "Meter Drive Adjustment".
	Seed sensor not picking up all seeds dropped.	Clean seed tube. Switch meter to different row. If problem stays with same row, replace sensor.
	Lack of lubrication causing seeds not to release from disc properly.	Use graphite or talc as recommended.
	Seed size too large for seed disc being used.	Switch to smaller seed or appropriate seed disc. See "Brush-Type Seed Meter" for proper seed disc for size of seed being used.
Low count at low RPMs and higher count at higher RPMs.	Seed treatment buildup in meter.	Reduce amount of treatment used and/or thoroughly mix treatment with seed.
	Foreign material lodged in upper brush.	Remove seed disc and remove foreign material from between brush holder and bristles. Clean with compressed air.
	Worn upper brush.	Replace.
Low count at higher RPMs and normal count at low RPMs.	Seed disc worn in the agitation groove area.	Replace disc.
High count.	Seed size too small for seed disc.	Switch to larger seed or appropriate seed disc.
	Incorrect seed rate transmission setting.	Reset transmission.
Upper brush layed back.	Seed treatment buildup on brush.	Remove brush. Wash with soap and water. Dry thoroughly before reinstalling.
	Buildup of foreign material at base of brush.	Remove brush holder and brush. Clean with compressed air. Reinstall.

ROW UNIT OPERATION

FINGER PICKUP CORN METER TROUBLESHOOTING

Problem	Possible Cause	Solution
One row not planting seed.	Drive release not engaged. Foreign material in hopper. Seed hopper empty. Pin sheared in drive release sprocket.	Engage drive release mechanism. Clean hopper and finger carrier mechanism. Fill seed hopper. Replace pin. Inspect meter for obstructions or defective parts.
	Row unit drive chain off of sprocket or broken.	Check drive chain.
Drive release does not engage properly.	Drive release shaft is not aligned properly with meter drive shaft.	Align drive mechanism. See "Meter Drive Adjustment".
Unit is skipping.	Foreign material or obstruction in meter. Finger holder improperly adjusted. Broken fingers. Planting too slowly.	Clean out and inspect. Adjust to proper setting. (22 to 25 in. lbs. rolling torque) Replace fingers and/or springs as required. Increase planting speed to within recommended range.
Planting too many doubles.	Planting too fast. Loose finger holder. Worn brush in carrier plate.	Stay within recommended speed range. Adjust to specs. (22 to 25 in. lbs. rolling torque) Inspect and replace if necessary.
Over planting.	Worn carrier plate.	Inspect and replace if necessary.
Under planting.	Belt installed backwards. Weak springs. Spring not properly installed. Seed belt catching or dragging. Brush dislodging seed.	Remove and install correctly. Replace. Remove finger holder and correct. Replace belt. Replace brush.
Irregular or incorrect seed spacing.	Driving too fast. Wrong tire pressure. Drive wheels slipping. Wrong sprockets.	Check chart for correct speed. Inflate tires to correct air pressure. Reduce down pressure on row unit down force springs. Check seed rate charts for correct sprocket combinations.
Seed spacing not as indicated in charts.	Wrong tire pressure. Inconsistent seed size. Wrong sprockets. Charts are approximate. Stiff or worn drive chains.	Inflate tires to correct air pressure. Do field check and adjust sprockets accordingly. Check chart for correct sprocket combination. Slight variations due to wear in meter components and tire slippage due to field conditions may produce seed spacing variations. Replace chains.
Scattering of seeds.	Planting too fast. Seed tube improperly installed. Seed tube worn or damaged.	Reduce planting speed. Check seed tube installation. Replace seed tube.
Seed tubes and/or openers plugging.	Allowing planter to roll backward when lowering.	Lower planter only when tractor is moving forward.
Inconsistent seed depth.	Rough seed bed. Partially plugged seed tube. Seed tube improperly installed.	Adjust down pressure springs. Reduce planting speed. Inspect and clean. Install properly.

LUBRICATION

The following pages show the locations of all lubrication points. Proper lubrication of all moving parts will help ensure efficient operation of your KINZE planter and prolong the life of friction producing parts.

⚠ DANGER: Always install safety lockups or lower to the ground before working under the machine.

LUBRICATION SYMBOLS




Lubricate at frequency indicated with an SAE multipurpose type grease.



Lubricate at frequency indicated with a high quality SAE 10 weight oil or a quality spray lubricant.

SEALED BEARINGS


60569-33

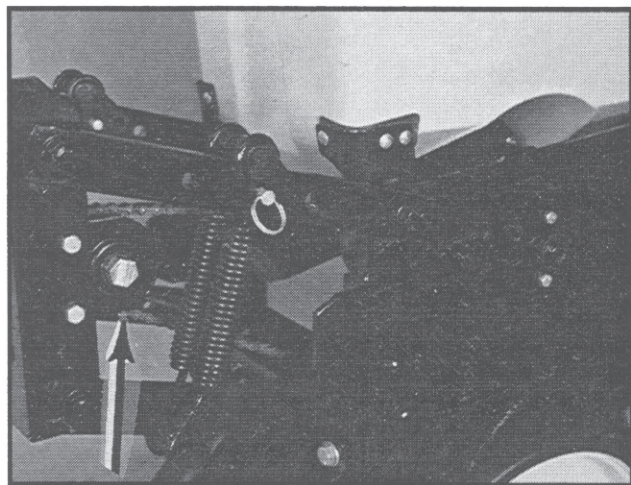


A number of sealed bearings are used on your KINZE planter to provide trouble free operation. These are located in such areas as the drive shaft, row units and transmission bearings. Sealed bearings are lubricated for life, and due to the seals, relubrication is not practical.

DRIVE CHAINS


61010-24

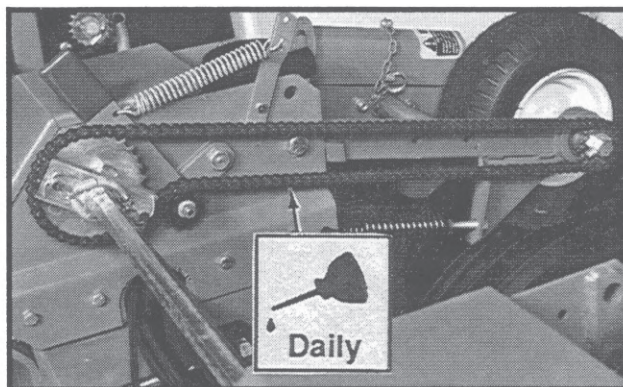

61010-42

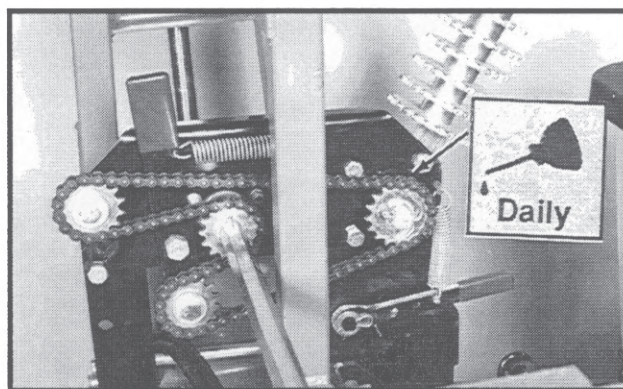

60569-56

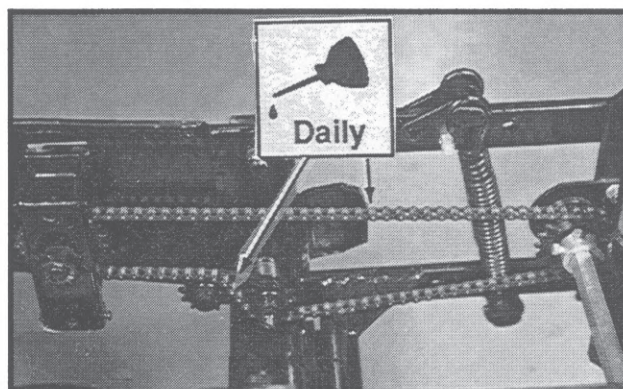

All transmission and drive chains should be lubricated daily with a high quality SAE 10 weight oil or a quality spray lubricant. Extreme operating conditions such as dirt, temperature or speed may require more frequent lubrication. If a chain becomes stiff, it should be removed, soaked and washed in solvent to loosen and remove dirt from the joints. Then soak the chain in oil so the lubricant can penetrate between the rollers and bushings.


LUBRICATION

BUSHINGS

Lubricate bushings at the frequency indicated.


Using a wrench, check each bolt for looseness. If bolt is loose, it should be removed and the bushing inspected for cracks and wear. Replace bushing if necessary. Only hardened flat washers should be used. Replace damaged flat washers with proper part. Torque bolt to 130 ft. lbs.

59386-43

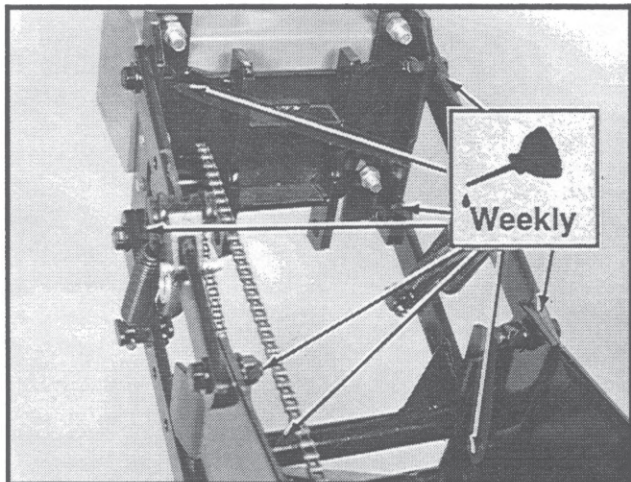

**Row Unit and/or Push Unit Parallel Arms
(8 per row)**


56314-8

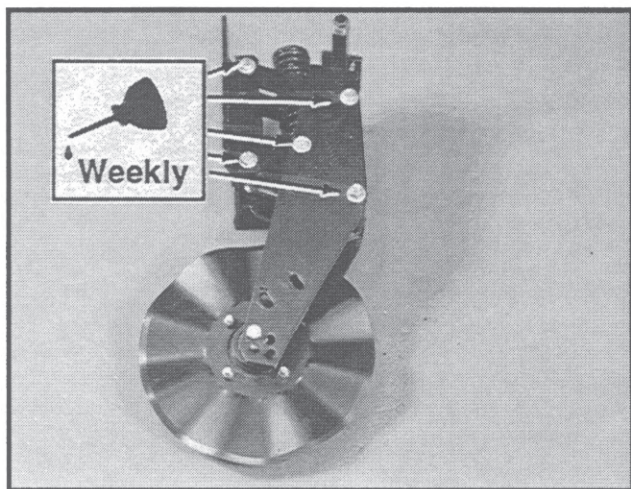

**Frame Mounted Coulter Parallel Links
(10 per row)**


Shown not installed on row unit for visual clarity.

59386-18

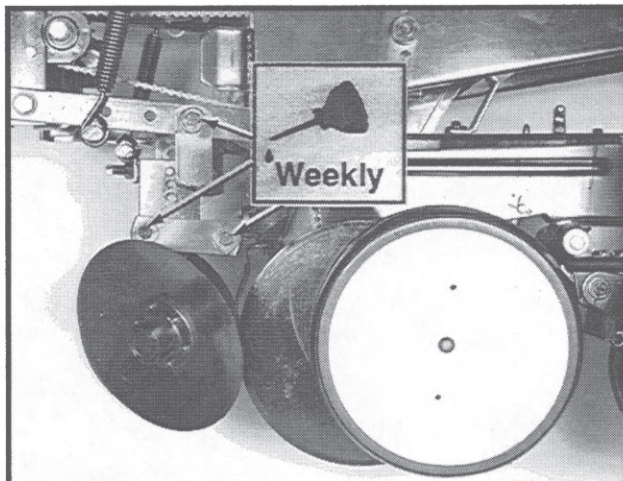

**Row Unit Mounted Disc Furrower Parallel Links
(6 per row)**

59386-26

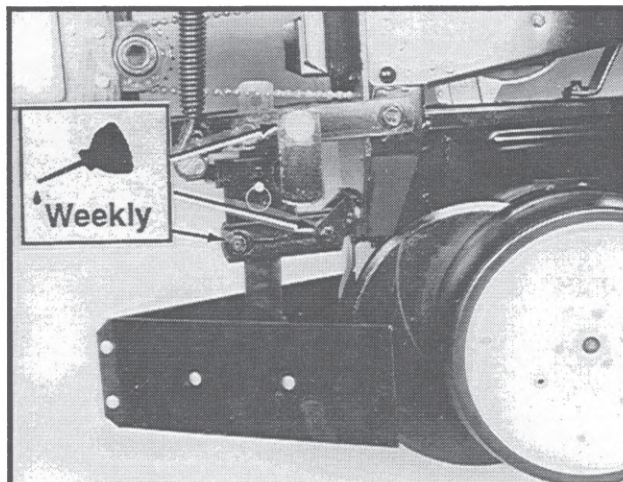

**Row Unit Mounted Bed Leveler Parallel Links
(6 per row)**


LUBRICATION

WHEEL BEARINGS

Wheel bearings should be repacked with clean, heavy duty axle grease approximately once a year or at the beginning of each planting season. This applies to all drive wheels, transport wheels and marker hubs. Follow the procedure outlined for wheel bearing replacement with the exception that bearings and bearing cups are reused.

LIQUID FERTILIZER PISTON PUMP

69045-6

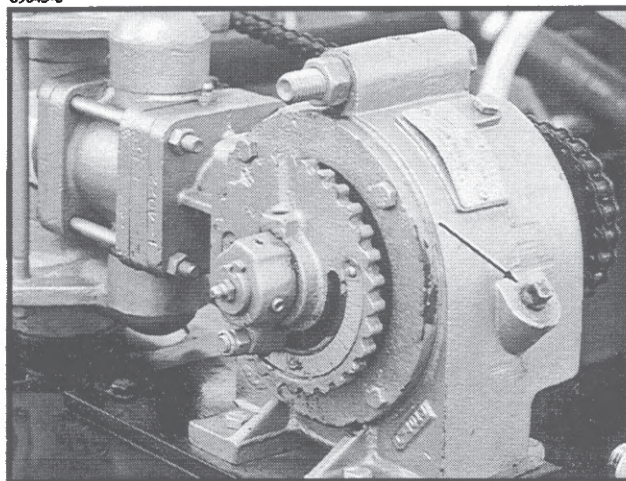

Check crankcase oil daily and maintain at plug level. Fill as needed with EP 90 weight gear oil.

Refer to operator and instruction manual shipped with the pump and flow divider for additional information.


GREASE FITTINGS

Those parts equipped with grease fittings should be lubricated at the frequency indicated with an SAE multipurpose type grease. Be sure to clean the fitting thoroughly before using grease gun. The frequency of lubrication recommended is based on normal operating conditions. Severe or unusual conditions may require more frequent attention.



DANGER: Always install safety lockups or lower to the ground before working under or around the machine.


59542-23a

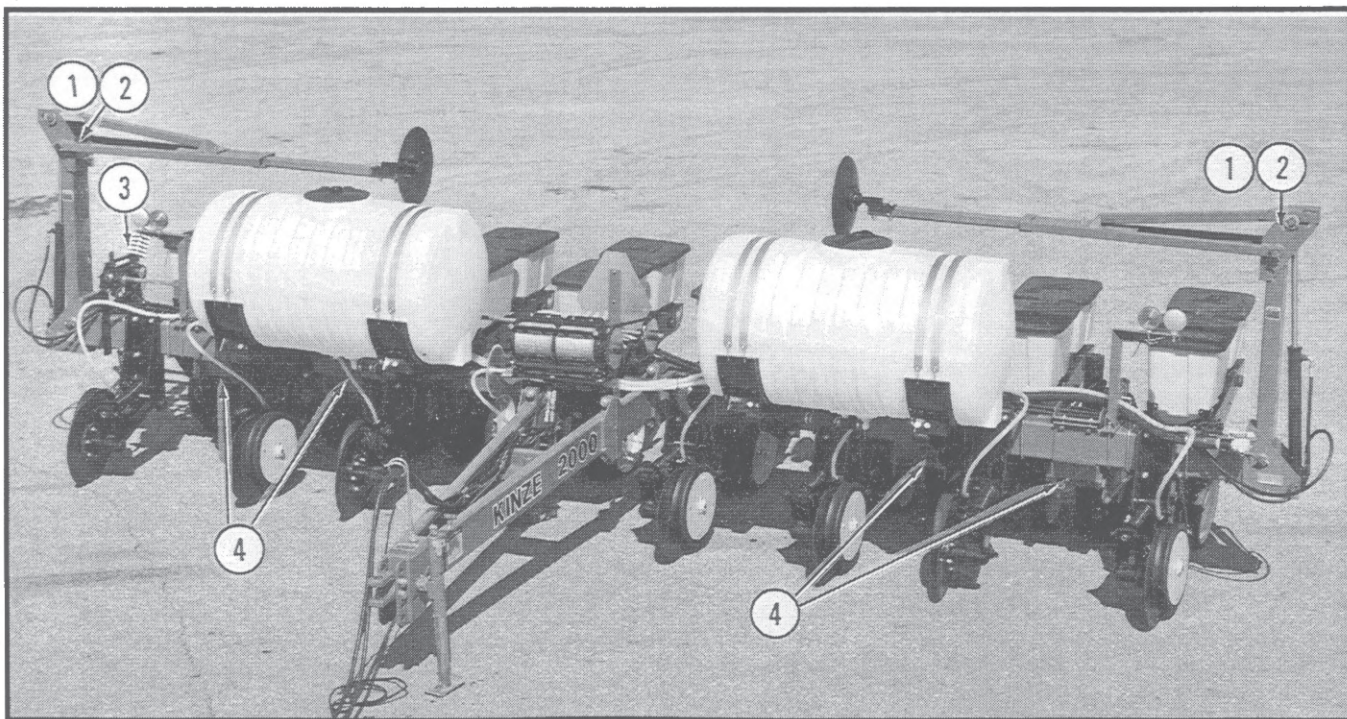

8 row model shown with liquid fertilizer attachment with optional squeeze pump and single disc fertilizer openers


LUBRICATION

46331-86

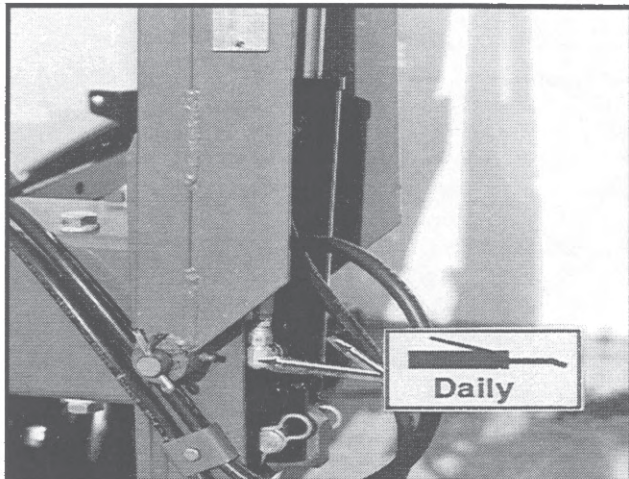


1. Conventional Marker Assembly - 4 Zerks Per Assembly

53704-18

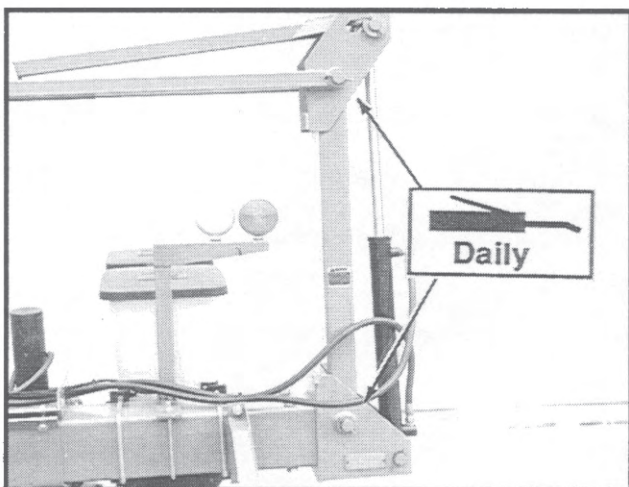


2. Low Profile Marker Assembly - 2 Zerks Per Assembly

61010-28

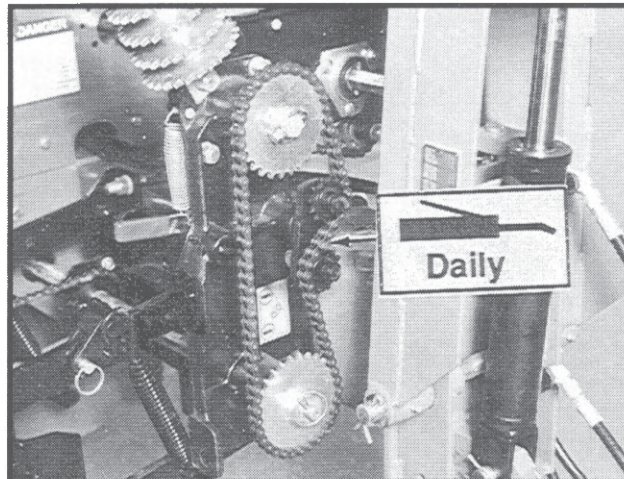

3. Transmission Assembly - 1 Zerk (Idler)

46331-83

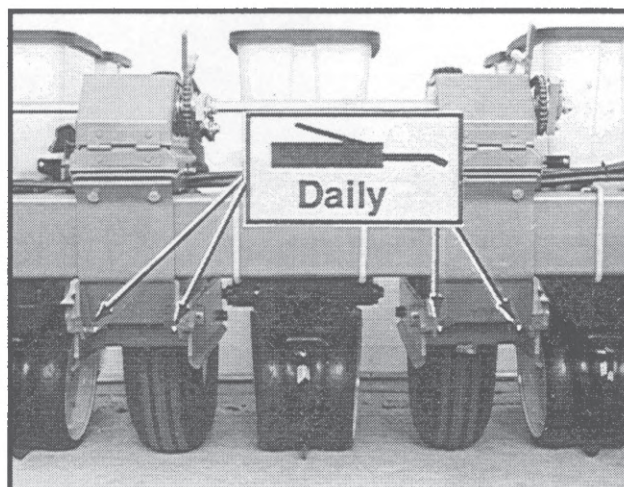


4. Wheel Module Assembly - 2 Zerks Per Module

LUBRICATION


Row Unit

50677-13

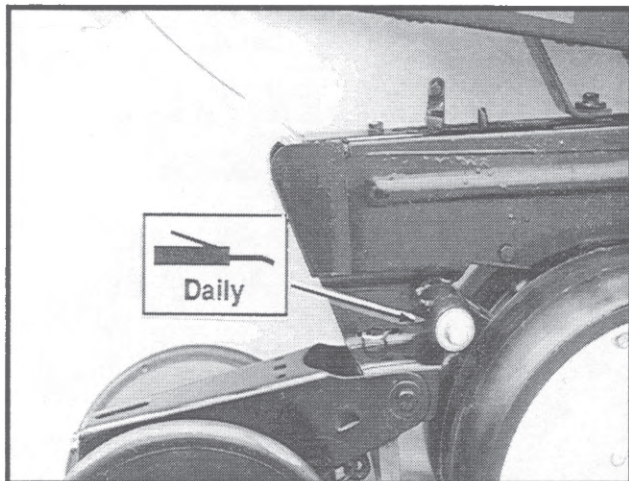


Gauge Wheel Arm - 1 Zerk Per Arm

56673-6

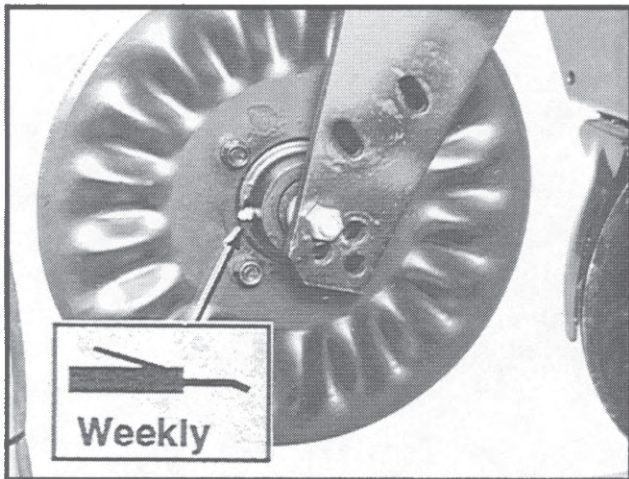

Frame Mounted Coulter Hub - 1 Zerk Per Hub

60569-42

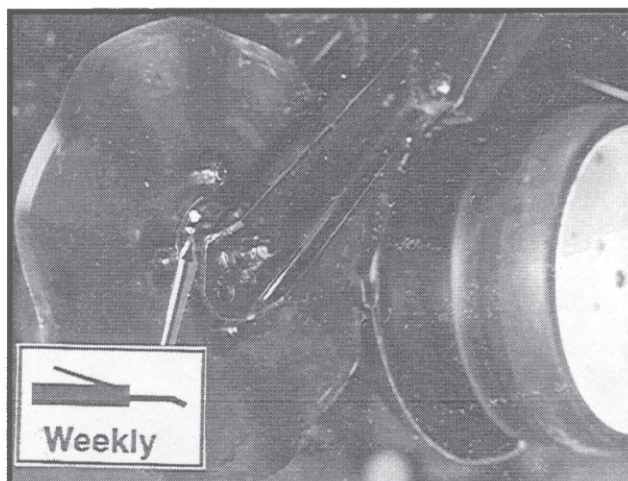


Row Unit Mounted No Till Coulter Hub - 1 Zerk Per Hub

LUBRICATION


Dry Fertilizer Attachment

61111-28

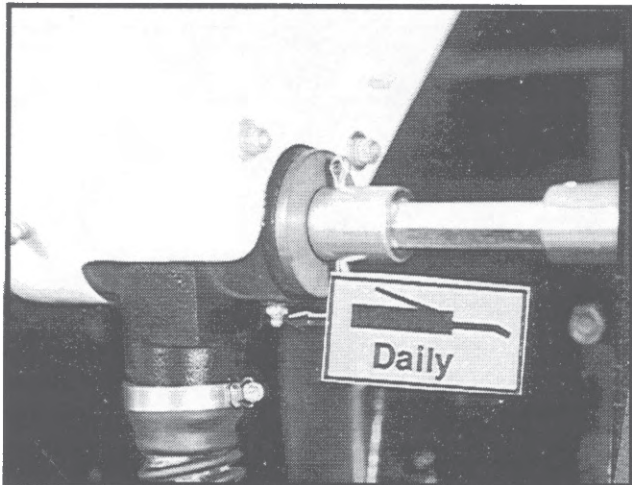

Fertilizer Hopper - 2 Zerks Per Hopper


61111-7

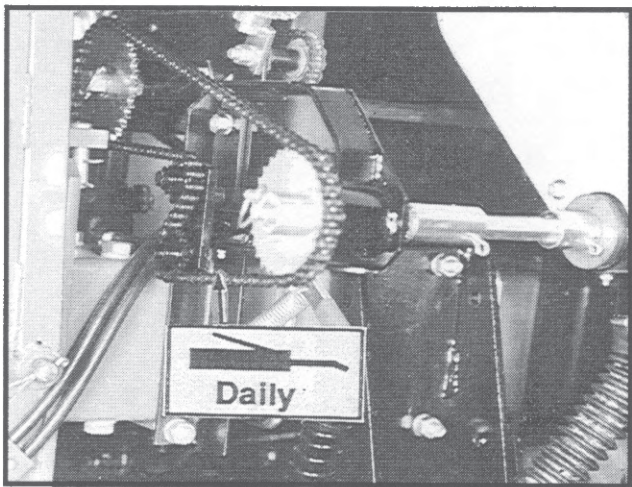

Fertilizer Transmission - 1 Zerk Per Transmission


Liquid Fertilizer Attachment

61010-6

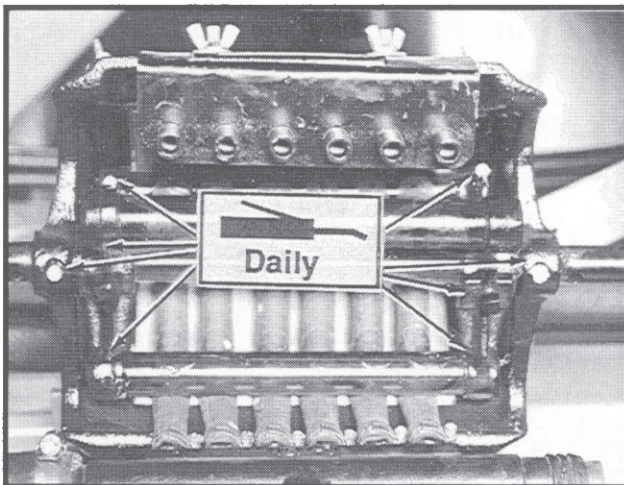

Squeeze Pump - 8 Zerks Per Pump

61010-6

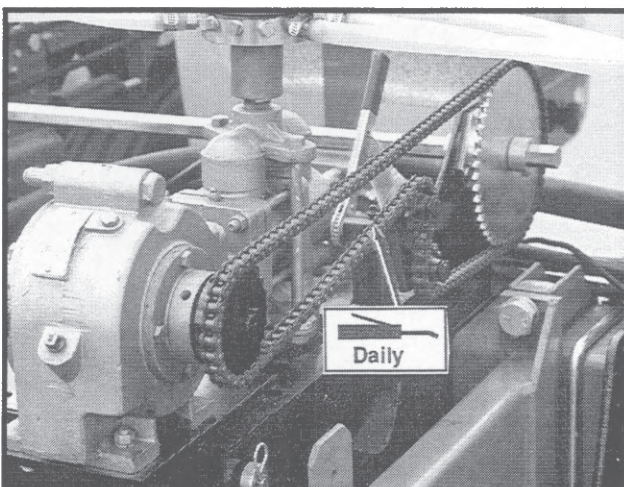


Piston Pump Drive Chain Idler - 1 Zerk


LUBRICATION

Single Disc Fertilizer Opener

60389-58

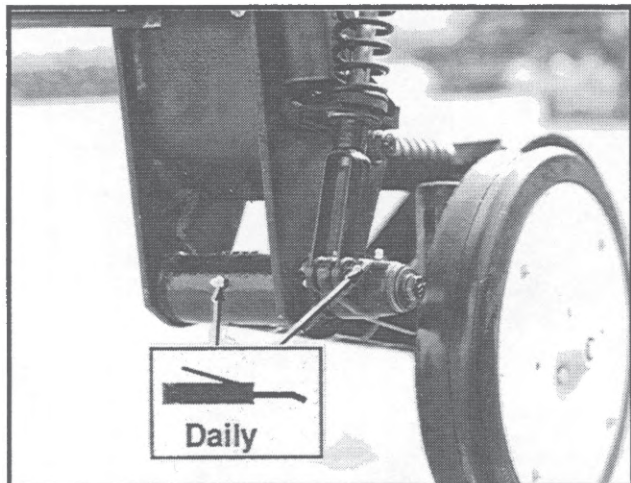


60389-60

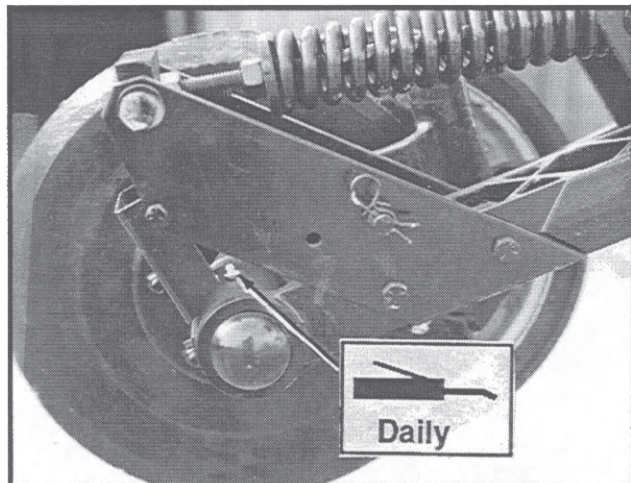

Single Disc Fertilizer Opener - 3 Zerks Per Opener


Interplant Attachment

61048-42

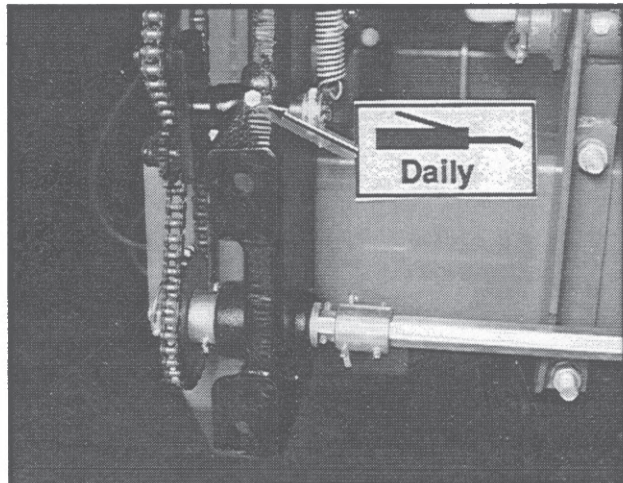


Push Unit Transmission Assembly - 1 Zerk (Idler)

61048-45

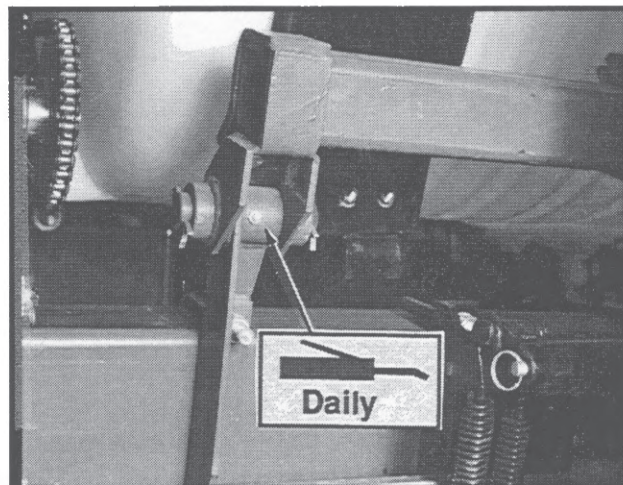

Rock Shaft End Mount - 1 Zerk Per Mount

61048-2

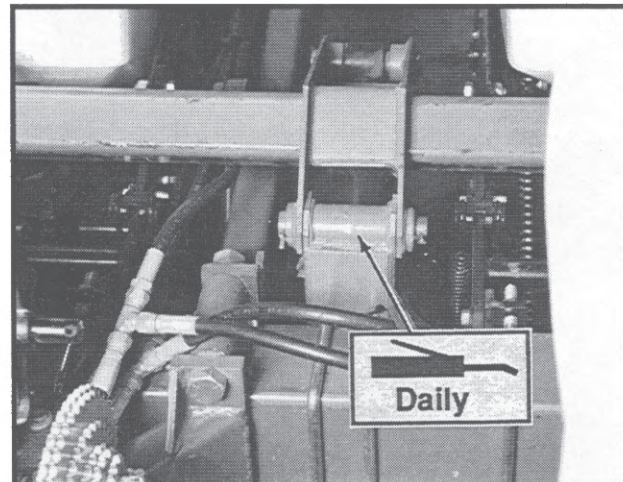

Rock Shaft Cylinder Mount - 1 Zerk Per Mount

MAINTENANCE

MOUNTING BOLTS AND HARDWARE

Before operating the planter for the first time, check to be sure all nuts and bolts are tight. Check all nuts and bolts again after approximately the first 50 hours of operation and at the beginning of each planting season thereafter.

All bolts used on the KINZE planter are Grade 5 (high strength) unless otherwise noted. Refer to the torque values chart when tightening bolts.

NOTE: Over tightening bolts can cause as much damage as under tightening. Tightening a bolt beyond the recommended range can reduce its shock load capacity.

WARNING: Before operating the planter for the first time and periodically thereafter, check to be sure the lug nuts on the transport wheels are tight. This is especially important if the planter is to be transported for a long distance.

TORQUE VALUES CHART - PLATED HARDWARE

Bolt Diameter	Grade 2		Grade 5		Grade 8	
	Coarse	Fine	Coarse	Fine	Coarse	Fine
1/4"	50 In. Lbs.	56 In. Lbs.	76 In. Lbs.	87 In. Lbs.	9 Ft. Lbs.	10 Ft. Lbs.
5/16"	8 Ft. Lbs.	9 Ft. Lbs.	13 Ft. Lbs.	14 Ft. Lbs.	18 Ft. Lbs.	20 Ft. Lbs.
3/8"	15 Ft. Lbs.	17 Ft. Lbs.	23 Ft. Lbs.	26 Ft. Lbs.	33 Ft. Lbs.	37 Ft. Lbs.
7/16"	25 Ft. Lbs.	27 Ft. Lbs.	37 Ft. Lbs.	41 Ft. Lbs.	52 Ft. Lbs.	58 Ft. Lbs.
1/2"	35 Ft. Lbs.	40 Ft. Lbs.	57 Ft. Lbs.	64 Ft. Lbs.	80 Ft. Lbs.	90 Ft. Lbs.
9/16"	50 Ft. Lbs.	60 Ft. Lbs.	80 Ft. Lbs.	90 Ft. Lbs.	115 Ft. Lbs.	130 Ft. Lbs.
5/8"	70 Ft. Lbs.	80 Ft. Lbs.	110 Ft. Lbs.	125 Ft. Lbs.	160 Ft. Lbs.	180 Ft. Lbs.
3/4"	130 Ft. Lbs.	145 Ft. Lbs.	200 Ft. Lbs.	220 Ft. Lbs.	280 Ft. Lbs.	315 Ft. Lbs.
7/8"	125 Ft. Lbs.	140 Ft. Lbs.	320 Ft. Lbs.	350 Ft. Lbs.	450 Ft. Lbs.	500 Ft. Lbs.
1"	190 Ft. Lbs.	205 Ft. Lbs.	480 Ft. Lbs.	530 Ft. Lbs.	675 Ft. Lbs.	750 Ft. Lbs.
1 1/8"	265 Ft. Lbs.	300 Ft. Lbs.	600 Ft. Lbs.	670 Ft. Lbs.	960 Ft. Lbs.	1075 Ft. Lbs.
1 1/4"	375 Ft. Lbs.	415 Ft. Lbs.	840 Ft. Lbs.	930 Ft. Lbs.	1360 Ft. Lbs.	1500 Ft. Lbs.
1 3/8"	490 Ft. Lbs.	560 Ft. Lbs.	1100 Ft. Lbs.	1250 Ft. Lbs.	1780 Ft. Lbs.	2030 Ft. Lbs.
1 1/2"	650 Ft. Lbs.	730 Ft. Lbs.	1450 Ft. Lbs.	1650 Ft. Lbs.	2307 Ft. Lbs.	2670 Ft. Lbs.

NOTE: Unplated bolts should be torqued approximately 1/3 higher than the above values. Bolts having lock nuts should be tightened to approximately 50% of amounts shown in chart. Bolts lubricated prior to installation should be torqued to 70% of value shown on chart.



GRADE 2
No Marks



GRADE 5
3 Marks




GRADE 8
6 Marks

CHAIN TENSION ADJUSTMENT

The drive chains are spring loaded and therefore self-adjusting. The only adjustment needed is to shorten the chain if wear stretches the chain and reduces spring tension. The pivot point of these idlers should be checked periodically to ensure they will rotate freely.

Additional chain links can be found in the storage box located inside the wheel module.

61010-1

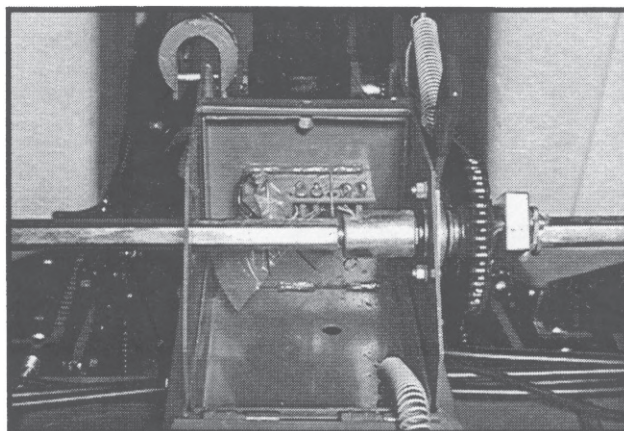


MAINTENANCE

FINGER PICKUP CORN METER INSPECTION/ADJUSTMENT


To inspect or service the finger pickup corn meter, remove the meter from the seed hopper by removing the two nuts which secure the mechanism to the hopper. Remove the baffle from the meter assembly by removing three cap screws. This will permit access to the finger pickup.

60620-8

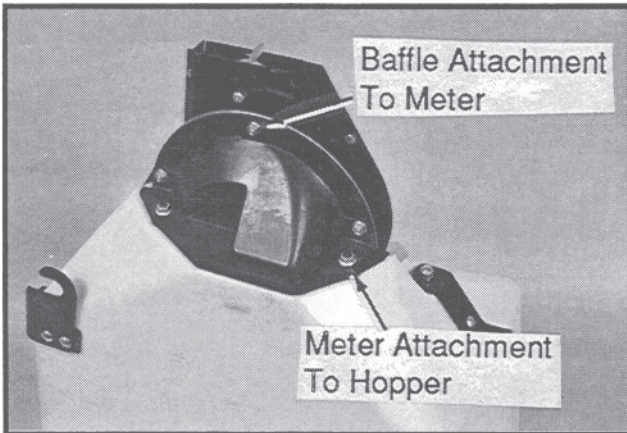

Rotate the seed meter drive by hand to ensure that the springs are holding the tabs of the fingers against the carrier plate where indicated in the photo and that the fingers are being raised in the correct area.


60620-17

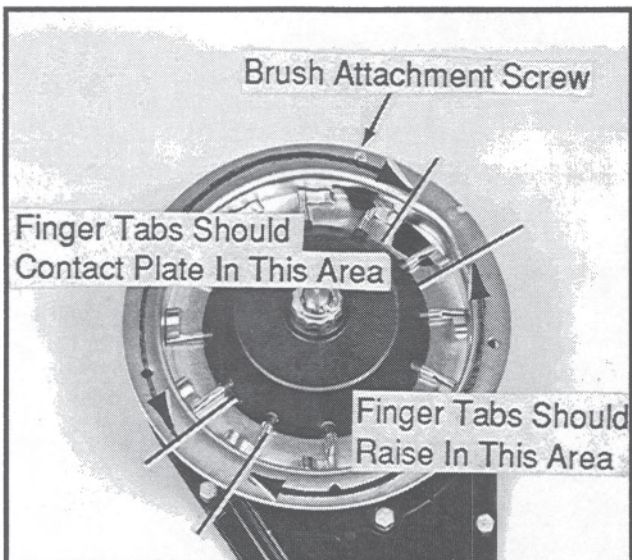

A build-up of debris or chaff may prevent proper finger operation and will require disassembly and cleaning of the corn meter as follows:

1. Remove cotter pin, lock nut and adjusting nut from drive shaft.
2. Carefully lift finger holder, along with fingers and cam, off of the shaft and clean.

60620-3

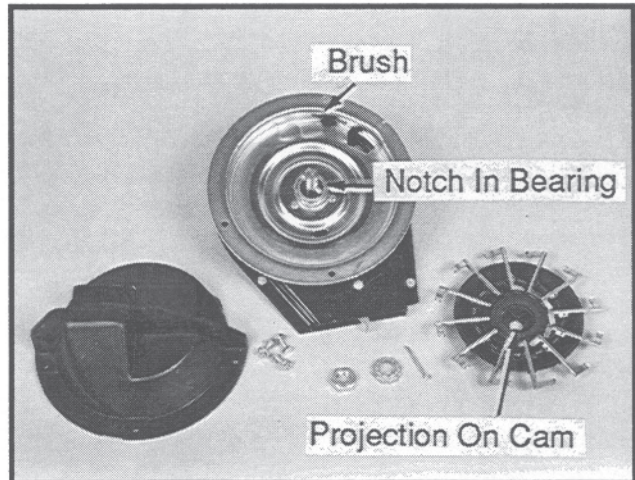

3. Check brush for wear and replace if necessary or following every 100 acres per row of operation.


EXAMPLE: Approximately 600 acres of corn on a 6 row machine or 800 acres on an 8 row machine.

NOTE: It is not necessary to remove finger holder to remove brush.

4. To replace fingers or springs, remove springs from fingers and remove finger from holder by lifting it out of the friction fit slot. Under average conditions, life expectancy of these parts should be 600-900 acres per row of operation.

5. After cleaning and/or replacing defective parts, reassemble the meter in the reverse order. When replacing fingers, make sure the open end of the spring loop is toward the inside of the finger holder.

60620-22

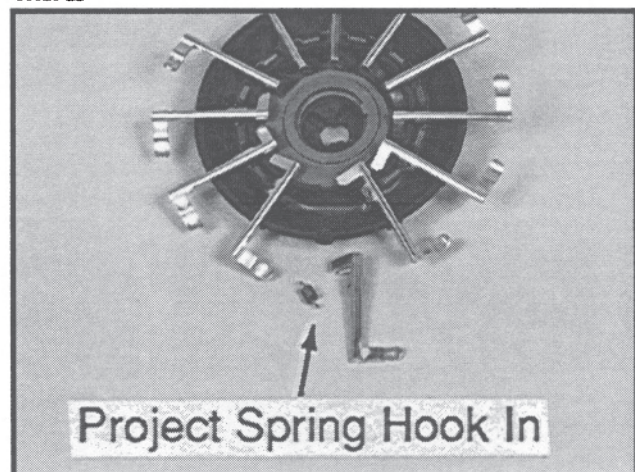

6. Make sure fingers are installed in holder so that holder will be positioned flush with the carrier plate when assembled. A projection on the cam is designed to align with a mating notch in the bearing housing to ensure proper operation when assembled.

MAINTENANCE

50725-4

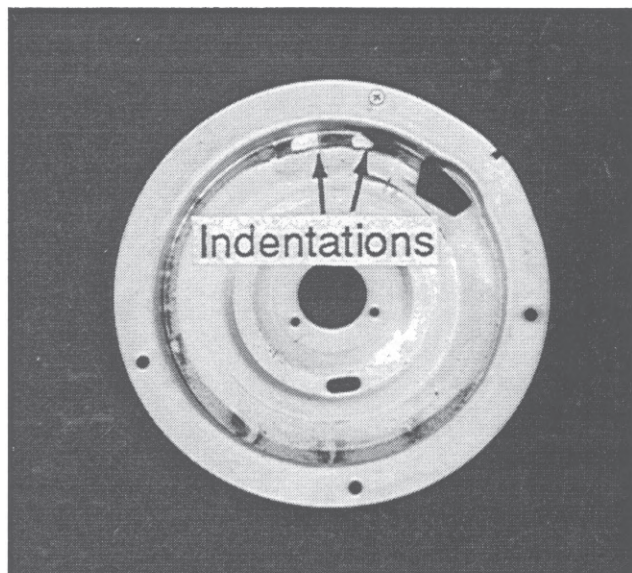


Photo shows worn plate

7. Before installing the finger holder on the carrier plate, check the indentations on the carrier plate for wear. Excessive wear of the carrier plate at the indentations will cause over planting especially when using small sizes of seed corn.

Inspect the carrier plate annually. Under average conditions, the life expectancy of the carrier plate should be 250-300 acres per row of operation.

8. With finger holder flush against the carrier, install adjusting nut until it contacts the finger holder with a slight resistance. Continue to turn the nut an additional 1/3 turn or torque to 22 to 25 inch pounds of rolling torque on input shaft.


9. Turn finger holder by hand to make sure it is positioned firmly against the carrier, but is not over tightened and can be rotated with moderate force.

10. Install cage nut and cotter pin and reinstall housing.


NOTE: Check tightness of adjusting nut on each unit after first day of use and periodically thereafter.

To inspect or replace the seed belt, remove the four cap screws around the edge of the housing cover and the nut from the belt idler mounting bolt.

60620-13

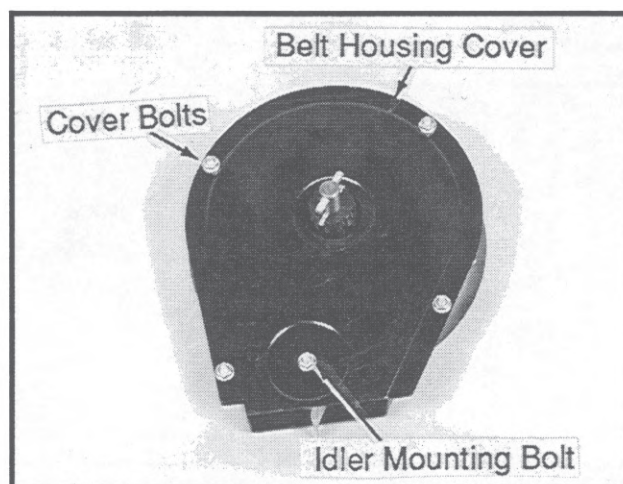

60887-97

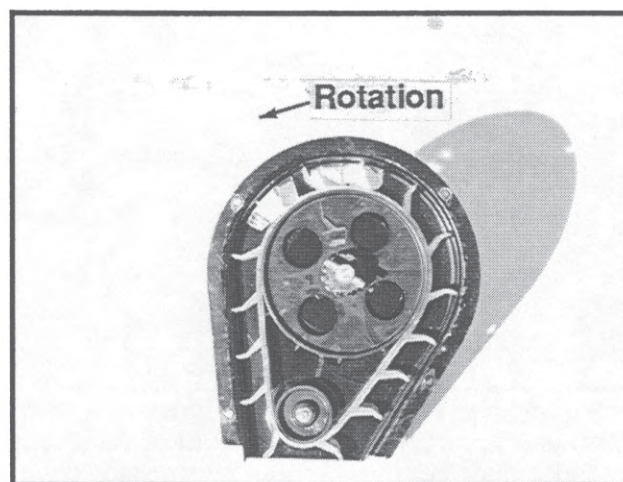

If the belt is being replaced, make sure it is reinstalled to correctly orient the paddles as shown. A diagram molded into the drive sprocket also illustrates the correct orientation.

CAUTION: Do not over tighten hardware.


FINGER PICKUP CORN METER CLEANING

1. Disassemble meter.
2. Blow out any foreign material present in the meter mechanism.
3. Wash in mild soap and water. **DO NOT USE GASOLINE, KEROSENE OR ANY OTHER PETROLEUM BASED PRODUCT.**
4. Dry thoroughly.
5. Coat lightly with a rust inhibitor.
6. Store in a dry place.


MAINTENANCE

BRUSH-TYPE SEED METER MAINTENANCE

60607-10

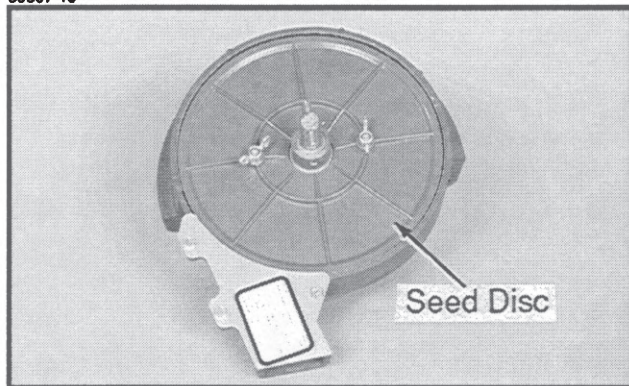


60607-3

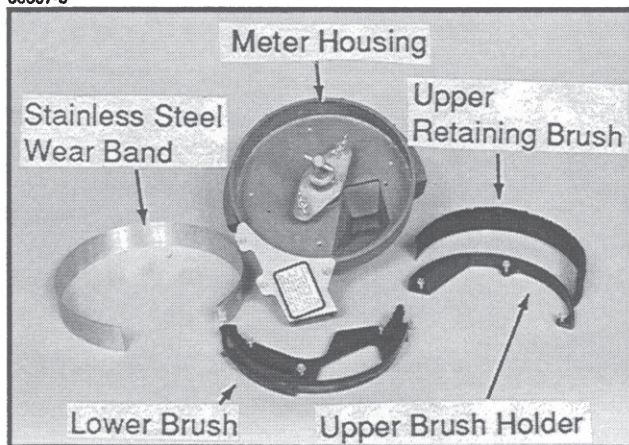

Only clean, high quality seed should be used for maximum meter accuracy. Damaged or cracked seed, hulls or foreign materials may become lodged in the upper seed retaining brush and greatly reduce meter accuracy. It is suggested that the seed disc be removed daily, inspected and cleaned. Check for buildup of foreign material on the seed disc, particularly in the seed loading slots. Clean the disc by washing it with soap and water. Check for cracked seed, hulls, etc. lodged between the brush holder and stainless steel wear band which can greatly reduce the accuracy of the meter because the retaining brush will not be able to retain the seed in the seed disc pocket. Use compressed air to clean the brush areas of the meter housing.

60607-8

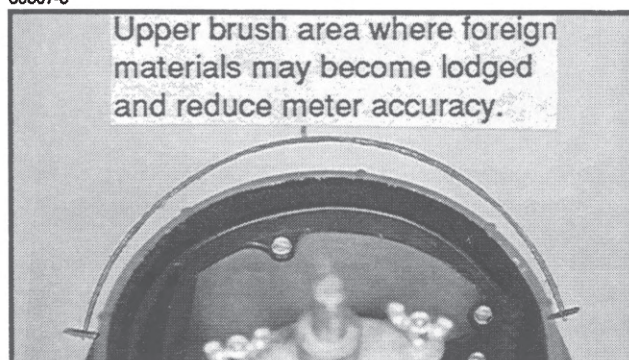

Estimated life expectancies of the upper and lower brushes, stainless steel wear strip and seed disc are 200-300 acres per row.

Cleaning brush-type seed meter for storage:


1. Remove meter from seed hopper by removing the two nuts which secure the meter to the hopper.
2. Remove seed disc and wash with soap and water and dry thoroughly.
3. Remove upper retaining brush by removing the three hex head screws from the brush holder and removing brush holder and retaining brush.
4. Remove the three hex head screws from the lower brush and and remove lower brush and stainless steel wear band.
5. Wash all parts and meter housing with soap and water and dry thoroughly.
6. Inspect all parts for wear and replace worn parts.
7. Reassemble meter except for seed disc. Meter should be stored without seed disc installed.

Installation Of Upper Retaining Brush

Position retaining brush into inner perimeter of seed retention area. Make sure the base of the brush is tight against the bottom of the meter housing. Install brush holder and three hex head screws and tighten.

Seed Disc Wear

HD112690

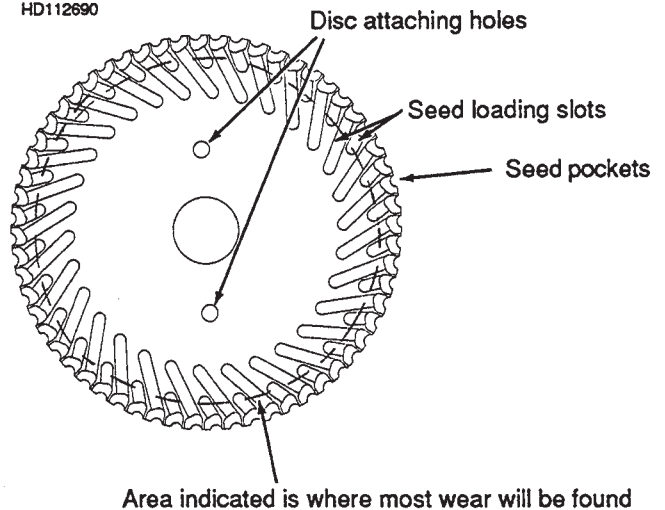


Most wear on the seed disc will be found in the area between the seed loading slots. If wear in this area is greater than .075" and accuracy starts to drop off at higher meter RPMs, the seed disc should be replaced. Wear will affect planting accuracy at high RPMs. To measure for wear lay a straight edge across the surface of the disc and measure the gap between the disc and the straight edge.

MAINTENANCE

Stainless Steel Wear Band


60607-38

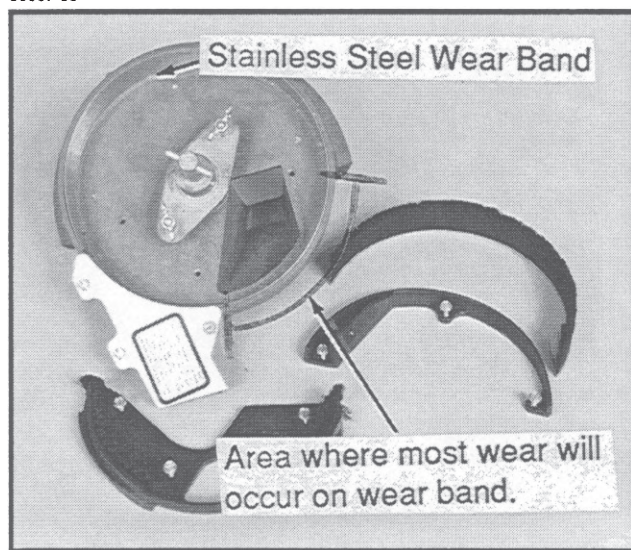

The purpose of the stainless steel wear band is to protect the meter housing from wear. The band is .030" thick and should be replaced when approximately .020" of wear is found in the primary area of wear. If the wear band is allowed to wear through or if the meter is used without the wear band in place, damage to the meter housing may occur.

Upper Retaining Brush

60607-21

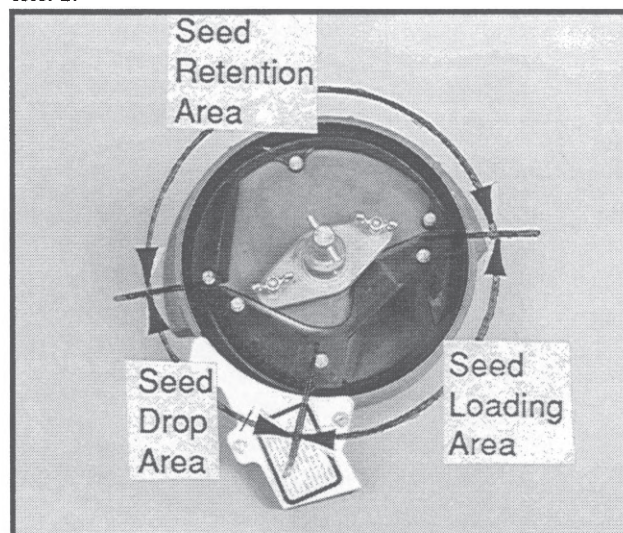

The upper retaining brush holds seed in the disc seed pocket in the seed retention area.

The retaining brush must apply enough pressure against the seed in the disc seed pocket as the disc rotates through the seed retention area to prevent the seed from dropping out of the disc pocket. A damaged spot, excessive wear on the brush or foreign material lodged in the brush may greatly reduce meter performance.


The retaining brush should be replaced at approximately 200-300 acres per row of use or sooner if damage or excessive wear is found.

MAINTENANCE

GAUGE WHEEL ADJUSTMENT

To prevent an accumulation of dirt or trash, gauge wheels should just contact the opener blades. Gauge wheels and opener blades should turn with only slight resistance.

50677-13

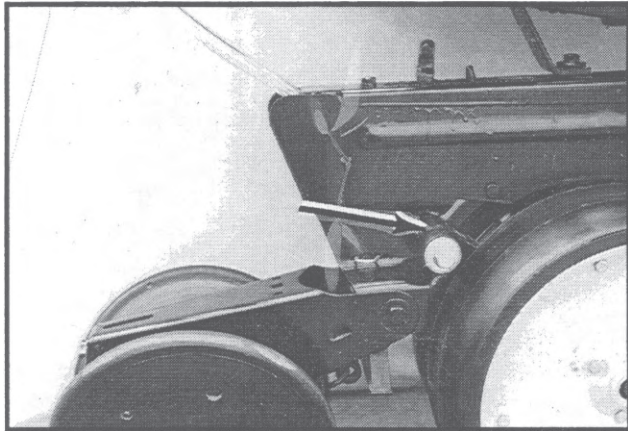


To adjust clearance between gauge wheels and opener blades, add or remove 1 1/64" spacer washers between the shank and gauge wheel arm. Store remaining spacer washers between gauge wheel arm and flat washer on outer side of gauge wheel arm.

NOTE: It may be desirable to space gauge wheel further from blade when operating in sticky soils.

15" SEED OPENER DISC/BEARING ASSEMBLY

80569-48

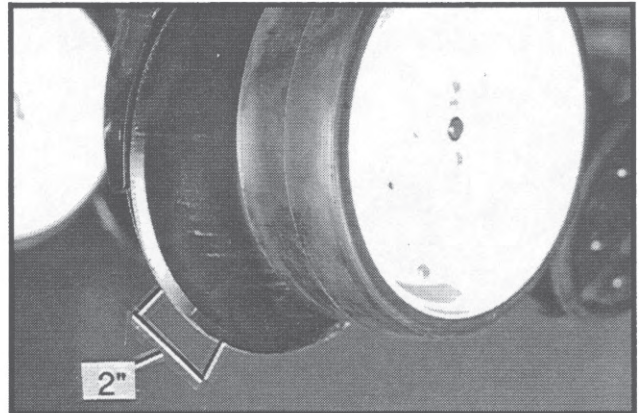

If 2" of blade contact cannot be maintained after removing spacer washers, the blade should be replaced.

To replace disc/bearing assembly:

1. Remove gauge wheel.
2. Remove bearing dust cap.
3. Remove jam nut and washer from outside of disc/bearing assembly.

NOTE: Left hand side of opener uses a left hand threaded nut. **DO NOT OVER TIGHTEN.** Damage to mounting spindle will require replacement of row unit shank assembly.

4. Remove disc/bearing assembly. The spacer bushings between the shank and disc are used to maintain the blade to blade contact at 2".
5. After installing new disc/bearing assembly, install washer and jam nut to secure disc/bearing assembly. Torque 5/8"-11 Grade 2 nut to value shown in Torque Values Chart.
6. Replace bearing dust cap.

It may be necessary to replace only the bearing if the bearing sounds rough when the disc is rotated.

To replace bearing:

1. Remove gauge wheel, bearing cap, jam nut, washer and disc/bearing assembly.
2. Remove 1/4" rivets from bearing housing to expose bearing.
3. After installing new bearing, install three evenly spaced 1/4" bolts into three of the six holes in the bearing housing to hold the bearing and bearing housing in place. Install rivets in the other three holes. Remove 1/4" bolts and install rivets in those three holes.
4. Reinstall disc/bearing assembly, washer and jam nut. Torque 5/8"-11 Grade 2 nut to value shown in Torque Values Chart at end of this section.
5. Replace bearing dust cap.


MAINTENANCE

SEED TUBE GUARD

The seed tube guard protects the seed tube and acts as the inner scraper for the disc opener blades.

Remove the seed tube and check for wear. Excessive wear on the seed tube indicates a worn seed tube guard.

50881-9

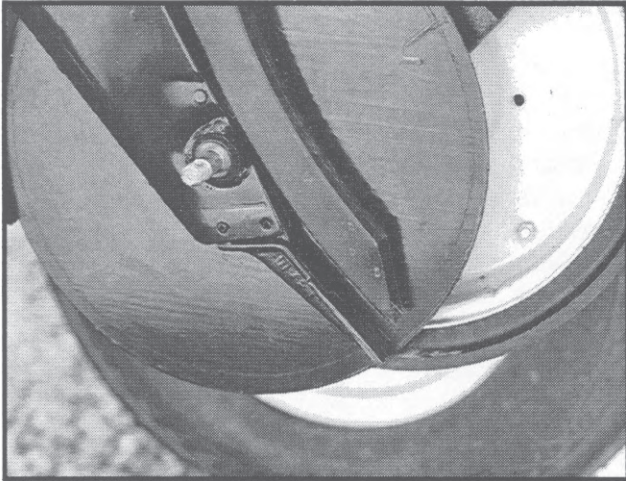


No till planting or planting in hard ground conditions will increase seed tube guard wear and necessitate more frequent inspection.

The gauge wheel and seed opener discs must be removed before the seed tube guard can be replaced.

ROW UNIT MOUNTED NO TILL COULTER

59386-40

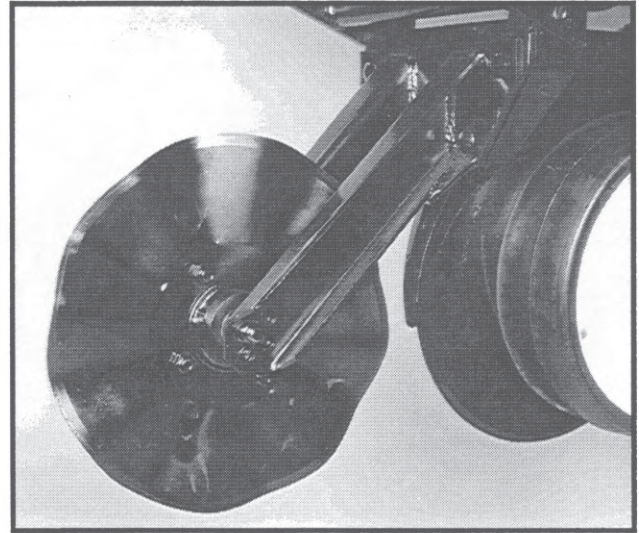

If properly maintained and lubricated the bearings in the row unit mounted no till coulters hub may never need to be replaced. Lubricate at frequency indicated in the Lubrication Section of this manual. Check periodically to be sure nuts and hardware are tightened to proper torque specification. Be sure the coulters are positioned square with the planter frame and aligned in front of row unit disc opener.

The coulters blade can be adjusted to one of four settings. Initially the blade is set in the highest position. As the blade wears it can be adjusted to one of the three lower settings. See "Row Unit Mounted No Till Coulters" in Operation Section of this manual.


When the 16" diameter coulters blade is worn to a 14 1/2" diameter (maximum allowable wear), it should be replaced.

Timely lubrication at the frequency indicated in the lubrication section of this manual is necessary to purge moisture and dirt from bearing and seal. This will also lubricate the seal. Add grease until it comes out around the seal.

MAINTENANCE

ELECTRONIC SEED MONITOR SYSTEM TROUBLESHOOTING

60656-5

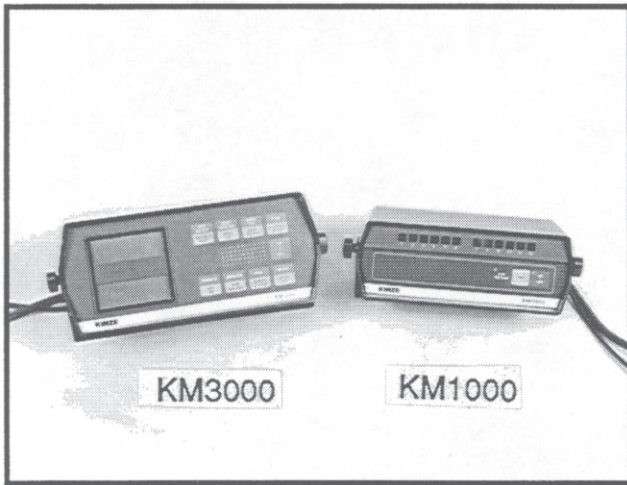

The general procedure to use, if a problem occurs, is to isolate the cause to a sensor, sensor lead, planter harness, console cable or the console, in that order. Make necessary repairs after problem has been isolated.

1. Sensors

Check for excessive dirt inside sensor. Check for cut or damaged wires. Connect sensor to the planter harness in a row that is operating properly. If it then operates correctly, sensor is good.

In some cases static electricity may cause dust and seed treatment to accumulate on the sensing elements in the sensor. Enough may accumulate to cause the sensor to malfunction, which can cause monitor to indicate a fault condition. Low humidity and dry soil conditions tend to cause this condition. When this occurs, clean the inside of the sensors, using a dry bottle brush.

If, for any reason a sensor becomes inoperative and a replacement sensor is not immediately available, disconnect the sensor lead connector from the planter harness, turn monitor OFF and then back ON. This will keep the alarm from sounding for this row only. Replace the defective seed sensor (using high rate seed sensor only) as soon as possible. After sensor is replaced make certain the monitor is turned OFF and back ON to reactivate the sensor position.

If sensor leads are damaged, carefully cut away the cable covering at the damaged area. Repair damaged wire or wires by soldering wires together, being sure to match wire colors, then tape each repaired wire. Finally, tape over cut portion of the cable cover. If necessary, relocate and secure cable so that the same type of damage will not occur again.

2. Planter Harness And Console Cable

Carefully examine planter harness and console cable for damage. If harness and/or cable is cut or pinched, carefully cut away the harness/cable covering. Repair cut or damaged wire by soldering wires together, being sure to match wire colors. Tape each repaired wire, then tape over cut harness/cable covering. If necessary, relocate and secure harness/cable so that the same type damage will not occur again.

3. Console

Check for a blown fuse, located on the console rear panel. Check battery connections and make certain they are clean and tight. Make certain battery is fully charged.

If console fuse is blown replace with a 5-amp type AGC. If fuse blows again, console needs repair or replacement.

CAUTION: DO NOT REPLACE FUSE WITH A FUSE HAVING A HIGHER AMPERAGE RATING.

If the battery cable is not damaged, battery connections are clean and tight and the battery is fully charged, the console is defective and needs to be repaired or replaced.

MAINTENANCE

KM1000 TROUBLESHOOTING CHART

SYMPTON	PROBABLE CAUSE	ACTION REQUIRED
1. Low Voltage Indicator is ON.	Connected to 6 volt battery. System voltage insufficient. Battery connection corroded. Console defective.	Connect to 12 volt battery. Insure greater than 11.0 volts. Inspect battery connections. If console power cable terminals or battery terminals are dirty or corroded, clean terminals as required. Repair or replace console. Contact your KINZE Dealer.
2. One row indicator lamp fails to flash when planting. Alarm does not sound.	Burned out row indicator lamp.	Replace row indicator lamp with a 1892 lamp only. (Part No. R0595).
3. One row indicator lamp fails to flash when planting. Alarm sounds continuously. Seeds are being planted by the row unit.	Sensing elements inside seed sensor. Defective sensor.	Clean sensing elements using a dry bottle brush. NOTE: Some seed treatment chemicals are detrimental to the operation of seed sensors and refuse to be removed by dry brushing. To remove such treatment from the inside of a sensor, proceed as follows: Wet a bottle brush with water, then apply a moderate amount of kitchen cleanser (such as Ajax® or Comet®) to the brush. Scrub inside of sensor until treatment is removed, then rinse sensor in clear cold water. Dry thoroughly. Plug suspect sensor cable into an adjacent row that is operating correctly. If sensor does not operate, sensor is defective. If you wish to continue planting and a replacement sensor is not available, disconnect the defective sensor cable from the planter harness, turn the monitor OFF and then back ON. The monitor will ignore the disconnected row sensor and you can continue to monitor all other rows.

MAINTENANCE

KM1000 TROUBLESHOOTING CHART (Continued)

SYMPTON	PROBABLE CAUSE	ACTION REQUIRED
4. One row indicator lamp fails to come on when the console is powered up.	Burned out row indicator lamp.	Replace row indicator lamp with a number 1892 lamp only. (Part No. R0595)
	Defective seed sensor or planter harness.	Disconnect the suspected sensor from the planter harness row lead. Disconnect the sensor from the planter harness of an adjacent row. Reverse the harness row leads to the sensors (connect the suspected sensor to the adjacent row planter harness lead and the adjacent sensor to the suspected row harness lead).
	Defective seed sensor or planter harness.	Turn console power OFF then back ON. If the symptom moves to the adjacent row, the seed sensor is defective and needs replaced. If the symptom does not move, the planter harness or console is defective and needs repaired. Visually inspect the planter harness for cuts, pinching, etc., if damage is found, repair by cutting away the cable covering and splicing the wires (being sure to match wire colors). Solder the splices and tape each wire individually. Tape over repaired cable.
	Console defective.	Repair or replace console. Contact your KINZE Dealer.
5. Monitor completely "dead".	Blown fuse.	Check fuse, located on rear panel of console. If fuse is blown, replace with a 5-amp, type AGC. If fuse blows again, check power connection to battery. If connections are reversed fuse will blow. If battery connections are correct, console needs repair or replacement. Contact your KINZE Dealer.
	Poor battery connections.	Check battery connections. Connections must be clean and tight.

MAINTENANCE

KM1000 TROUBLESHOOTING CHART (Continued)

SYMPTON	PROBABLE CAUSE	ACTION REQUIRED
5. (Cont'd.)	Cut or broken battery cable. Console defective.	Visually inspect the battery cable for a cut or broken wire. If wires are cut or broken, splice the wires being sure to match wire colors. Solder the splices and tape each wire individually. USE ONLY ROSIN CORE SOLDER. Repair or replace console. Contact your KINZE Dealer.
6. When monitor is turned ON, row indicator lamps are dark, green power indicator is ON and monitor will not enter operate mode.	Defective seed sensor. Planter harness shorted. Console defective.	Leave monitor turned on. Unplug seed sensors one at a time starting with row 1. When you disconnect a sensor and the remaining row indicator lamps come on, the sensor or its cable is defective. Visually inspect the sensor cable. If damaged, repair. If no cable damage is found, the sensor is defective and needs to be replaced. If all but the last sensor is disconnected and the problem still exists, reconnect a sensor before disconnecting the last sensor. If the last sensor is disconnected and the problem still exists, the planter harness, console cable or console is at fault. Visually inspect the planter harness (including all row unit cables) for cuts, pinching and other types of damage. If damage is found, cut away cable covering and repair the individual wires. Tape over repaired wire and cable. If the console cable, planter harness, and seed sensors are normal, the console is at fault and needs to be repaired or replaced. Contact your KINZE Dealer.

MAINTENANCE

KM3000 TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	ACTION REQUIRED
1. Display readout incomplete (fragmented) alarm sounds continuously.	Low battery voltage. Battery connections corroded. Console defective.	Recharge or replace battery. Inspect battery connection. If console power cable terminals or battery terminals are dirty or corroded, clean terminals as required. Repair or replace console. Contact your KINZE Dealer.
2. One row indicator segment (lower display) fails to flash when planting. Population readout for the planter row is .0. Alarm sounds continuously. Seeds are being planted by the row unit.	Sensing elements inside of seed sensor are dirty. Defective sensor.	Clean sensing elements using a dry bottle brush. NOTE: Some seed treatment chemicals are detrimental to the operation of seed sensors and refuse to be removed by dry brushing. To remove such treatment from the inside of a sensor proceed as follows: Wet a bottle brush with water, then apply a moderate amount of kitchen cleanser (such as Ajax® or Comet®) to the brush. Scrub inside of sensor until treatment is removed, then rinse sensor in clear cold water. Dry thoroughly. Plug suspect sensor cable into an adjacent row that is operating correctly. If sensor does not operate, sensor is defective. If you wish to continue planting and a replacement sensor is not available, disconnect the defective sensor cable from the planter harness, turn the monitor OFF and then back ON. The monitor will ignore the disconnected row sensor and you can continue to monitor all other rows.

MAINTENANCE

KM3000 TROUBLESHOOTING CHART (Continued)

SYMPTOM	PROBABLE CAUSE	ACTION REQUIRED
3. Monitor completely "dead".	Blown console fuse.	Check fuse, located on rear panel of console. If fuse is blown, replace with a 5-amp, type AGC. If fuse blows again, check power connection to battery. If connections are reversed fuse will blow. If battery connections are correct, console needs to be repaired or replaced. Contact your KINZE Dealer.
	Poor battery connections.	Check battery connections. Connections must be clean and tight.
	Cut or broken battery cable.	Visually inspect the battery cable for a cut or broken wire. If wires are cut or broken, splice the wires being sure to match wire colors. Solder the splices and tape each wire individually. USE ONLY ROSIN CORE SOLDER.
	Low battery voltage.	Check battery voltage. Must be at least 12 volts. If not, recharge or replace battery.
	Console defective.	Repair or replace console. Contact your KINZE Dealer.
4. When monitor is turned ON, row display (lower display) remains blank. Upper display shows SPEED, NUMBER OF ROWS, and ROW SPACING constants. Monitor will not enter OPERATE mode.	Defective (shorted) seed sensor.	Leave monitor turned ON. Unplug seed sensors one at a time starting with row 1. When you disconnect a sensor and the remaining row display segments come on and the monitor enters the operate mode, the sensor or its cable is defective. Visually inspect the sensor cable, if damaged repair. If no cable damage is found, the sensor is defective and needs replaced. If all sensors are disconnected and problem still exists, the planter harness, console cable or console is at fault.


MAINTENANCE

KM3000 TROUBLESHOOTING CHART (Continued)

SYMPTOM	PROBABLE CAUSE	ACTION REQUIRED
4. (Cont'd.)	Planter harness shorted.	Visually inspect the planter harness (including all row unit cables) for cuts, pinching and other types of damage. If damage is found, cut away cable covering and repair the individual wires. Tape over repaired wire and cable.
	Console cable shorted.	Visually inspect the console cable for cuts, pinching and other types of damage. If damage is found, cut away cable covering and repair the individual wires. Tape over repaired wire and cable.
	Console defective.	If the console cable, planter harness and seed sensors are normal, the console is at fault and needs to be repaired or replaced. Contact your KINZE Dealer.

SEED MONITOR ROW INDICATOR BULB REPLACEMENT (KM1000 Only)


D-0802-0002/D-0802-0003

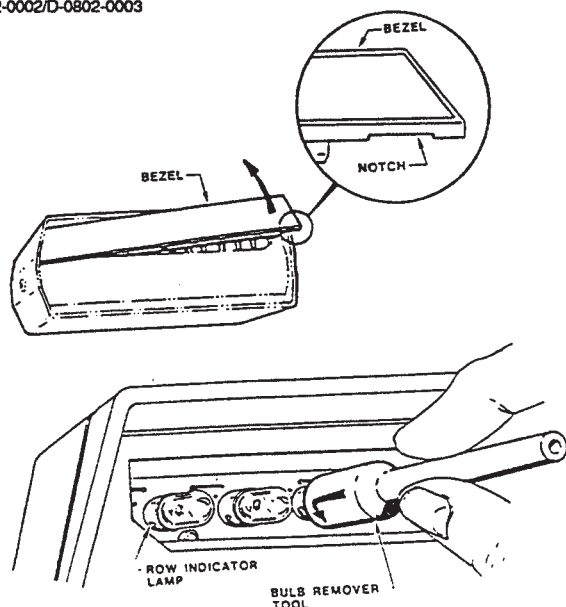

Carefully remove the row indicator bezel as shown. Use your fingernail to pry up along the lower outside edge of the bezel. Remove bezel. Remove burned out bulb using a bulb remover tool. Press in on bulb, turn 1/4 turn counterclockwise and remove bulb. Replace bulb with a No. 1892 (Part No. R0595) only. Replace bezel.

SEED MONITOR DISPLAY BACKLITE BULB REPLACEMENT (KM3000 Only)

D-0841-0006

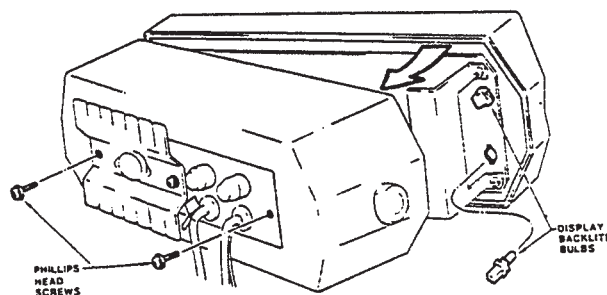

Remove the two outside Phillips head screws. **NOTE: DO NOT REMOVE THE CENTER PHILLIPS HEAD SCREW.** Carefully separate the console case from the front panel. Remove the defective bulb by turning the lamp assembly 1/4 turn counterclockwise and pulling straight out. Replace bulb with a GE #73 bulb (Part No. R1084). Carefully assemble the console front panel, case and rear panel and install the two Phillips head screws. **CAUTION: Make sure that all wires are located where they will not be pinched or cut.**

MAINTENANCE

VALVE BLOCK ASSEMBLY INSPECTION

The valve block assembly consists of the marker sequencing and flow control valves in one assembly.


The sequencing valve portion consists of a chambered body containing a spool and series of check valves to direct hydraulic oil flow. Should the valve malfunction, the components may be removed for inspection.

1. Remove valve block assembly from planter.
2. Remove detent assembly and port adapter assemblies from rear of valve block.
3. Remove plug from both sides of valve block and remove spool.
4. Inspect all parts for pitting, contamination or foreign material. Also check seating surfaces inside the valve. Replace any parts found to be defective.
5. Lubricate spool with a light oil and reinstall. Check to be sure spool moves freely in valve body.

IMPORTANT: Made sure correct check ball(s) and spring are installed in each valve bore upon reassembly.

A flow control valve is located on each side of the block assembly. The flow control valves should be adjusted for raise and lower speed as part of the assembly procedure or upon initial operation. If the valve fails to function properly or requires frequent adjustment, the needle valve should be removed for inspection. Check for foreign material and contamination. Be sure needle moves freely in adjustment screw. Replace any components found to be defective.

Port Adapter, Spring, 7/16" Check Ball,
1/4" Steel Ball

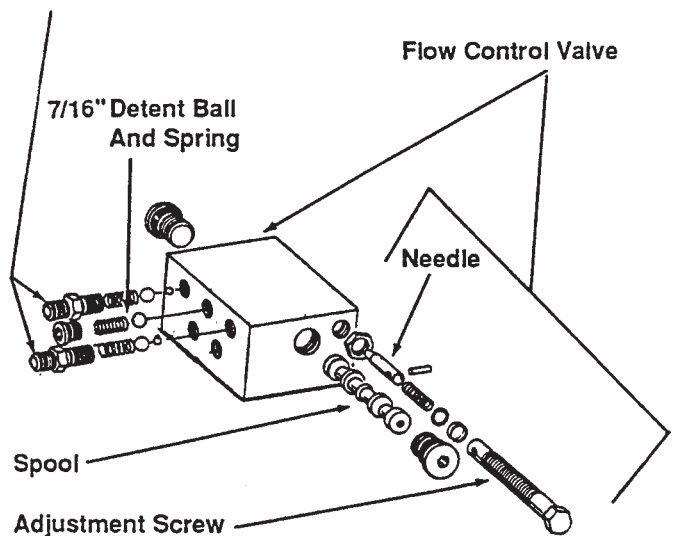

MAINTENANCE


MARKER OPERATION TROUBLESHOOTING		
PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Both markers lowering and only one raising at a time.	Hoses from cylinders to valve connected backwards.	Check hosing diagram in manual and correct.
Same marker always operating.	Spool in sequencing valve not shifting.	Remove spool, inspect for foreign material, making sure all ports in spool are open. Clean and re-install.
Both markers lower and raise at same time.	Foreign material under check ball in sequencing valve. Check ball missing or installed incorrectly in sequencing valve.	Remove hose fitting, spring and balls and clean. May be desirable to remove spool and clean as well. Disassemble and correct. See illustration in Parts Section.
Marker (in raised position) settling down.	Damaged o-ring in marker cylinder or cracked piston. Spool in sequencing valve not shifting completely because detent ball or spring is missing. Spool in sequencing valve shifting back toward center position.	Disassemble cylinder and inspect for damage and repair. Check valve assembly and install parts as needed. Restrict flow of hydraulic oil from tractor to sequencing valve.
Neither marker will move.	Flow control closed too far.	Loosen locking nut and turn flow control adjustment bolt out or counterclockwise until desired speed is set.
Markers moving too fast.	Flow control open too far.	Loosen locking nut and turn flow control adjustment bolt in or clockwise until desired speed is set.
Sporadic marker operation speed.	Needle sticking open in flow control valve.	Remove flow control, inspect and repair or replace.

MAINTENANCE

MARKER BEARING LUBRICATION OR REPLACEMENT

1. Remove marker blade.
2. Remove hub cap from hub.
3. Remove cotter pin, nut and washer.
4. Slide hub from spindle.
5. Remove bearings and cups and discard if bearings are being replaced. Clean hub and dry. Remove bearings only if repacking.
6. Press in new bearing cups with thickest edge facing in. (Bearing replacement procedure only.)
7. Pack bearings with heavy duty wheel bearing grease thoroughly forcing grease between roller cone and bearing cage. Also, fill the space between the bearing cups in the hub with grease.
8. Place inner bearing in place and press in new rubber seal and grease seal.
9. Clean spindle and install hub.
10. Install outer bearing, washer and slotted hex nut. Tighten slotted hex nut while rotating hub until there is some drag. This assures that all bearing surfaces are in contact. Back off slotted nut to nearest locking slot and install cotter pin.
11. Fill hub caps approximately 3/4 full of wheel bearing grease and install on hub.
12. Install blade and hub cap retainer on hub and tighten evenly and securely.


MKR020

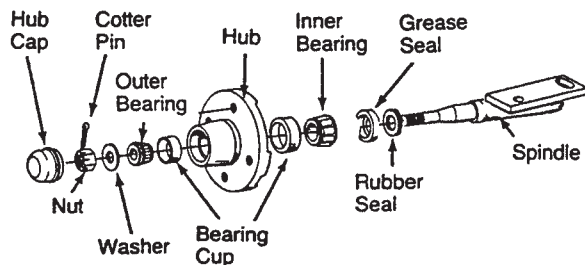

WHEEL BEARING LUBRICATION OR REPLACEMENT

1. Raise tire clear of ground and remove wheel.
2. Remove double jam nuts and slide hub from spindle.
3. Remove bearings and cups and discard if bearings are being replaced. Clean hub and dry. Remove bearings only if repacking.
4. Press in new bearing cups with thickest edge facing in. (Bearing replacement procedure only.)
5. Pack bearings with heavy duty wheel bearing grease thoroughly forcing grease between roller cone and bearing cage. Also fill the space between the bearing cups in the hub with grease.
6. Place inner bearing in place.
7. Clean axle and install hub.
8. Install outer bearing and nut. Tighten jam nut while rotating hub until there is some drag. This assures that all bearing surfaces are in contact. Back off jam nut 1/4 turn or until there is only slight drag when rotating the hub. Install second jam nut to lock against first.
9. Install wheel on hub and tighten evenly and securely.

PTD057

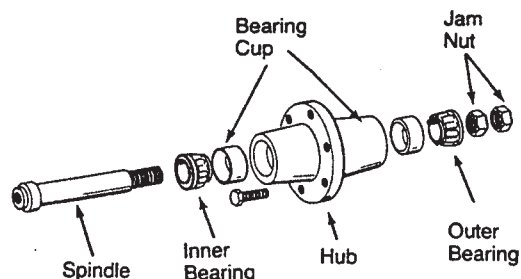

MAINTENANCE

PREPARATION FOR STORAGE

Store the planter in a dry sheltered area if possible.

Remove all trash that may be wrapped on sprockets or shafts and remove dirt that can draw and hold moisture.

Clean all drive chains and coat with a rust preventative spray, or remove chains and submerge in oil.

Lubricate planter and row units at all lubrication points.

If possible, remove weight from all tires particularly if the unit is stored outdoors, in which case it is best to remove wheels and tires for storage in a cool dry area.

Inspect the planter for parts that are in need of replacement and order during the "off" season.

Make sure all seed, herbicide and insecticide hoppers are empty and clean.

Clean seed meters and store in a dry area.

Remove seed discs from brush-type seed meter, clean and store meters with discs removed.


Grease exposed areas of cylinder rods before storing planter.

Grease or paint disc openers and marker blades to prevent rust.

Flush liquid fertilizer tanks, hoses and squeeze pump with clean water.

Empty dry fertilizer hoppers, clean hoppers, disassemble and clean metering augers, reassemble coating all metal parts with rust preventative.


WIRING DIAGRAM

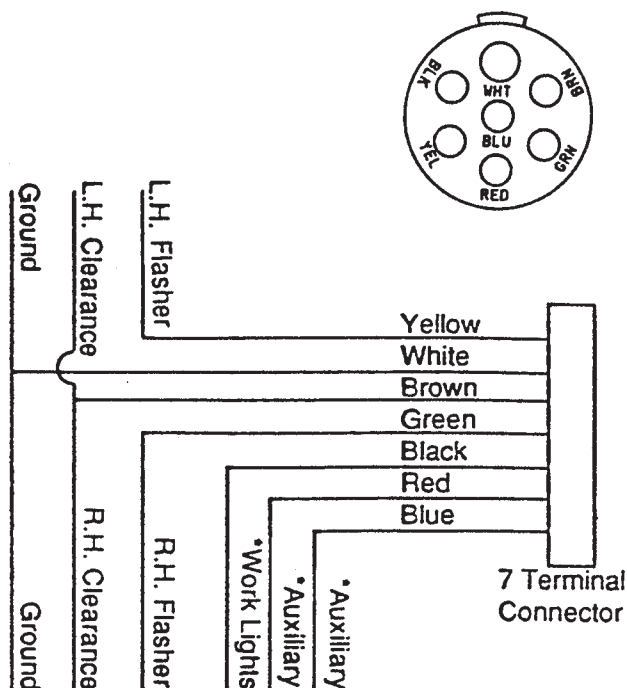

* Optional lights and wires (to be supplied by customer) may be wired into existing plug terminals.

Light package supplied on the Model 2000 planter meets ASAE standards. For the correct wiring harness to be wired into the lights on your tractor, check with the tractor manufacturer.

61111-36

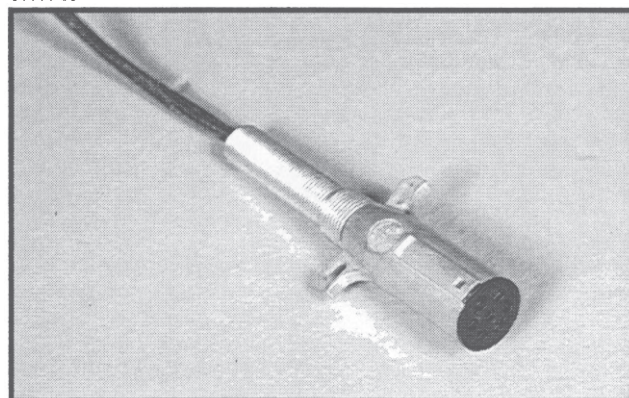

PARTS LIST INDEX

ROW UNIT

Bed Leveler, Row Unit Mounted	P18
Brush-Type Seed Meter	P10
Closing Wheel	P6
Disc Furrower, Row Unit Mounted	P15
Finger Pickup Corn Meter	P9
Frame Mounted Coulter W/Disc Furrower	P16/P17
Gauge Wheel	P5
Granular Chemical Banders	P11
Granular Chemical Hopper With Meter(s) & Throwout	P12/P13
Hopper Support And Meter Drive	P7
No Till Coulter, Row Unit Mounted	P14
Parallel Arms, Mounting Bracket And Quick Adjustable Down Force Springs	P4
Shank Assembly	P2/P3
Seed Hopper	P8
Spring Tooth Incorporator	P19

BASE MACHINE

Contact Drive Wheel And Arm Assembly	P26/P27
Cylinders	P37/P40
Drive Line, 4 Row 30/36/38	P28
Drive Line, 6 Row 30/36/38 And 8 Row 30/36/38/40	P29
Hitch And Frame Assembly	P22/P23
Hydraulic Systems	P42/P47
Marker Assemblies	P32/P35
Marker Sequencing/Flow Control Valve	P41
Marker Spindle/Hub/Blade	P36
Transmission Assembly	P30/P31
Transport And Ground Drive Wheel Assembly	P24/P25
Warning Lights And SMV Sign	P71

ELECTRONIC SEED MONITOR

Electronic Seed Monitor	P48/P49
-------------------------------	---------

INTERPLANT


Interplant Push Unit	P20/P21
Interplant Push Unit Transmission And Drive	P50/P51
Interplant Rock Shaft Assembly	P52/P53

FERTILIZER

Fertilizer Openers	P54/P57
Fertilizer Opener Mounting Bar (Double Disc Fertilizer Openers)	P58
Dry Fertilizer Couplers/Shfts	P62/P63
Dry Fertilizer Hopper And Mounts	P60/P61
Dry Fertilizer Transmission Assembly	P59
Liquid Fertilizer Piston Pump (Crankcase Assembly)	P65c/P65d
Liquid Fertilizer Piston Pump (Cylinder Assembly)	P65e/P65f
Liquid Fertilizer Piston Pump Drive	P65a/P65b
Liquid Fertilizer Piston Pump Flow Divider	P65g/P65h
Liquid Fertilizer Squeeze Pump Mounting Bracket, Sprocket And Adapter Package And Drive Line	P66/P67
Liquid Fertilizer Squeeze Pumps	P68/P70
Liquid Fertilizer Tanks, Saddles, Mounts, Hoses And Fittings	P64/P65
Decals, Reflectors And Tie Straps	P72/P73
Numerical Index	a

SHANK ASSEMBLY

RUB006/RUA004

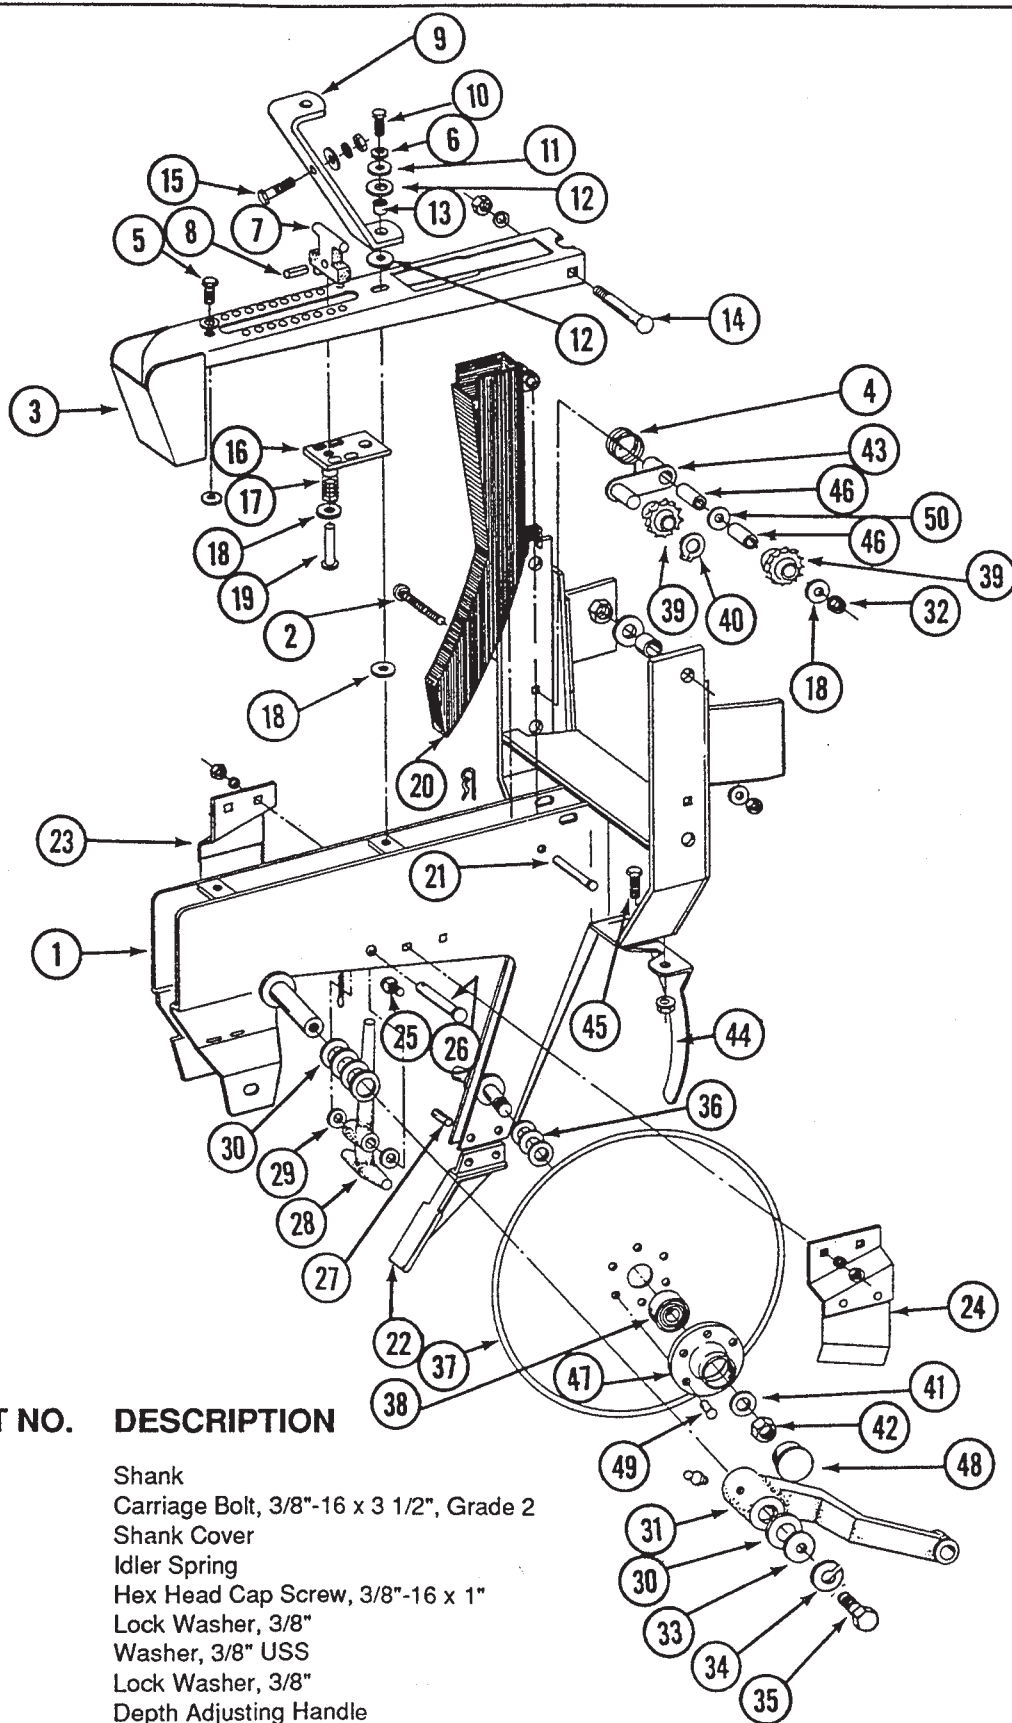

ITEM

PART NO.

DESCRIPTION



1.	A0860	Shank
2.	10307	Carriage Bolt, 3/8"-16 x 3 1/2", Grade 2
3.	A0811	Shank Cover
4.	D1065	Idler Spring
5.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10229	Lock Washer, 3/8"
	10210	Washer, 3/8" USS
6.	10229	Lock Washer, 3/8"
7.	B0102	Depth Adjusting Handle
8.	10605	Spring Pin, 5/32" x 3/4"
9.	D1027	Stabilizer Bracket
10.	10003	Hex Head Cap Screw, 3/8"-16 x 1 1/2"
11.	10208	Special Washer, 13/32"
12.	D1120	Rubber Washer

SHANK ASSEMBLY

ITEM	PART NO.	DESCRIPTION
13.	D1110	Bushing
14.	10304	Carriage Bolt, 3/8"-16 x 3", Grade 2
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
15.	10305	Carriage Bolt, 3/8"-16 x 1", Grade 2
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
16.	B0105	Depth Adjusting Slide
17.	D1066	Compression Spring
18.	10210	Washer, 3/8" USS
19.	10552	Clevis Pin, 3/8" x 2"
20.	D1130	Seed Tube, Regular
	A5880	Seed Tube W/High Rate Sensor
	R1062	Seed Tube (With holes for high rate sensor installation)
	R1087	Sensor Only (For A5880)
21.	10551	Clevis Pin, 1/4" x 2 1/2"
	10669	Hair Pin Clip, No. 22
22.	B0103	Seed Tube Guard
23.	A2012L	Disc Scraper, Left Hand
24.	A2012R	Disc Scraper, Right Hand
25.	10328	Hex Head Cap Screw, 3/8"-16 x 5/8"
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
26.	10555	Clevis Pin, 1/2" x 2 1/2"
	10451	Cotter Pin, 1/8" x 1"
27.	10601	Spring Pin, 1/4" x 3/4"
28.	B0104	Depth Adjusting Stop
29.	10206	Washer, 1/2"
30.	10526	Spacer Washer, 1 1/64"
31.	A2116	Wheel Arm With Grease Fitting
	10640	Grease Fitting, 1/4"-20
32.	10108	Lock Nut, 3/8"-16
33.	10216	Washer, 1/2" USS
34.	10228	Lock Washer, 1/2"
35.	10014	Hex Head Cap Screw, 1/2"-13 x 1"
36.	10213	Machine Bushing, 1 3/64"
37.	D1030	Disc, 15"
38.	A2014	Bearing
39.	D7426	Idler Sprocket
40.	10435	Retaining Ring
41.	10204	Washer, 21/32"
42.	10503	Jam Nut, 5/8"-11, Right Hand
	10504	Jam Nut, 5/8"-11, Left Hand
43.	A2056	Idler Arm
44.	D1033	Shield
45.	10303	Carriage Bolt, 5/16"-18 x 1", Grade 2
	10620	Flange Nut, 5/16"-18
46.	D1026	Spacer
47.	D1031	Housing
48.	D6533	Bearing Cap
49.	10427	Rivet, 1/4" x 1/2"
50.	10384	Special Washer, 3/8"
A.	A2013	Disc And Bearing Assembly, Less Bearing Cap (Items 37-38, 47 and 49)

PARALLEL ARMS, MOUNTING BRACKET AND QUICK ADJUSTABLE DOWN FORCE SPRINGS


RUB007/RUB015/RUB016/RUB013

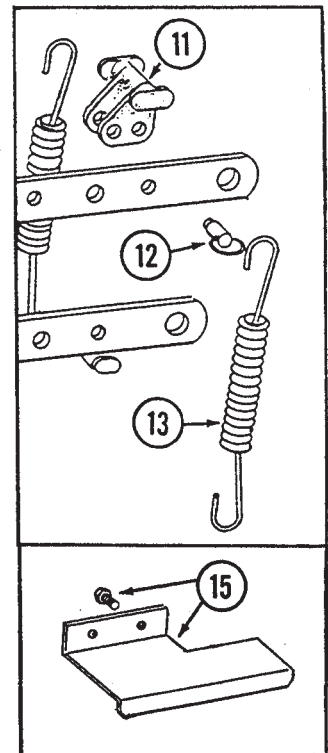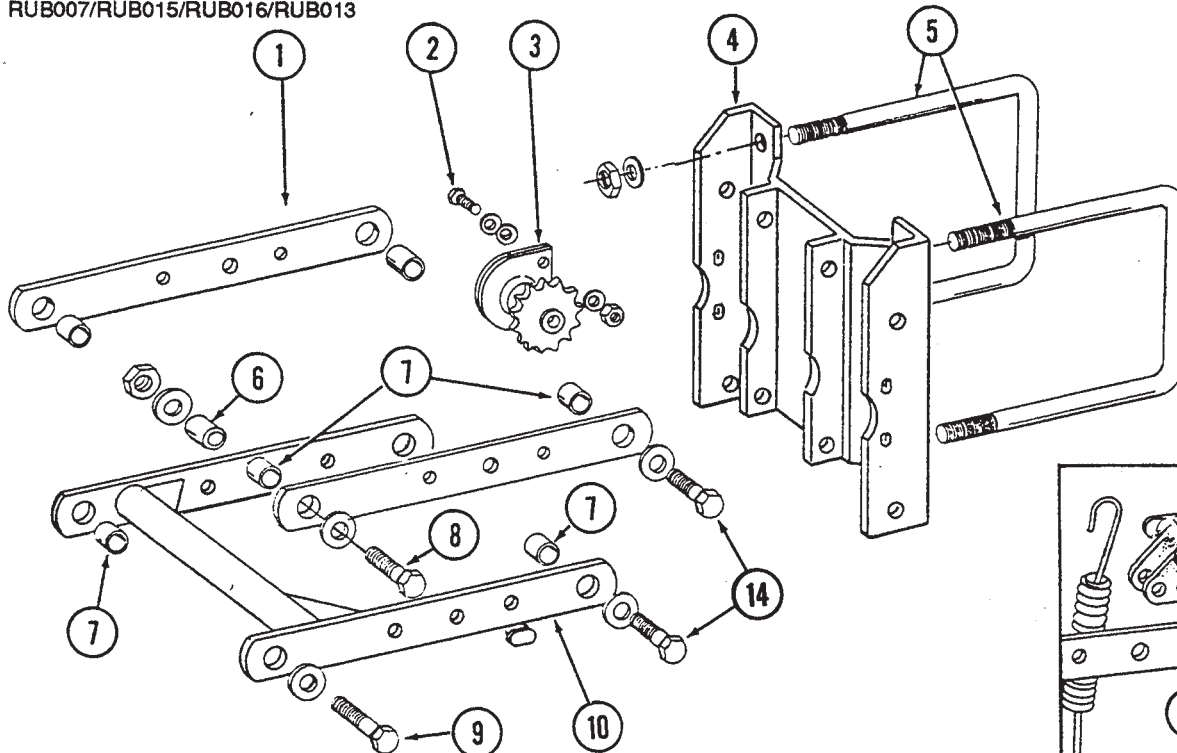

ITEM	PART NO.	DESCRIPTION
1.	D7619	Upper Arm
2.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10210	Washer, 3/8" USS (As Required)
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
3.	A1720	Bearing/Sprocket, 7/8" Bore
4.	A5798	Support Plate
5.	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10177	Hex Head Cap Screw, 5/8"-11 x 9 1/2"
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
6.	D1109	Pivot Bushing
7.	B0218	Bushing
8.	10006	Hex Head Cap Screw, 5/8"-11 x 2 1/4"
	D7805	Special Washer
	10107	Lock Nut, 5/8"-11
9.	10005	Hex Head Cap Screw, 5/8"-11 x 1 3/4"
	D7805	Washer, Special
	10107	Lock Nut, 5/8"-11
10.	A5651	Lower Arm
11.	B0186	Spring Anchor
12.	10545	Detent Pin, 1" Grip
13.	D8249	Spring
14.	10008	Hex Head Cap Screw, 5/8"-11 x 2"
	D7805	Washer, Special
	10107	Lock Nut, 5/8"-11
15.	7192X	Chain Shield Package With Hardware (Used with Row Unit Mounted No Till Coulters)
	10037	Hex Head Cap Screw, 1/2"-13 x 1 1/4"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13

GAUGE WHEEL


RUB001/RUA039

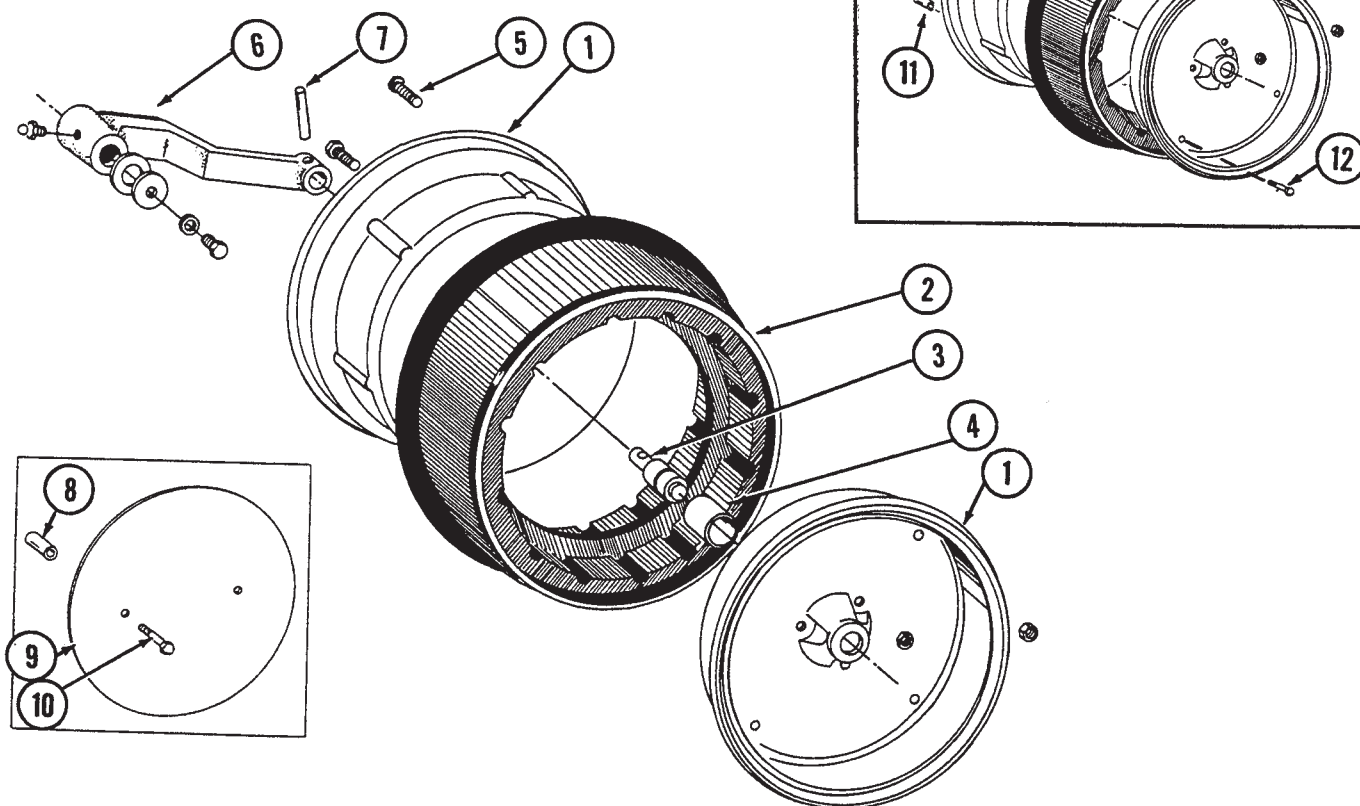

ITEM	PART NO.	DESCRIPTION
1.	D1048	Half Wheel
2.	D1086	Tire
3.	A2022	Bearing
4.	B0118	Bearing Sleeve
5.	10018	Hex Head Cap Screw, 5/16"-18 x 5/8"
	10109	Lock Nut, 5/16"-18
6.	A2116	Wheel Arm With Grease Fitting
	10640	Grease Fitting, 1/4"-20
7.	10603	Spiral Pin, 1/4" x 1 1/4"
8.	D0973	Sleeve, 1 1/2"
9.	D1353	Wheel Cover (Optional)
10.	10069	Hex Head Cap Screw, 5/16"-18 x 2 1/4"
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
11.	D8811	Sleeve, 4 1/8"
12.	10661	Hex Head Cap Screw, 5/16"-18 x 4 1/2"
	10109	Lock Nut, 5/16"-18
A.	A2021	Gauge Wheel Complete (Items 1-5)
B.	1K149	Gauge Wheel Cover Package, 1 Row, Includes: (1)10069, (4)10106, (4)10232, (4)D0973, (2)D1353 (Items 8-10)
C.	R1099	Dual Gauge Wheel Hardware Package, Includes: (3)10018, (7)10109, (4)10661, (4)D8811 (Items 5, 11 And 12) NOTE: One package required per wheel. IN ADDITION: Order (1)D1086 and (2)D1048

CLOSING WHEEL


RUB004

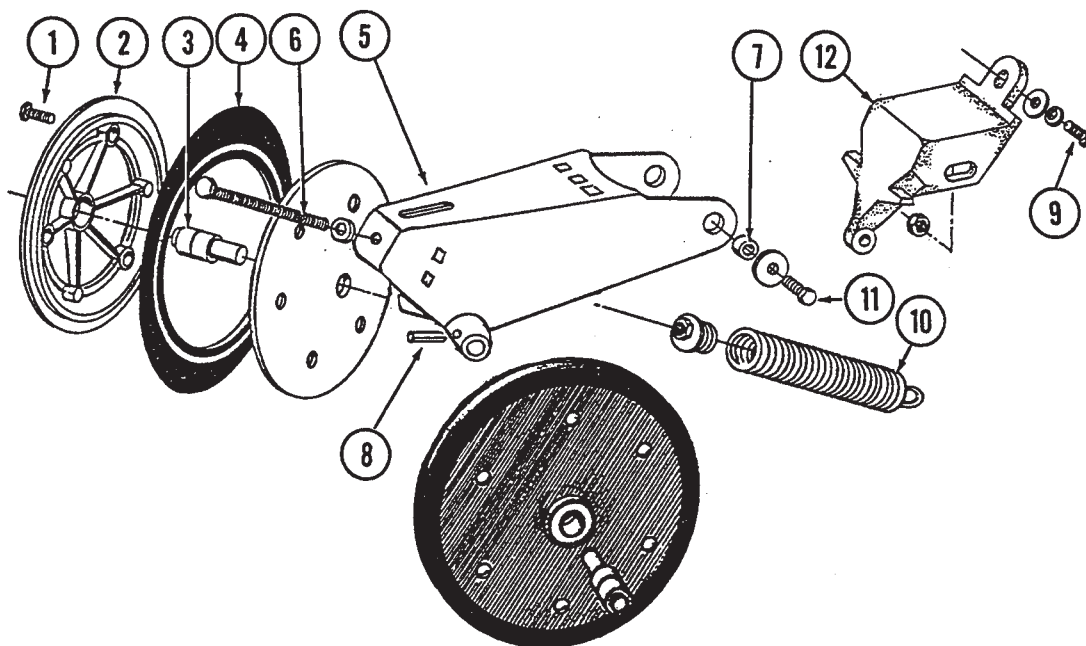

ITEM	PART NO.	DESCRIPTION
1.	10064	Hex Head Cap Screw, 1/4"-20 x 1"
	10103	Hex Nut, 1/4"-20
2.	D4455	Half Wheel, Nylon
3.	A2022	Bearing
4.	D1085	Tire, 1" x 15"
5.	A6056	Arm With Spindles
6.	10015	Hex Head Cap Screw, 1/2"-13 x 5", Grade 2 Full Thread
	10525	Internal Tooth Lock Washer, 1/2"
7.	D1111	Bushing
8.	10603	Spiral Spring Pin, 1/4" x 1 1/4"
9.	10003	Hex Head Cap Screw, 3/8"-16 x 1 1/2"
	10229	Lock Washer, 3/8"
	10210	Washer, 3/8" USS
10.	A2054	Spring With Plug
11.	10016	Hex Head Cap Screw, 1/2"-13 x 2"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
12.	B0113	Wheel Arm Stop
A.	A3086	Standard Closing Wheel Complete With Bearing, Nylon (Items 1-4)

HOPPER SUPPORT AND METER DRIVE


RUB005

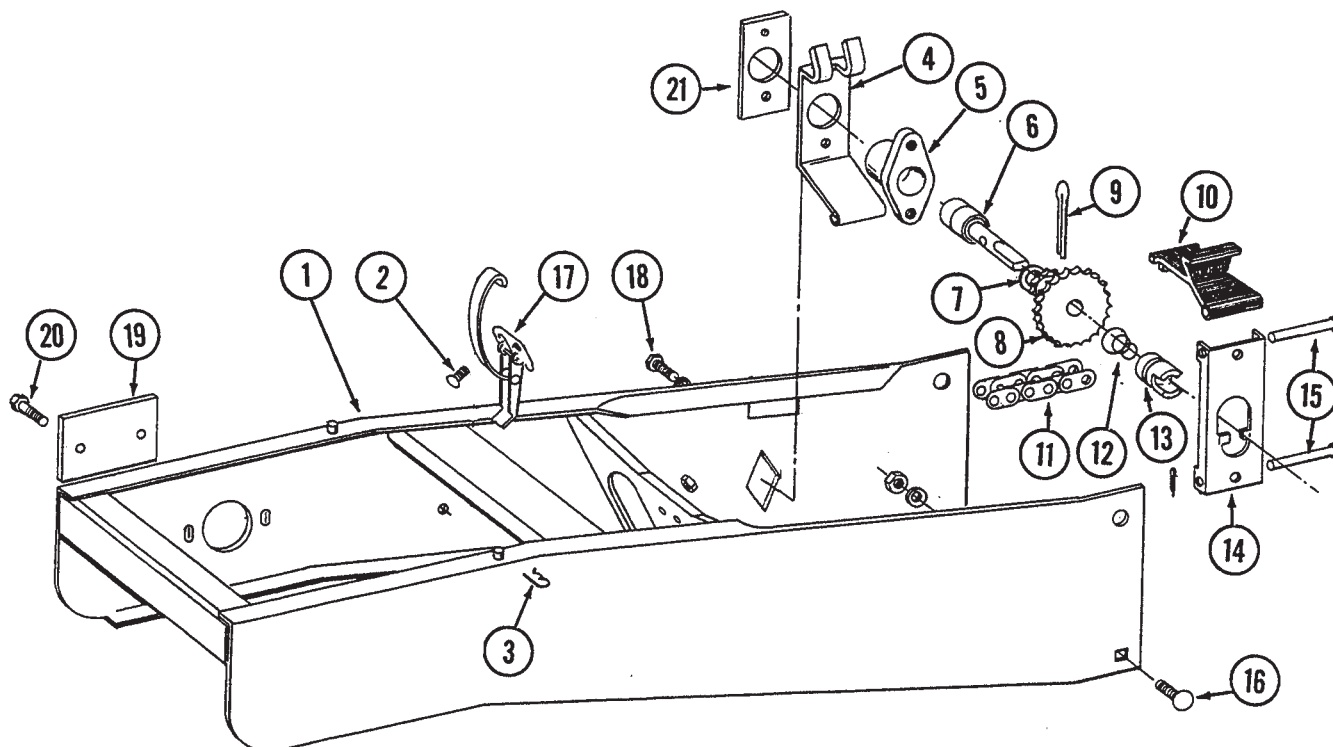

ITEM	PART NO.	DESCRIPTION
1.	A5906	Hopper Support
2.	10309	Carriage Bolt, 1/4"-20 x 5/8", Grade 2
	10621	Flange Nut, 1/4"-20
3.	10670	Spring Locking Pin, No. 3
4.	D1037	Bearing Support
5.	B0108	Bearing Housing
6.	A2016	Bearing
7.	10204	Machinery Bushing, 21/32" (As Required)
8.	B0107	Sprocket, 11/19 Tooth
9.	10457	Cotter Pin, 5/32" x 1 1/2"
10.	D1035	Release Handle
11.	3303-98	Roller Chain, No. 41, 98 Links Including Connector Link
	R0196	Connector Link, No. 41
12.	D8458	Compression Spring
13.	B0109	Drive Coupler
14.	D1036	Drive Release Lever
15.	10553	Clevis Pin, 1/4" x 2 5/8"
	10455	Cotter Pin, 1/16" x 1/2"
16.	10305	Carriage Bolt, 3/8"-16 x 1", Grade 2
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
17.	A2007	Hopper Hold Down Latch
18.	10019	Hex Head Cap Screw, 5/16"-18 x 1"
	10232	Lock Washer, 5/16"
19.	D7618	Cover
20.	10312	Carriage Bolt, 5/16"-18 x 3/4"
	10620	Flange Nut, 5/16"-18
21.	D2128	Plate
A.	A4822	Meter Drive Assembly Complete (Items 4-10,12-15 And 18)

SEED HOPPER


RUA015

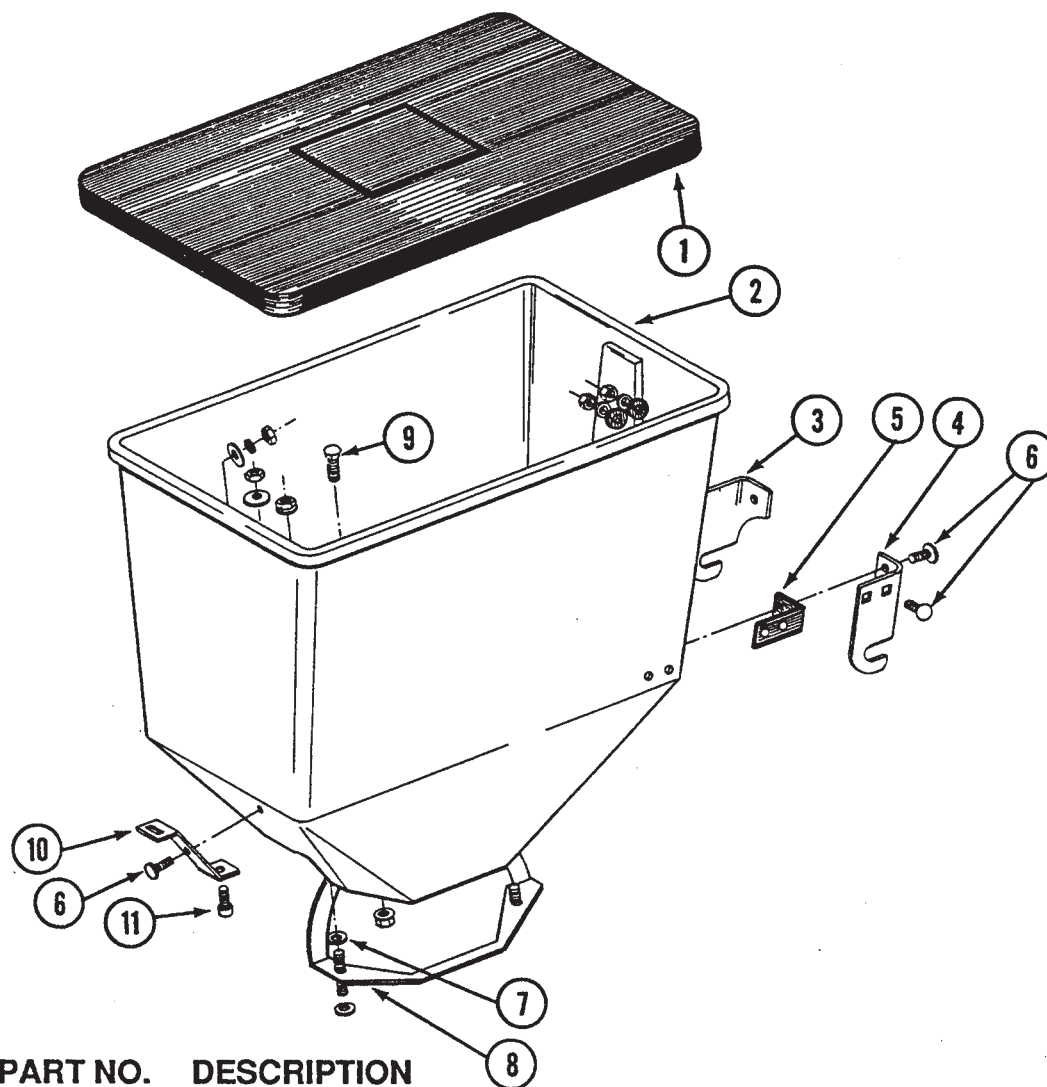

ITEM	PART NO.	DESCRIPTION
1.	A2327	Lid With Clip
2.	D1053	Seed Hopper
3.	D1051L	Bracket, Left Hand
4.	D1051R	Bracket, Right Hand
5.	D1054	Mounting Pad
6.	10310	Carriage Bolt, 1/4"-20 x 3/4", Grade 2
	D1121	Rubber Washer
	10209	Washer, 1/4" USS
	10110	Self Locking Nut, 1/4"-20
7.	D1121	Rubber Washer
8.	A2027	Retainer
9.	10310	Carriage Bolt, 1/4"-20 x 3/4", Grade 2
	10621	Whiz Lock Nut, 1/4"
10.	D1055	Clip
11.	10520	Hex Head Cap Screw, 3/8"-16 x 3/4", Grade 8
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
A.	A2058	Seed Hopper With Hardware, Less Lid (Items 2-11)

FINGER PICKUP CORN METER


RUA015

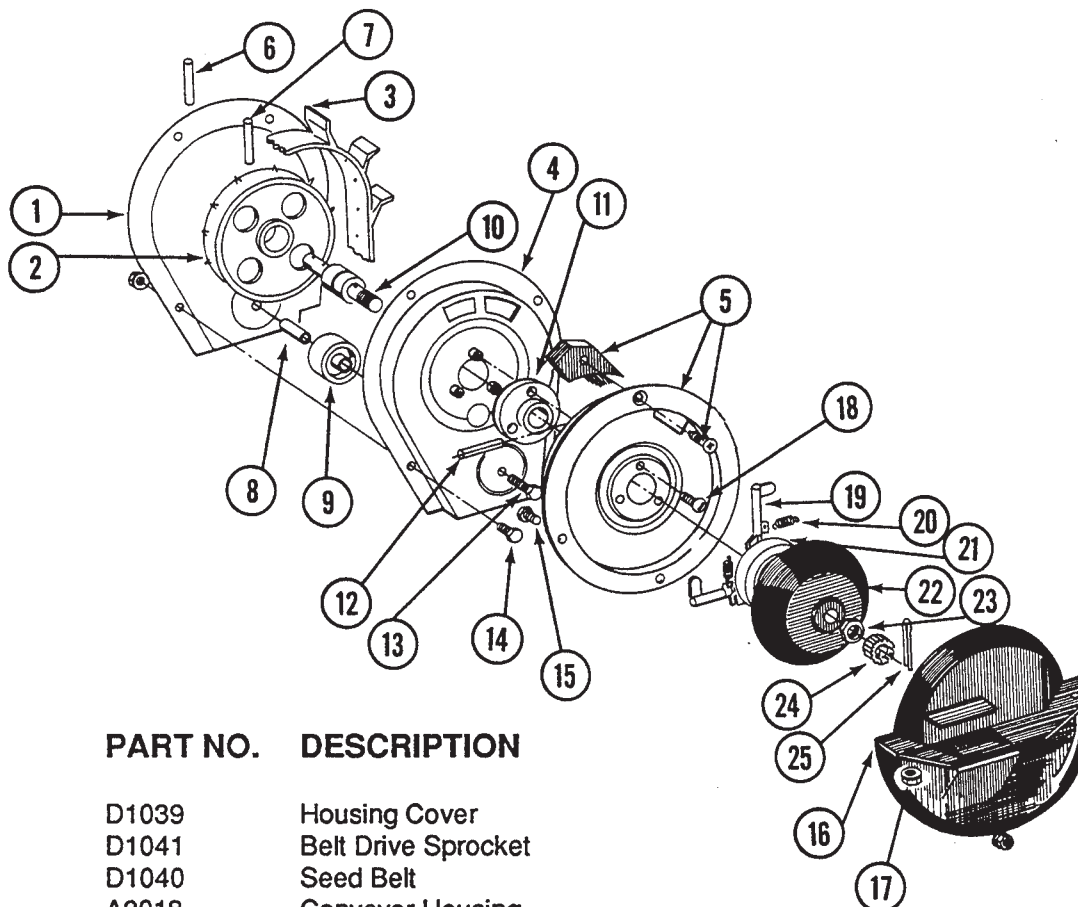

ITEM	PART NO.	DESCRIPTION
1.	D1039	Housing Cover
2.	D1041	Belt Drive Sprocket
3.	D1040	Seed Belt
4.	A2018	Conveyor Housing
5.	R0664	Carrier With Brush And Screw
	A2020	Brush
	10690	Rolling Thread Screw, No. 10 x 3/4"
6.	10602	Spring Pin, 1/4" x 1 1/2"
7.	10604	Spring Pin, 3/16" x 1 1/2"
8.	B0120	Bushing
9.	D1042	Idler
10.	A2019	Bearing
11.	B0110	Bearing Housing
12.	10603	Spring Pin, 1/4" x 1 1/4"
13.	10021	Hex Head Cap Screw, 1/4"-20 x 1 1/2"
	10621	Flange Nut, 1/4"
14.	10022	Hex Head Cap Screw, 1/4"-20 x 1/2"
	10621	Flange Nut, 1/4"
15.	10020	Hex Head Cap Screw, 1/4"-20 x 5/8"
	10323	Hex Flange Nut, 1/4"-20
16.	D1046	Seed Baffle
17.	10620	Flange Nut, 5/16"-18
18.	10401	Machine Screw, No. 10-32 x 5/8"
19.	D1044	Finger (12 Per Meter)
20.	D6501	Spring
21.	B0111	Cam
22.	D1045	Finger Holder
23.	10500	Jam Nut, 5/8"-18 UNF
24.	D1083	Cage Nut, 5/8"
25.	10470	Cotter Pin, 5/32" x 1"
A.	R0933	Finger Assembly (Items 19-22)

BRUSH-TYPE SEED METER


RUA037

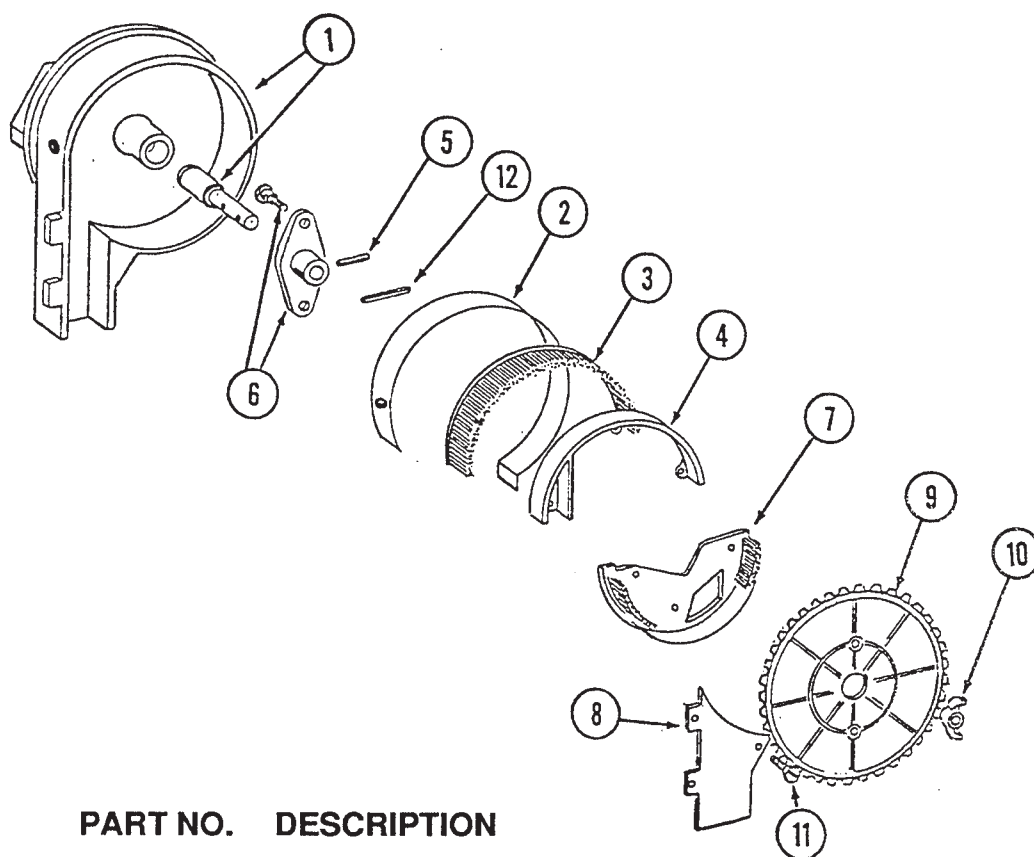

ITEM	PART NO.	DESCRIPTION
1.	A6027	Housing W/Bearing
	A5698	Bearing
2.	D8778	Wear Strip
3.	A5699	Retaining Brush
4.	D8237	Upper Brush Holder
5.	10603	Spring Pin, 1/4" x 1 1/4"
6.	A6038	Hub W/Shoulder Bolts
	D1755	Shoulder Bolt, 1/4"
7.	A5834	Lower Brush Holder
8.	D7878	Cover
9.	A5794	Seed Disc, Soybean , 60 Cell, Black Color-coded
	A6184	Seed Disc, Specialty Soybean, 48 Cell, Dark Blue Color-coded
	A5982	Seed Disc, Small Milo/Grain Sorghum, 30 Cell, Red Color-coded
	A6187	Seed Disc, Large Milo/Grain Sorghum, 30 Cell, Light Blue Color-coded
	A5795	Seed Disc, High Rate Milo/Grain Sorghum, 60 Cell, Red Color-coded
	A6633	Seed Disc, High Rate Large Milo/Grain Sorghum, 60 Cell, Yellow Color-coded
	A5796	Seed Disc, Cotton, Acid-delinted, 30 Cell, White Color-coded
	A6168	Seed Disc, Large Cotton, Acid-delinted, 36 Cell, Tan Color-coded
	A6478	Seed Disc, High Rate Cotton, Acid-delinted, 48 Cell, Light Green Color-coded
	A6182	Seed Disc, Hill-drop Cotton, Acid-delinted, 12 Cell, Brown Color-coded
10.	10531	Nylon Insert Wing Nut, 1/4"-20
11.	10584	Slotted Tap Screw, No. 10-24 x 1/2"
12.	10602	Spring Pin, 1/4" x 1 1/2"

GRANULAR CHEMICAL BANDERS


RUA013/RUA012/RUA016

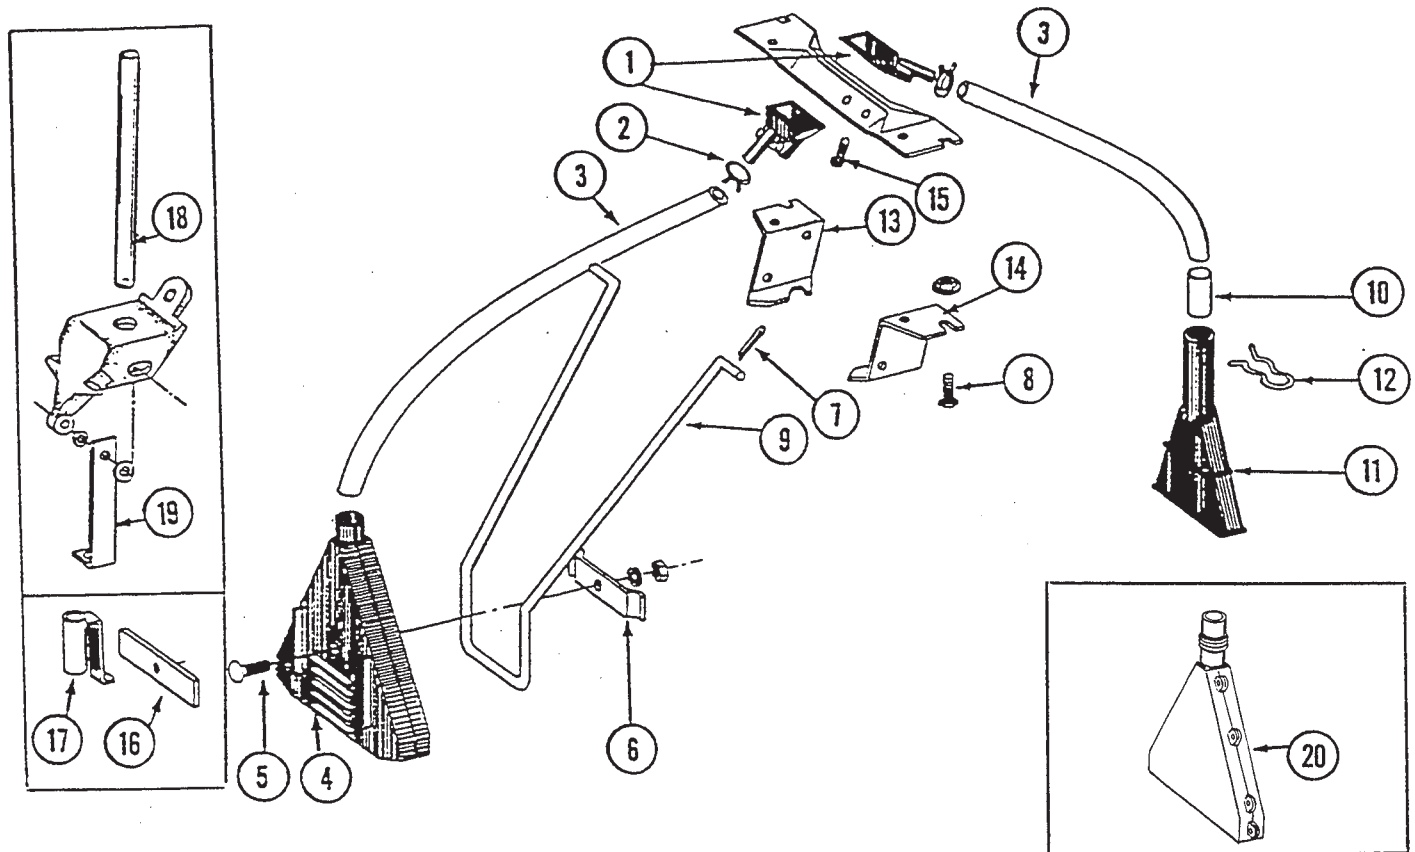

ITEM	PART NO.	DESCRIPTION
1.	D2423	Funnel
2.	10680	Hose Clamp, 7/16"
3.	D1128	Hose, 7/16" x 18"
4.	A2075	Diffuser, 14" Band
5.	10306	Carriage Bolt, 3/8"-16 x 2", Grade 2
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
6.	D1118	Clamp
7.	10452	Cotter Pin, 1/8" x 1/2"
8.	10310	Carriage Bolt, 1/4"-20 x 3/4", Grade 2
	10227	Lock Washer, 1/4"
	10103	Hex Nut, 1/4"-20
9.	D1116	Hanger
10.	D1082	Tube
11.	D1081	Spreader, 7" Band
12.	D1090	Spring Clip
13.	D1115L	Hanger Bracket, L.H.
14.	D1115R	Hanger Bracket, R.H.
15.	10523	Self Tapping Screw, No. 10 x 1/2"
16.	D1323	Strap (Rear Mount)
17.	A0485	Tube With Bracket (Rear Mount)
18.	D2947	Hose, 7/16" x 28" (Direct Drop)
19.	D2864	Bracket (Direct Drop)
20.	A6476	Slope-compensating Spreader (3" or 7" Band)

GRANULAR CHEMICAL HOPPER WITH METER(S) & THROWOUT

RUA008/RUB005/RUB014/RUA033/RUA034/RUA006

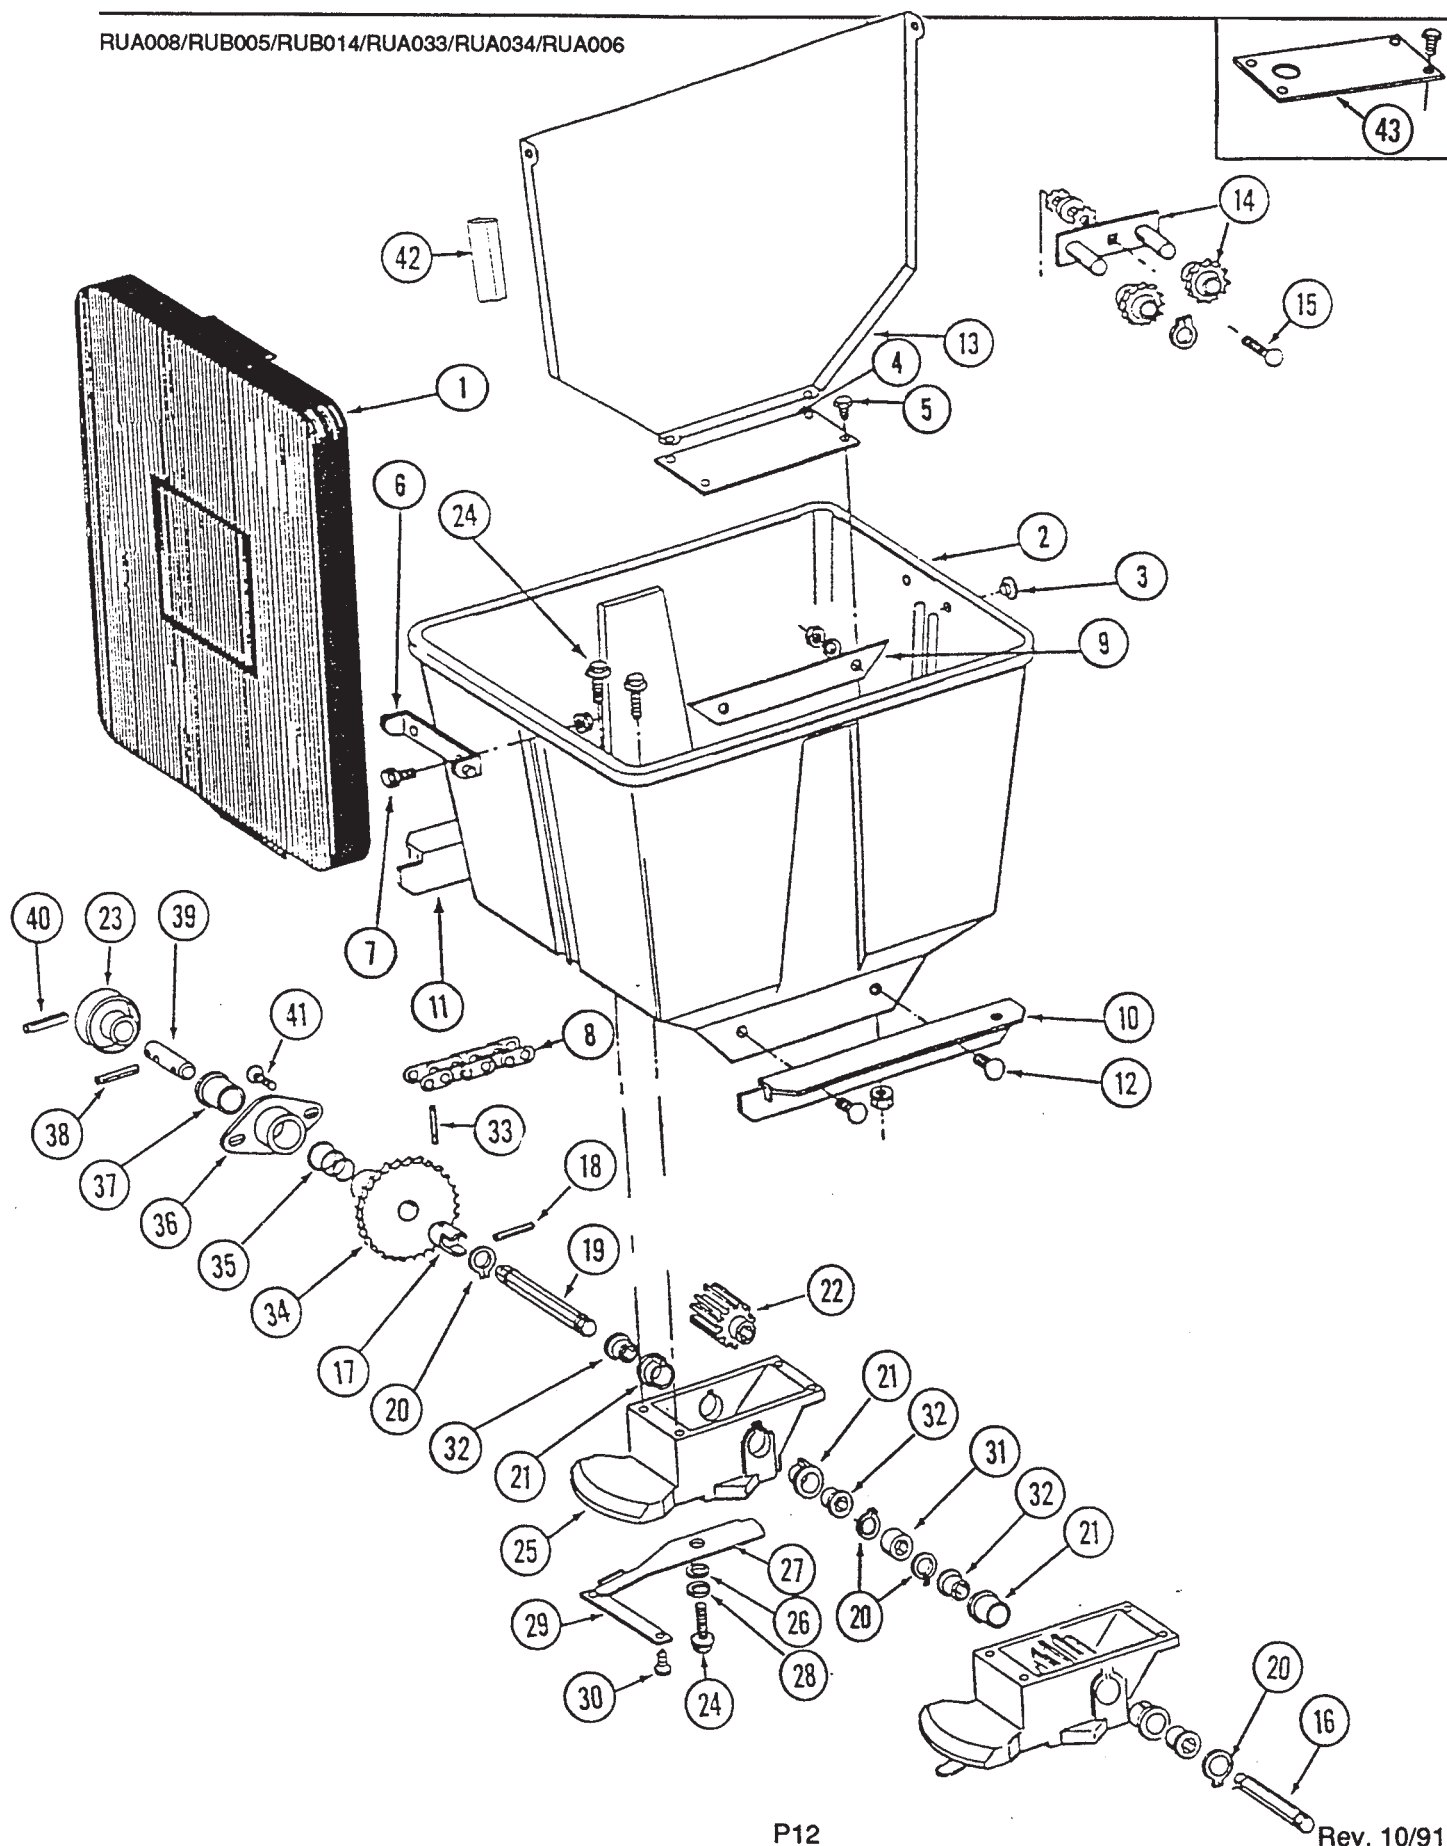


GRANULAR CHEMICAL HOPPER WITH METER(S) & THROWOUT

ITEM	PART NO.	DESCRIPTION
1.	A4444	Lid
2.	D1058	Hopper
3.	D1089	Plug
4.	D1056	Cover Plate
5.	10022	Hex Head Cap Screw, 1/4"-20 x 1/2"
	10621	Flange Nut, 1/4"-20
6.	D1060	Hinge
7.	10023	Hex Head Cap Screw, 1/4"-20 x 3/4"
	10621	Flange Nut, 1/4"-20
8.	3303-114	Roller Chain, No. 41, 114 Pitch Including Connector Link
	R0196	Connector Link, No. 41
9.	D1072	Strap
10.	D1059R	Support, Right Hand
11.	D1059L	Support, Left Hand
12.	10311	Carriage Bolt, 3/8"-16 x 3/4" Short Necked, Grade 2
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
13.	A2076	Divider
14.	A2008	Idler Arm With Sprockets And Rings
	D7426	Sprocket
	10435	Ring
15.	10305	Carriage Bolt, 3/8"-16 x 1", Grade 2
	10524	Internal-External Lock Washer, 3/8"
	10207	Washer, 3/8"
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
16.	D7591	Shaft
17.	B0184	Coupling
18.	10546	Spring Pin, 3/16" x 1 1/4"
19.	D7588	Shaft
20.	10567	Retaining Ring
21.	B0115	Bearing
22.	D7148	Feed Roller, Hex Bore
23.	D7587	Knob
24.	10570	Self Tapping Screw, 1/4" x 3/4"
25.	B0116	Granular Housing
26.	10660	Wave Washer
27.	D1063	Metering Gate
28.	10209	Washer, 1/4" USS
29.	D1061	Support Strap
30.	10521	Self Tapping Screw, No. 10 x 3/8"
31.	D7592	Coupler, Hex Bore
32.	D7258	Hex Bushing
33.	10609	Spring Pin, 5/32" x 1"
34.	A5533	Sprocket, 24 Tooth
35.	D8458	Spring
36.	B0183	Bearing Mount
37.	B0121	Bearing
38.	10602	Spring Pin, 1/4" x 1 1/2"
39.	D7589	Throwout Pin
40.	10637	Spring Pin, 1/8" x 1 1/2"
41.	10312	Carriage Bolt, 5/16"-18 x 3/4"
	10620	Flange Nut, 5/16"-18
42.	3314-40	Foam Strip, 40"
43.	D8750	Restrictor Plate (Optional)

NO TILL COULTER, ROW UNIT MOUNTED

(Plateless Row Unit & Interplant Push Row Unit)


RUA036

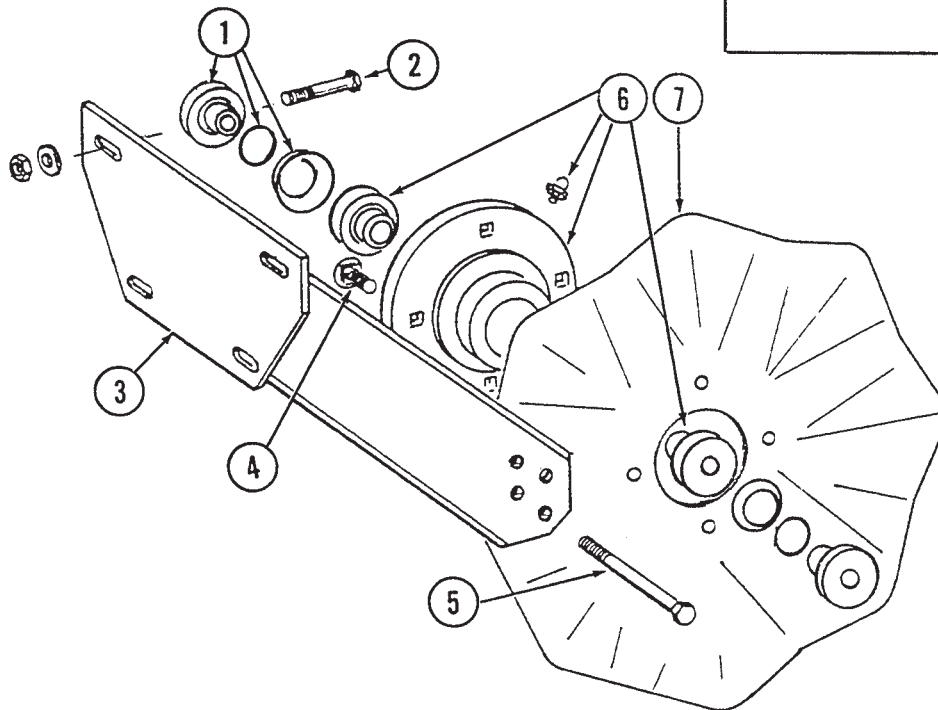

ITEM	PART NO.	DESCRIPTION
1.	GB0227	Adapter W/O-Ring And Spring Washer
	D8844	O-Ring
	D8843	Spring Washer
2.	10574	Carriage Bolt, 1/2"-13 x 1 1/4"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
3.	A5625	Arm
4.	10574	Carriage Bolt, 1/2"-13 x 1 1/4"
	10111	Lock Nut, 1/2"-13
5.	10036	Hex Head Cap Screw, 5/8"-11 x 4"
	10107	Lock Nut, 5/8"-11
6.	GA5640	Hub W/Bearings And Grease Fitting
	A5622	Bearing
	10640	Grease Fitting, 1/4"-20
7.	D7803	Fluted Blade, 1", 8 Flutes (Shown)
	D7804	Rippled Blade, 1"
	D9254	Fluted Blade, 3/4", 13 Flutes
8.	B0191	Adapter (Sub GB0227)

DISC FURROWER, ROW UNIT MOUNTED

RUA038

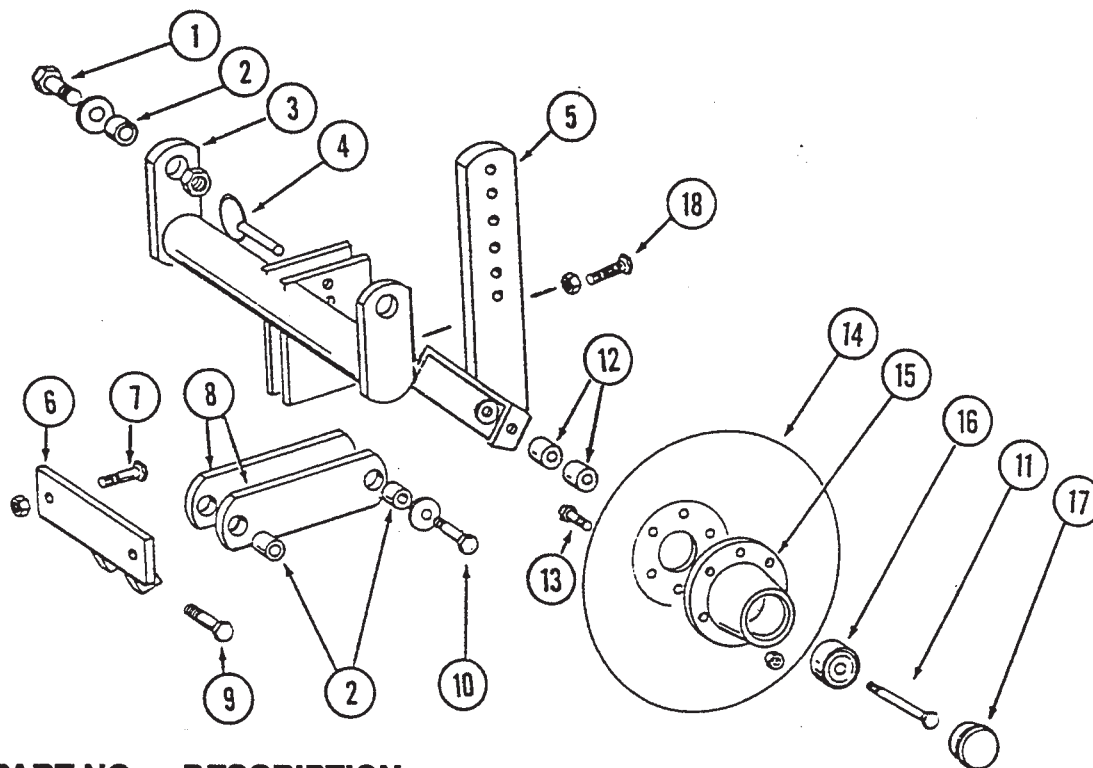

ITEM	PART NO.	DESCRIPTION
1.	10039	Hex Head Cap Screw, 1/2"-13 x 1 3/4"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
2.	D7889	Bushing
3.	A5719	Mounting Bracket
4.	10536	Pin
5.	A5718	Support Arm
6.	A5715	Anchor
7.	10017	Hex Head Cap Screw, 1/2"-13 x 1 1/2"
	10111	Lock Nut, 1/2"-13
8.	D7890	Link
9.	10017	Hex Head Cap Screw, 1/2"-13 x 1 1/2"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
10.	10585	Hex Head Cap Screw, 1/2"-13 x 3 1/4"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
11.	10318	Hex Head Cap Screw, 5/8"-11 x 4 1/2"
	D7805	Special Washer
	10107	Lock Nut, 5/8"-11
12.	D7817-01	Spacer, 3/4"
	D7817-04	Spacer, 1/2"
13.	10572	Truss Head Slotted Machine Screw, 5/16"-18 x 7/8"
	10106	Hex Nut, 5/16"-18
14.	D7823	Solid Disc, 12" (Shown)
	D8307	Notched Disc, 12"
15.	B0195	Hub
16.	A2014	Bearing
17.	D1132	Dust Cap
18.	10503	Jam Nut, 5/8"-11
	10597	Set Screw, 5/8"-11 x 2 1/4"

RUA035




FRAME MOUNTED COULTER W/DISC FURROWER

ITEM	PART NO.	DESCRIPTION
1.	10217	Washer, 5/8" USS
2.	D7817-04	Spacer, 1/2"
3.	GB0227	Adapter W/O-Ring And Spring Washer
	D8844	O-Ring
	D8843	Spring Washer
4.	10574	Carriage Bolt, 1/2"-13 x 1 1/4"
	10111	Lock Nut, 1/2"-13
5.	D7803	Fluted Blade, 1", 8 Flutes (Shown)
	D7804	Rippled Blade, 1"
	D9254	Fluted Blade, 3/4", 13 Flutes
6.	GA5640	Hub W/Bearings And Grease Fitting
	A5622	Bearing
	10640	Grease Fitting, 1/4"-20
7.	D7817-09	Stop, 1 3/4"
8.	10068	Hex Head Cap Screw, 5/8"-11 x 6"
	10107	Lock Nut, 5/8"-11
9.	A5643	Fork Mount
10.	10012	Hex Head Cap Screw, 5/8"-11 x 6 1/2"
	D7805	Washer
	10107	Lock Nut, 5/8"-11
11.	B0218	Bushing
12.	10055	Hex Head Cap Screw, 5/8"-11 x 1 1/4"
	D7805	Washer
13.	A5637	Spring Socket
14.	A5631	Lower Parallel Link
15.	D7815	Pin, 5/8" x 4 1/4"
16.	10008	Hex Head Cap Screw, 5/8"-11 x 2"
	D7805	Washer
	10107	Lock Nut, 5/8"-11
17.	D7818	Special Bolt
18.	D7817-01	Roller, 3/4"
19.	D7816	Depth Control Bar
20.	D7811	Depth Adjustment Clamp
21.	10581	Hex Head Cap Screw, 1/2"-13 x 2 1/4"
	10228	Lock Washer, 1/2"
22.	10582	Hex Head Cap Screw, 5/8"-11 x 4", Full Thread
23.	10104	Hex Nut, 5/8"-11
24.	10573	Hex Head Cap Screw, 5/8"-11 x 5 1/2", Full Thread
25.	B0196	Washer
26.	D7831	Compression Spring
27.	A5635	Spring Guide
28.	A5630	Upper Parallel Link
29.	D1132	Dust Cap
30.	10197	Carriage Bolt, 1/2"-13 x 2"
	10206	Washer, 1/2" SAE
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
31.	A5636	Arm
32.	D7823	Solid Disc, 12" (Shown)
	D8307	Notched Disc, 12"
33.	10572	Truss Head Slotted Machine Screw, 5/16"-18 x 7/8"
	10106	Hex Nut, 5/16"-18
34.	B0195	Hub
35.	A2014	Bearing
36.	10036	Hex Head Cap Screw, 5/8"-11 x 4"
	10107	Lock Nut, 5/8"-11
37.	B0191	Adapter (Sub GB0227)

BED LEVELER, ROW UNIT MOUNTED


RUA038/RUA040

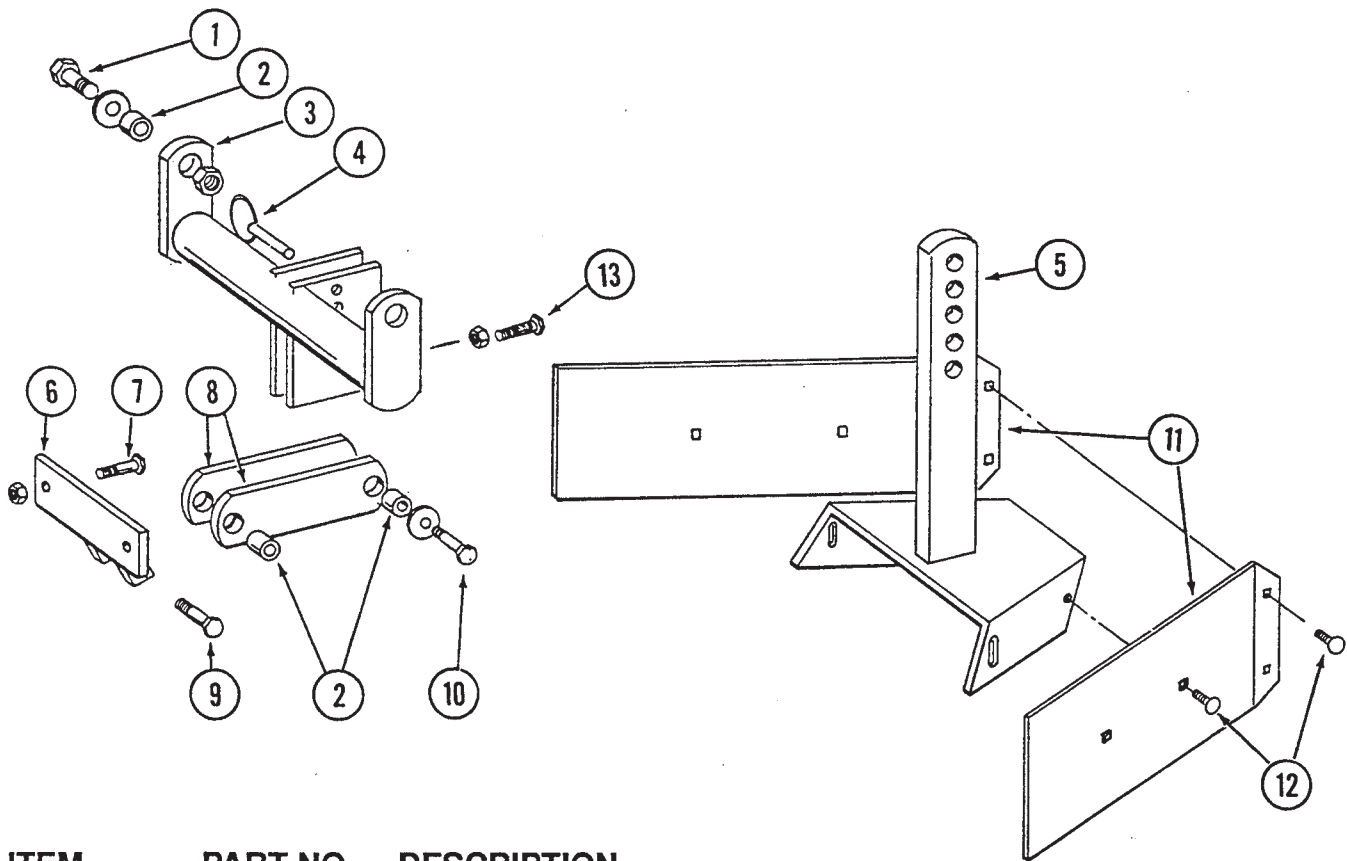

ITEM	PART NO.	DESCRIPTION
1.	10039	Hex Head Cap Screw, 1/2"-13 x 1 3/4"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
2.	D7889	Bushing
3.	A5719	Mounting Bracket
4.	10536	Pin
5.	A5892	Leveler
6.	A5715	Anchor
7.	10017	Hex Head Cap Screw, 1/2"-13 x 1 1/2"
	10111	Lock Nut, 1/2"-13
8.	D7890	Link
9.	10017	Hex Head Cap Screw, 1/2"-13 x 1 1/2"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
10.	10585	Hex Head Cap Screw, 1/2"-13 x 3 1/4"
	10216	Washer, 1/2" USS
	10111	Lock Nut, 1/2"-13
11.	D8266	Blade
12.	10303	Carriage Bolt, 5/16"-18 x 1"
	10219	Washer, 5/16" USS
	10109	Lock Nut, 5/16"
13.	10503	Jam Nut, 5/8"-11
	10597	Set Screw, 5/8"-11 x 2 1/4"

SPRING TOOTH INCORPORATOR

RUA011

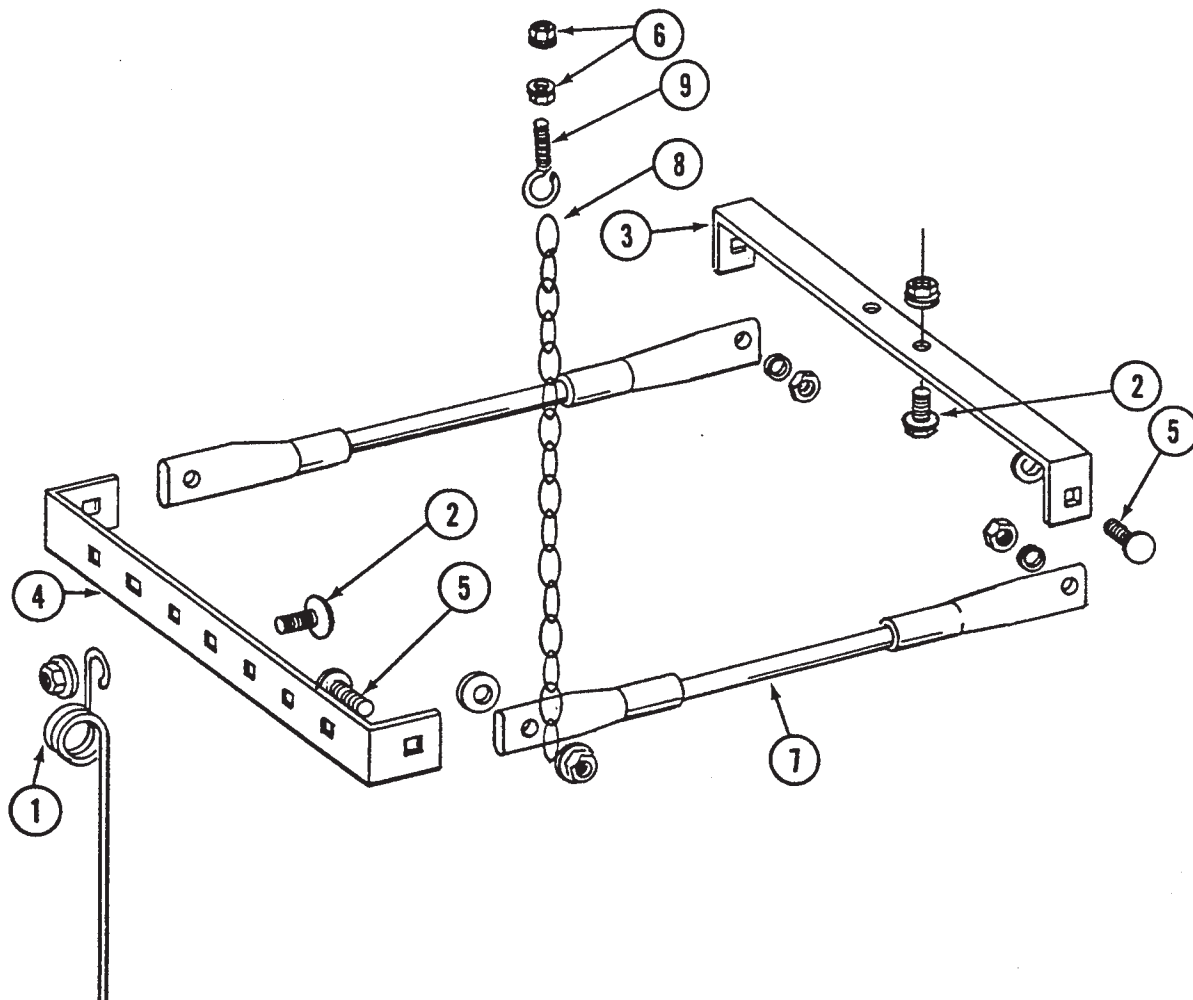

ITEM	PART NO.	DESCRIPTION
1.	D1145	Spring Tooth
2.	10308	Carriage Bolt, 3/8"-16 x 3/4", Grade 2
	10622	Flange Lock Nut, 3/8"-16
3.	D1143	Front Bracket
4.	D1144	Rear Bracket
5.	10305	Carriage Bolt, 3/8"-16 x 1", Grade 2
	10529	External Tooth Lock Washer, 3/8"
	10622	Flange Lock Nut, 3/8"-16
6.	10621	Flange Lock Nut, 1/4"-20
7.	A2094	Cable Assembly
8.	3305-01	Chain
9.	D2460	Eyebolt, 1/4"-20

RPU001/RPU009




INTERPLANT PUSH UNIT

ITEM	PART NO.	DESCRIPTION
1.	D7627	Lockup, L.H. (Optional)
2.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
3.	D1113	U-Bolt, 5" x 7" x 5/8"-11
	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
4.	A5786	Mounting Plate
5.	A5787	Lower Arm
6.	A5788	Upper Arm
7.	B0186	Spring Anchor
8.	10545	Detent Pin, 1" Grip
9.	A5846	Shank Assembly
10.	D2128	Plate
11.	D6161	Stop Bar
12.	10036	Hex Head Cap Screw, 1/2"-13 x 2"
	10216	Washer, 1/2" USS
	10102	Hex Nut, 1/2"-13
13.	D8249	Spring
14.	D7626	Lockup, R.H. (Optional)
15.	10017	Hex Head Cap Screw, 1/2"-13 x 1 1/2"
	10228	Lock Washer, 1/2"
	10111	Lock Nut, 1/2"-13
16.	3303-96	Roller Chain, No. 41, 96 Links Including Connector Link
	R0196	Connector Link, No. 41
17.	D2134	Idler Spring
18.	A2056	Idler Arm
19.	D1026	Spacer
20.	D7426	Sprocket
21.	10435	Retaining Ring
22.	10210	Washer, 3/8" USS
23.	10108	Lock Nut, 3/8"-16
24.	10384	Special Washer, 3/8"
A.	A5564	Lockup Package, Includes: (1) D7627, (1) D7626, (2) 10228, (2) 10017, (2) 10111

HITCH AND FRAME ASSEMBLY

PFA027/PFA037/PHA014

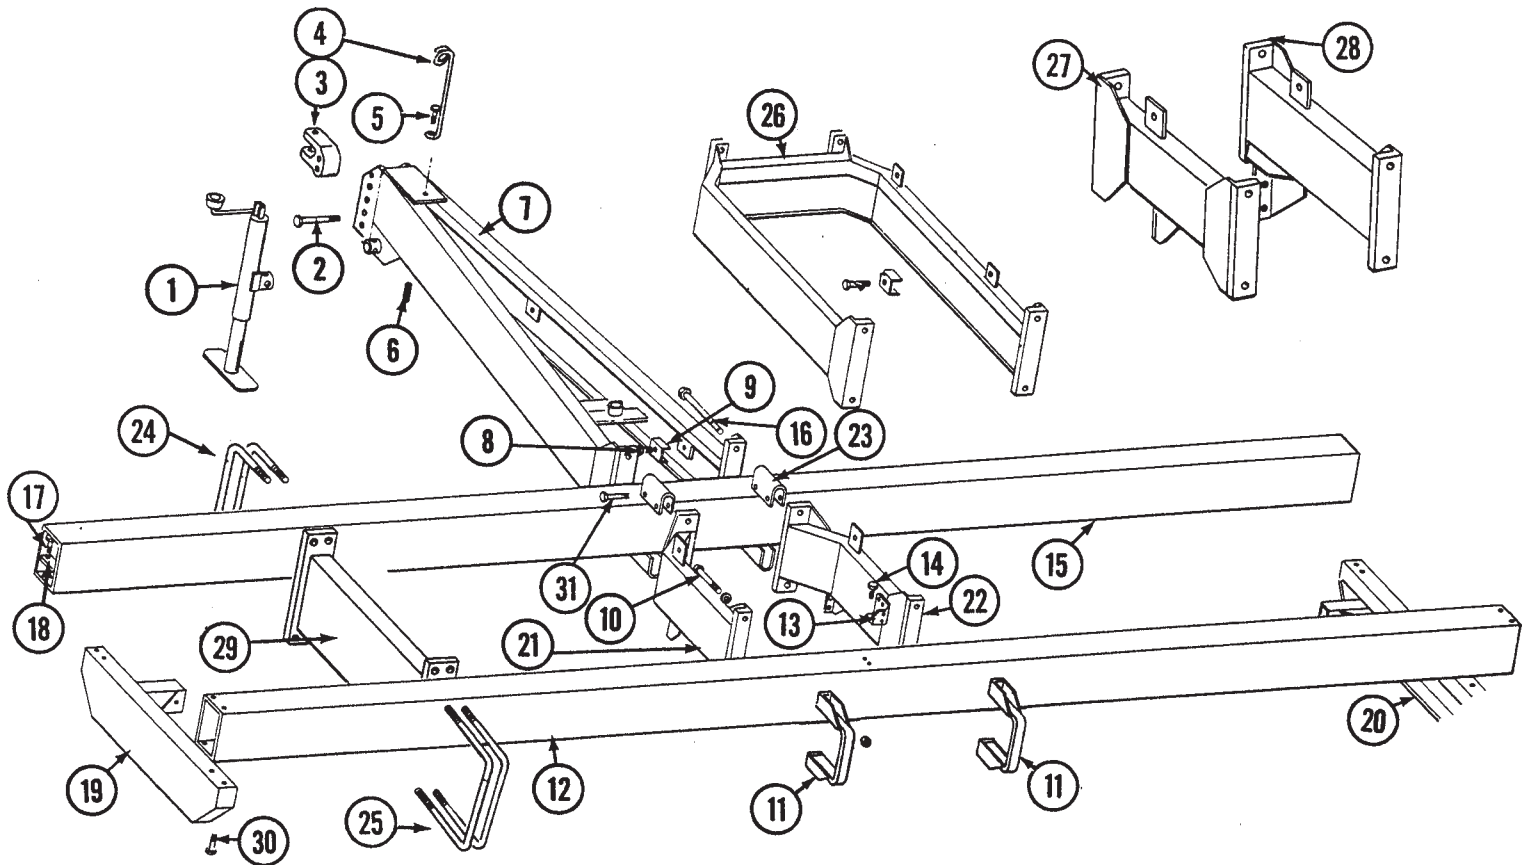


ITEM	PART NO.	DESCRIPTION
1.	4100-02	Jack Assembly
	R0255	Repair Kit (Chain and Pin)
2.	10417	Hex Head Cap Screw, 7/8"-9 x 4 1/2"
	10418	Lock Nut, 7/8"-9
3.	B0181	Clevis
4.	D7140	Hose Holder
5.	10348	Hex Head Cap Screw, 1/2"-13 x 5"
	10216	Washer, 1/2" USS
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
6.	D5888	Spring
7.	A4275	Hitch

HITCH AND FRAME ASSEMBLY

ITEM	PART NO.	DESCRIPTION
8.	10047	Hex Head Cap Screw, 3/8"-16 x 1 3/4"
	10108	Lock Nut, 3/8"-16
9.	D5875	Hose Clamp, 3/4" x 2 1/2" x 2 1/2"
10.	10645	Hex Head Cap Screw, 1"-8 x 3", Grade 8
	10647	Hex Nut, 1"-8, Grade 8
11.	A5921	Hitch Clamp
12.		Bar, 7" x 7" x 120", 4 Row 30 (Non-stock Item)
		Bar, 7" x 7" x 144", 4 Row 36/38 (Non-stock Item)
		Bar, 7" x 7" x 180", 6 Row 30 (Non-stock Item)
		Bar, 7" x 7" x 220", 6 Row 36/38 (Non-stock Item)
		Bar, 7" x 7" x 240", 8 Row 30 (Non-stock Item)
		Bar, 7" x 7" x 296", 8 Row 36/38 (Non-stock Item)
		Bar, 7" x 7" x 310", 8 Row 40 (Non-stock Item)
13.	A5141	Valve Mounting Angle
14.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
15.		Double Frame® Bar, 7" x 5" x 120", 4 Row 30 (Non-stock Item)
		Double Frame® Bar, 7" x 5" x 144", 4 Row 36/38 (Non-stock Item)
		Double Frame® Bar, 7" x 5" x 180", 6 Row 30 (Non-stock Item)
		Double Frame® Bar, 7" x 5" x 220", 6 Row 36/38 (Non-stock Item)
		Double Frame® Bar, 7" x 5" x 240", 8 Row 30 (Non-stock Item)
		Double Frame® Bar, 7" x 5" x 296", 8 Row 36/38 (Non-stock Item)
		Double Frame® Bar, 7" x 5" x 310", 8 Row 40 (Non-stock Item)
16.	10646	Hex Head Cap Screw, 1"-8 x 8", Grade 8
	10647	Hex Nut, 1"-8, Grade 8
17.	10026	Hex Head Cap Screw, 3/4"-10 x 2"
	10112	Lock Nut, 3/4"-10
18.	D5930	Bar
19.	A5199	End Extension, L.H.
20.	A5198	End Extension, R.H.
21.	A5201	Center Extension, L.H., Offset, 24"
22.	A5200	Center Extension, R.H., Offset, 24"
23.	A5197	Spacer
24.	D1113	U-Bolt, 5" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
25.	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
26.	A4262	Hitch Extension W/Hose Clamps And Hardware, Push Unit (30" Rows), 46" x 26 1/2"
	A4264	Hitch Extension W/Hose Clamps And Hardware, Push Unit (36"/38" Rows), 46" x 23 1/2"
	D6027	Hose Clamp, 1" x 2 1/2" x 3"
	10003	Hex Head Cap Screw, 3/8"-16 x 1 1/2"
	10108	Lock Nut, 3/8"-16
27.	A5269	Hitch/Center Extension, L.H., Straight, 24"
28.	A5270	Hitch/Center Extension, R.H., Straight, 24"
29.	A4265	Straight Extension
30.	10026	Hex Head Cap Screw, 3/4"-10 x 2", Single Frame Planter
	10027	Hex Head Cap Screw, 3/4"-10 x 2 1/2", Double Frame® Planter
	10231	Lock Washer, 3/4"
	10105	Hex Nut, 3/4"-10
31.	10061	Hex Head Cap Screw, 3/8"-16 x 3 1/2"
	10210	Washer, 3/8" USS
	10108	Lock Nut, 3/8"-16

TRANSPORT AND GROUND DRIVE WHEEL ASSEMBLY

PLA013/PLA015/HTA014

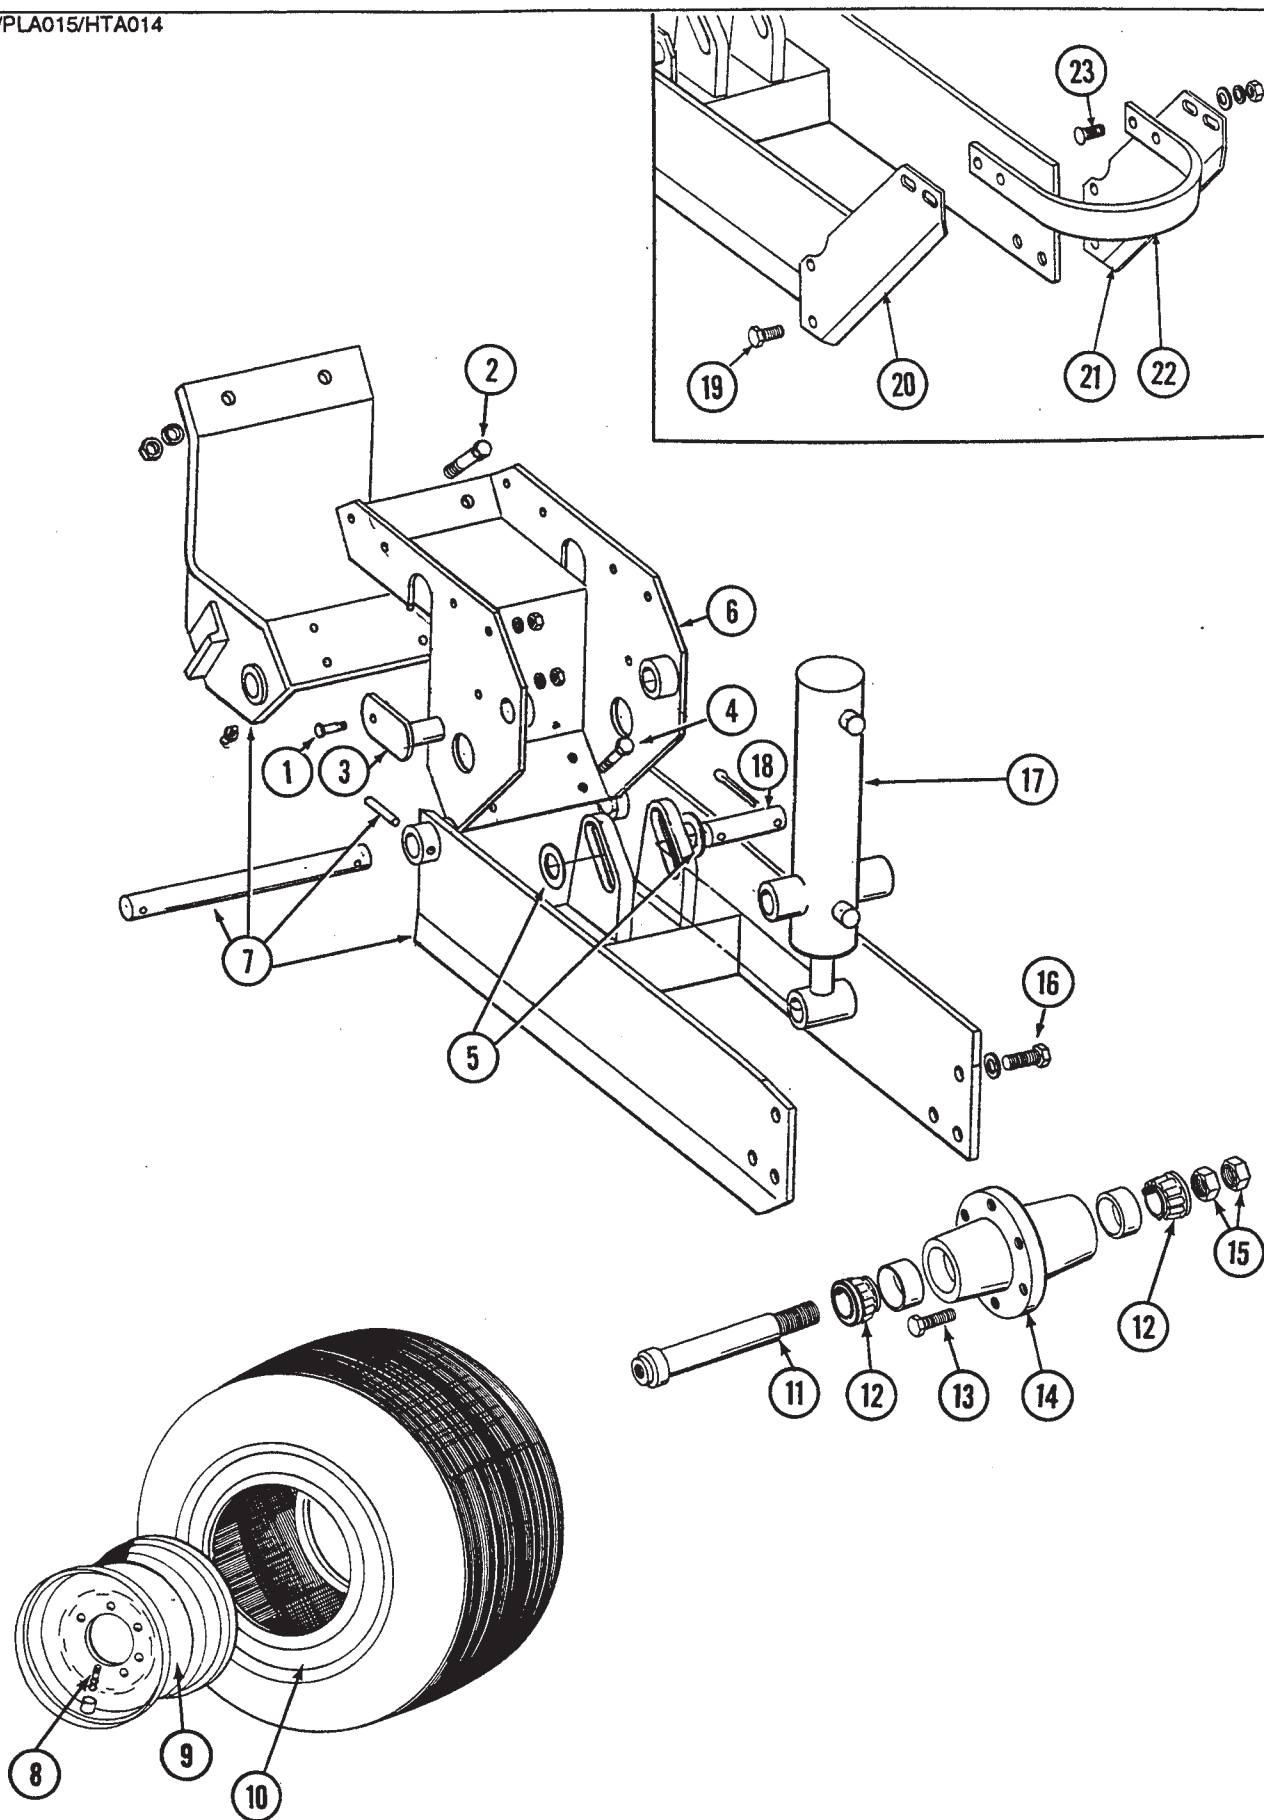


TRANSPORT AND GROUND DRIVE WHEEL ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1.	10037	Hex Head Cap Screw, 1/2"-13 x 1 1/4"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
2.	10009	Hex Head Cap Screw, 5/8"-11 x 2 1/2"
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
3.	A5121	Pin
4.	10008	Hex Head Cap Screw, 5/8"-11 x 2"
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
5.	10139	Washer, 1 1/4" USS
6.	A5122	Wheel Tower Clamp
7.	A5124	Arm W/Pin, Clamp, Grease Fittings And Spring Pins
	D5804	Pin, 1 1/4" x 12"
	A5123	Clamp
	10641	Grease Fitting, 1/8" NPT
	10610	Spring Pin, 3/8" x 2"
8.	D1166	Valve Stem (Use with D0844 tire)
9.	A5196	Rim W/Valve Protector, 15" x 5.0" (Use with D0844 tire)
	A2142	Rim W/Valve Protector, 20" x 5.50" (Use with D6177 tire)
10.	D0844	Tire, 7.60" x 15", 4 Ply, Tubeless (Use with A5196 rim)
	D6177	Tire, 7.50" x 20", Tube Type Less Tube (Use with A2142 rim)
	D4167	Tube, 7.50" x 20"
11.	A2558	Spindle
12.	A0895	Cone
13.	R0270	Lug Bolt, 9/16"-12
14.	A2148	Hub W/Cups, 6 Bolt
	R0434	Cup
15.	10087	Jam Nut, 1 1/2"-10
16.	10026	Hex Head Cap Screw, 3/4"-10 x 2"
	10231	Lock Washer, 3/4"
17.		See "Lift Cylinders"
18.	D5841	Pin, 1 1/4" x 5 5/8"
	10460	Cotter Pin, 1/4" x 2"
19.	10025	Hex Head Cap Screw, 3/4"-10 x 1 1/2"
	10231	Lock Washer, 3/4"
	10105	Hex Nut, 3/4"-10
20.	D5845	Scraper Mount, L.H.
21.	D5846	Scraper Mount, R.H.
22.	D5847	Scraper Bar (Used With 20" Tire)
23.	10313	Carriage Bolt, 1/2"-13 x 1 1/2"
	10228	Lock Washer, 1/2"
	10216	Washer, 1/2" USS
	10102	Hex Nut, 1/2"-13
A.	A2147	Hub And Spindle Assembly (Items 11-16)

CONTACT DRIVE WHEEL AND ARM ASSEMBLY

PLA014

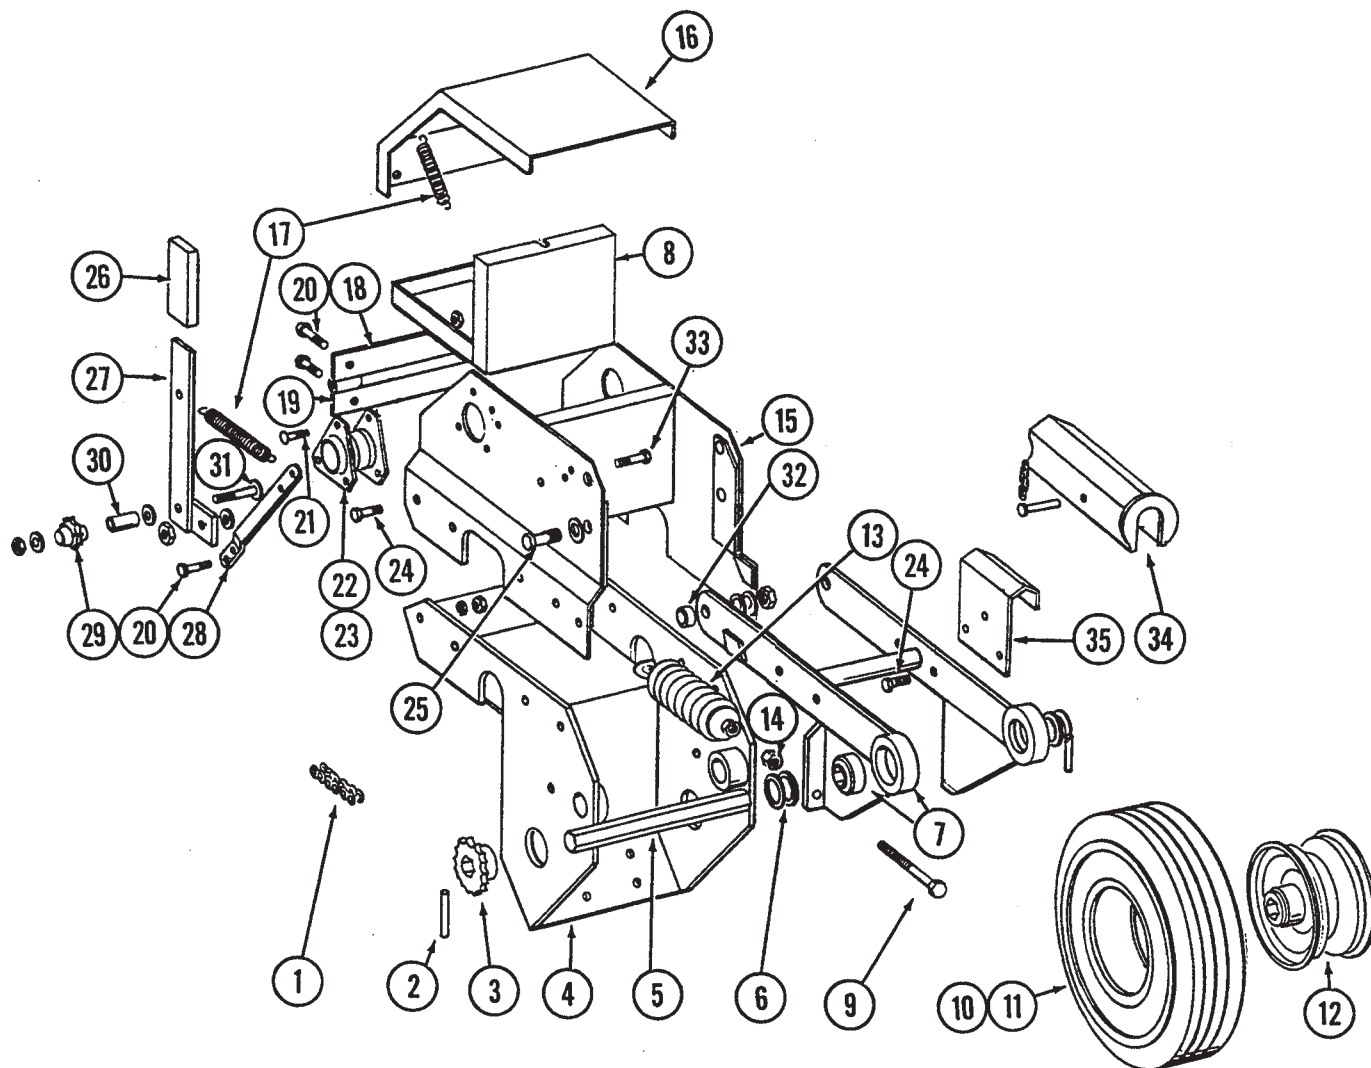


CONTACT DRIVE WHEEL AND ARM ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1.	3310-132	Chain, No. 40, 132 Pitch Including Connector Link
	R0912	Connector Link, No. 40
2.	10602	Spring Pin, 1/4" x 1 1/2"
3.	A5105	Sprocket, 15 Tooth
4.		See "Transport And Ground Drive Wheel"
5.	D5797	Shaft, 7/8" x 10"
6.	10233	Machine Bushing, 1"
7.	A5120	Wheel Arm W/Bearings
	A5116	Bearing, 7/8" Hex Bore Cylindrical
8.	A5180	Tool Box Insert
9.	10051	Hex Head Adjusting Bolt, 1/2"-13 x 3", Grade 2
10.	D5753	Tire, 4.10" x 6"
11.	D5752	Tube
12.	A5089	Rim
13.	A2068	Spring
14.	10501	Jam Nut, 1/2"
15.	A5118	Mount
16.	A5182	Cover
17.	D5857	Spring
18.	D5790	Hinge, Male
19.	D5789	Hinge, Female
20.	10023	Hex Head Cap Screw, 1/4"-20 x 3/4"
	10227	Lock Washer, 1/4"
	10103	Hex Nut, 1/4"-20
21.	10312	Carriage Bolt, 5/16"-18 x 3/4"
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
22.	3400-01	Flangette
23.	2100-03	Bearing, 7/8" Hex Bore, Spherical
24.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
25.	10005	Hex Head Cap Screw, 5/8"-11 x 1 3/4"
	10235	Machine Bushing
	10205	Washer, 5/8" SAE
	10107	Lock Nut, 5/8"-11
26.	D5827	Cover
27.	A5157	Idler Arm, L.H.
	A5158	Idler Arm, R.H.
28.	D5860	Bar
29.	D7426	Idler Sprocket, 12 Tooth
30.	D1026	Sleeve
31.	10306	Carriage Bolt, 3/8"-16 x 2"
	10210	Washer, 3/8" USS
	10108	Lock Nut, 3/8"-16
32.	B0123	Bushing
33.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10229	Lock Washer, 3/8"
	D5756	Special Nut
34.	A5761	Lockup W/Pin
35.	D7944	Mount
A.	A5090	Tire And Rim Assembly, Includes: (1)D5753, (1)D5752, (1)A5089

DRIVE LINE, 4 ROW 30/36/38


PTD033

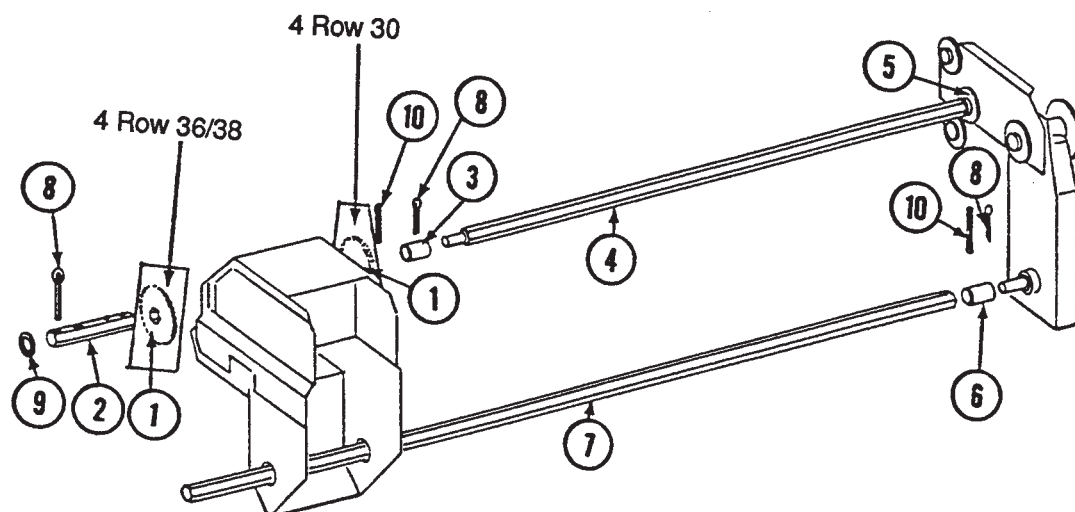

ITEM	PART NO.	DESCRIPTION
1.	A5114	Sprocket, 30 Tooth
2.	D7819	Drive Shaft, 15" (4 Holes), 4 Row 30
	D5958	Drive Shaft, 16" (4 Holes), 4 Row 36/38
3.	D5961	Coupler, 2 3/4"
4.	D5885-02	Drive Shaft, 19", 4 Row 30
	D5885-03	Drive Shaft, 24", 4 Row 36/38
5.		See "Transmission Assembly"
6.	D5886	Coupler
7.	D5887-105	Drill Shaft, 4 Row 30
	D5887-128	Drill Shaft, 4 Row 36/38
8.	10460	Cotter Pin, 1/4" x 2"
9.	10233	Machine Bushing (As Required)
10.	10602	Spring Pin, 1/4" x 1 1/2"

DRIVE LINE, 6 ROW 30/36/38 AND 8 ROW 30/36/38/40


PTD032/PTD034

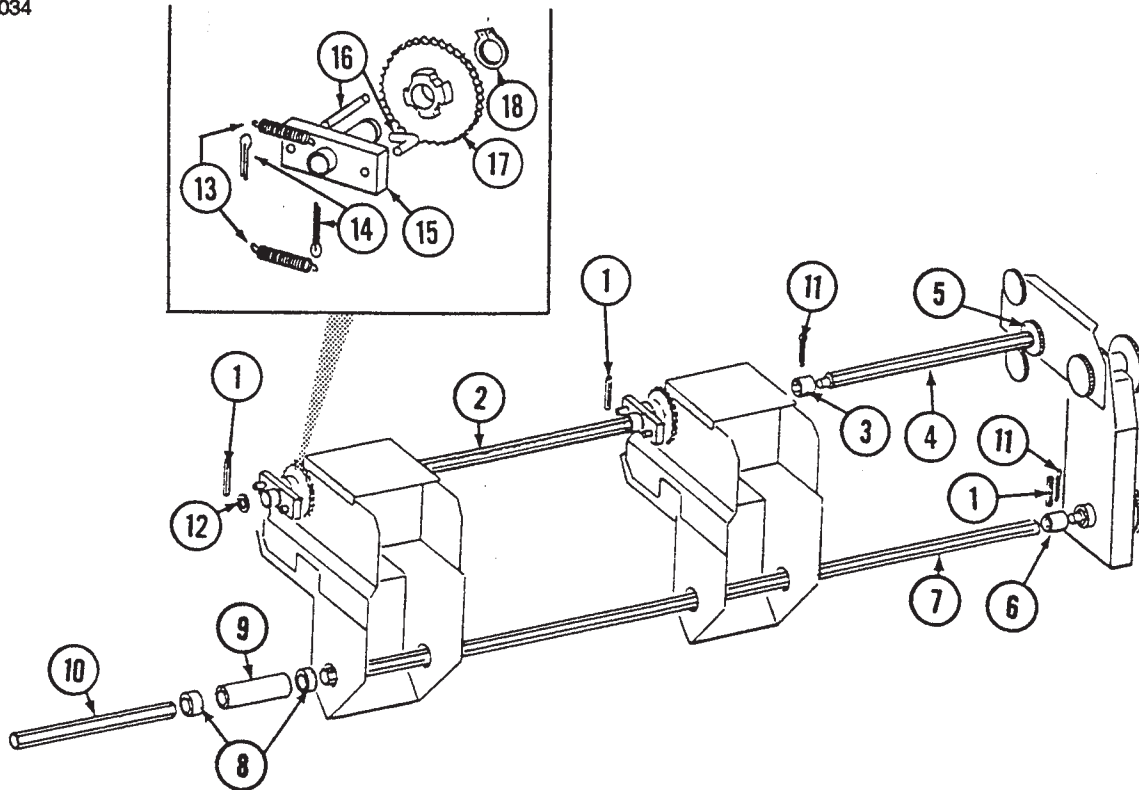

ITEM	PART NO.	DESCRIPTION
1.	10602	Spring Pin, 1/4" x 2"
2.	D5884-01	Drive Shaft, 36" (3 Holes), 6 Row 30 and 8 Row 30
	D5960	Drive Shaft, 50" (6 Holes), 6 Row 36/38
	D5959	Drive Shaft, 52" (6 Holes), 8 Row 36/38
	D5884-02	Drive Shaft, 46" (3 Holes), 8 Row 40
3.	D5961	Coupler
4.	D5885-01	Drive Shaft, 30", 6 Row 30/36/38 and 8 Row 30/36/38
	D5885-05	Drive Shaft, 35", 8 Row 40
5.		See "Transmission Assembly"
6.	D5886	Coupler
7.	D5887-165	Drill Shaft, 6 Row 30
	D5887-204	Drill Shaft, 6 Row 36/38
	D5887-225	Drill Shaft, 8 Row 30
	D5887-144	Drill Shaft, 8 Row 36/38/40
8.	D0917	Lock Collar, Less Set Screws
	10145	Set Screws, 5/16"-18 x 1/2"
9.	D1719	Coupler, 4", 8 Row 36/38/40 Only
10.	D0914-137	Drill Shaft, 8 Row 36/38
	D5887-154	Drill Shaft, 8 Row 40
11.	10460	Cotter Pin, 1/4" x 2"
12.	10233	Machine Bushing (As Required)
13.	D1256	Spring
14.	10464	Cotter Pin, 3/16" x 1"
15.	A0378	Block And Hub Assembly
16.	D1255	"L" Pin
17.	A5165	Hub/Sprocket Assembly, 30 Tooth
18.	10430	Ring
A.	A5164	Ratchet/Sprocket Assembly, Includes: (2)D1256, (2)10464, (1)A0378, (2)D1255, (1)A5165, (1)10430

TRANSMISSION ASSEMBLY

PTD040/PTD066/PTD041

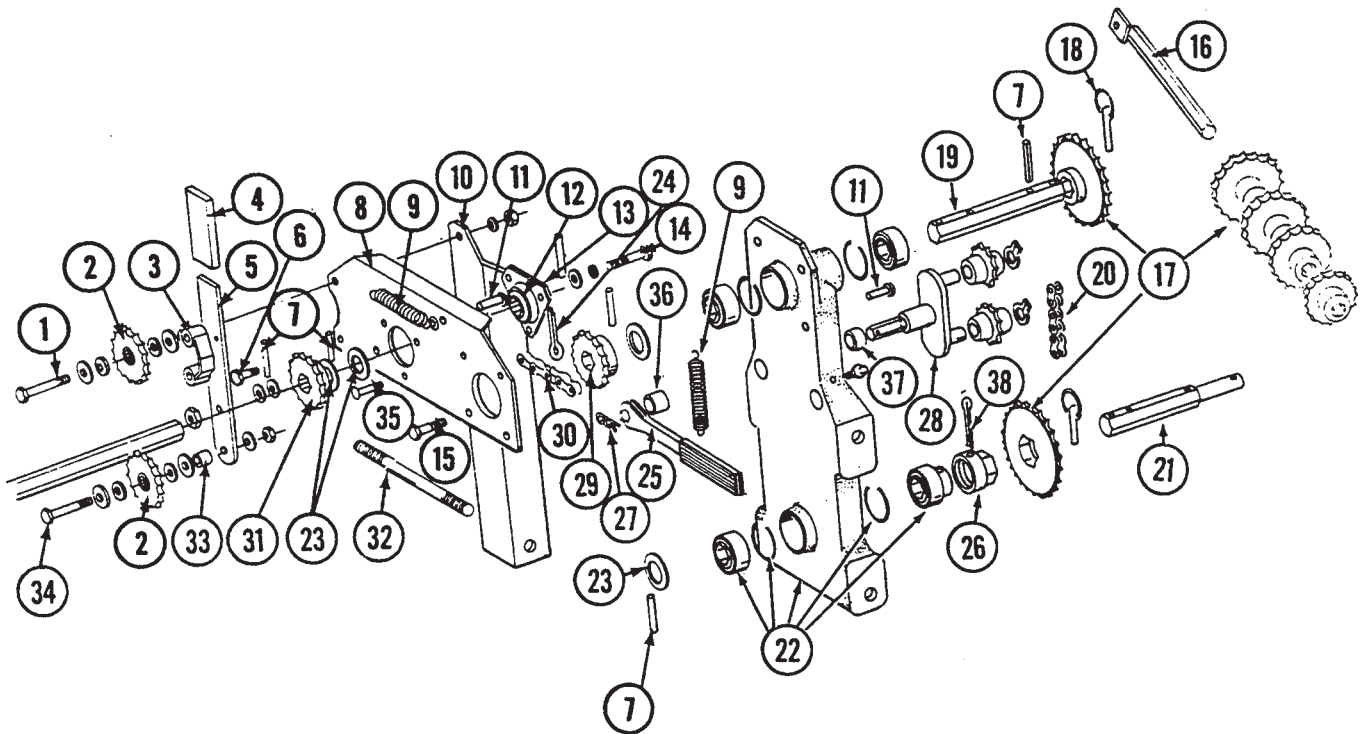

ITEM	PART NO.	DESCRIPTION
1.	10033	Hex Head Cap Screw, 1/2"-13 x 3 1/2"
	10216	Washer, 1/2" USS (Large)
	10128	Machine Bushing, 1/2" (Small)
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
2.	A5103	Idler Sprocket W/Bearing, 15 Tooth
3.	A4470	Idler Mount, R.H.
	A4469	Idler Mount, L.H.
4.	D5827	Cover
5.	D5829	Arm
6.	10053	Hex Head Cap Screw, 1/2"-13 x 2 1/2"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
7.	10602	Spring Pin, 1/4" x 1 1/2"
8.	D5824	Plate, R.H. (Shown)
	D5825	Plate, L.H.
9.	D5857	Spring
10.	D5830	Angle Support, R.H. (Shown)
	D5831	Angle Support, L.H.
11.	10478	Clevis Pin, 5/16" x 1"
	10409	Retaining Ring, 5/16"
12.	2100-03	Bearing, 7/8" Hex Bore, Spherical
13.	3400-01	Flangette


TRANSMISSION ASSEMBLY

ITEM	PART NO.	DESCRIPTION
14.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10210	Washer, 3/8" USS
	10203	Washer, 3/8" SAE
	D5756	Special Nut, 3/8"-16
15.	10037	Hex Head Cap Screw, 1/2"-13 x 1 1/4"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
16.	A5146	Sprocket Storage Rod
17.	A5106	Sprocket, 17 Tooth
	A5107	Sprocket, 19 Tooth
	A5108	Sprocket, 23 Tooth (Qty. 2)
	A5109	Sprocket, 24 Tooth
	A5110	Sprocket, 25 Tooth
	A5111	Sprocket, 26 Tooth
	A5112	Sprocket, 27 Tooth
	A5113	Sprocket, 28 Tooth
18.	D2558	Lynch Pin, 1/4"
19.	D5835	Shaft, 7/8" x 7"
20.	3310-80	Chain, No. 40, 80 Pitch Including Connector Link
	R0912	Connector Link, No. 40
21.	D7822	Shaft, 7/8" x 7"
22.	A5629	Transmission Plate W/ Bearings, Grease Fittings And Retaining Rings
	A5116	Bearing, 7/8" Hex Bore, Cylindrical
	A5624	Special Bearing, 7/8" Hex Bore x 1.6"
	D6551	Ring
	10641	Grease Fitting, 1/8" NPT
23.	10233	Machine Bushing
24.	10460	Cotter Pin, 1/4" x 2"
25.	A4235	Ratchet Wrench W/Protective Closure
	10445	Protective Closure
26.	D7127	Shear Coupler
27.	10670	Hair Pin Clip, No. 3
28.	A5628	Idler W/Sprockets And Rings
	D7426	Sprocket
	10435	Ring
29.	A5106	Sprocket, 17 Tooth
	A5202	Sprocket, 34 Tooth (2 To 1 Drive Reduction)
30.	3310-89	Chain, No. 40, 89 Pitch Including Connector And Offset Link
	3310-08	Chain, No. 40, Used With 2 To 1 Drive Reduction
	R0911	Offset Link, No. 40
	R0912	Connector Link, No. 40
31.	A5105	Sprocket, 15 Tooth
32.	D6793	Stud, 5/8"-11 x 9 1/2" (Threaded both ends)
	10230	Lock Washer, 5/8"
	10107	Hex Nut, 5/8"-11
33.	D4887-03	Sleeve, 3/4"
34.	10016	Hex Head Cap Screw, 1/2"-13 x 2"
	10216	Washer, 1/2" USS (Large)
	10128	Machine Bushing, 1/2" (Small)
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
35.	10312	Carriage Bolt, 5/16"-18 x 3/4"
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
36.	D6819	Idler Sleeve, 7/16"
37.	D2734-01	Sleeve, 1/2"
38.	10462	Cotter Pin, 3/16" x 2"

CONVENTIONAL MARKER ASSEMBLY

4 ROW 30/36/38 AND 6 ROW 30

MKR010

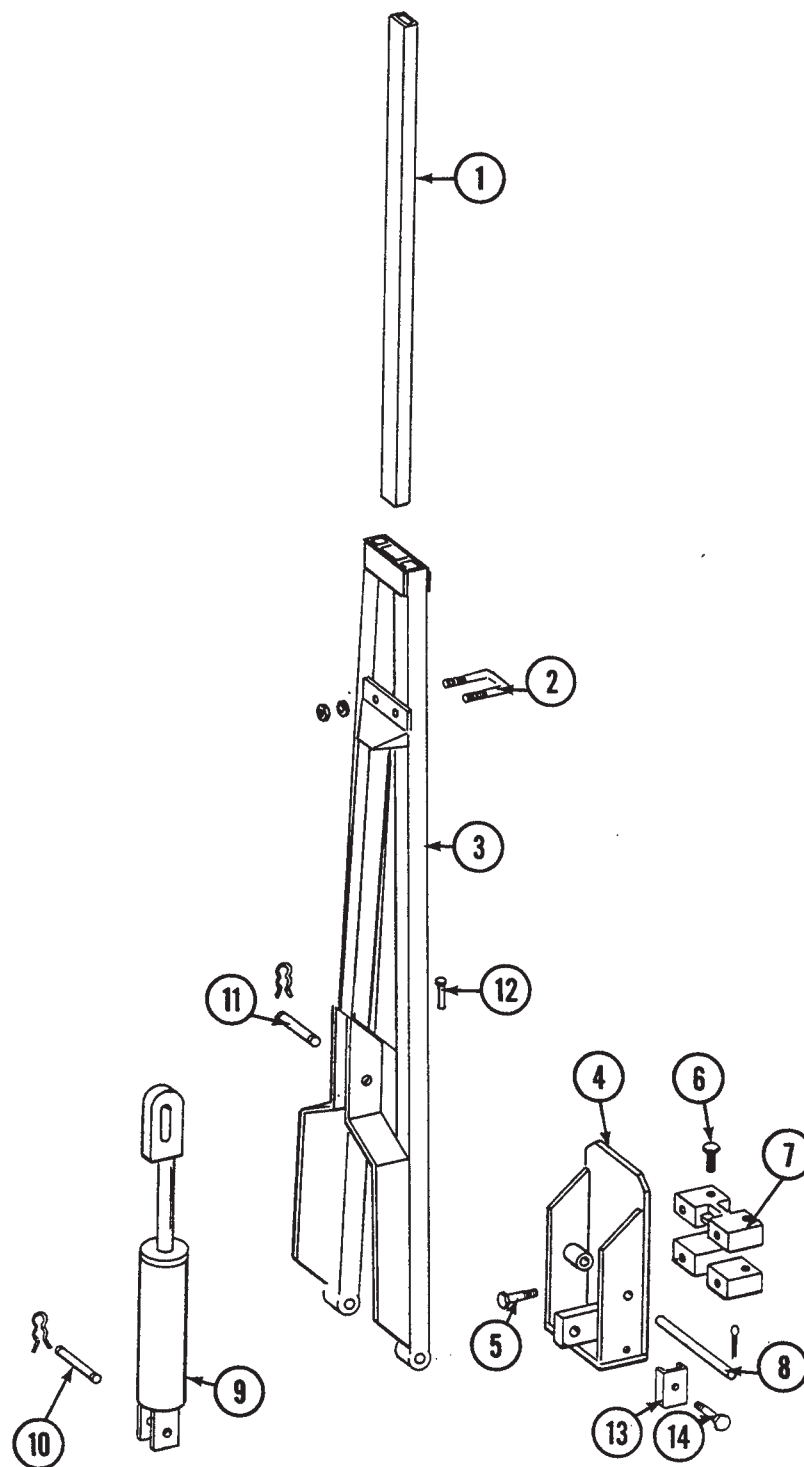


CONVENTIONAL MARKER ASSEMBLY

4 ROW 30/36/38 AND 6 ROW 30

ITEM	PART NO.	DESCRIPTION
1.	D0453-02	Extension Tube, 40", 4 Row 30
	D0453-07	Extension Tube, 45", 4 Row 36/38 and 6 Row 30
2.	D2721	U-Bolt, 2" x 2" x 1/2"-13
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
3.	A5175	Arm, 31 1/2", 4 Row 30
	A5184	Arm W/Grease Fittings, 44 1/2", 4 Row 36/38
	A5183	Arm W/Grease Fittings, 58 1/2", 6 Row 30
	10640	Grease Fitting, 1/4"-28
4.	A5177	Mount W/Grease Fittings, 4 Row 30
	A5178	Mount, 4 Row 36/38 And 6 Row 30
	10640	Grease Fitting, 1/4"-28
5.	10008	Hex Head Cap Screw, 5/8"-11 x 2", Grade 2
	10230	Lock Washer, 5/8"
6.	10026	Hex Head Cap Screw, 3/4"-10 x 2"
	10231	Lock Washer, 3/4"
7.	B0177	Tap Block
8.	D0438	Pin, 13 1/2"
	10460	Cotter Pin, 1/4" x 2"
9.		See "Conventional Marker Cylinder"
10.	R0367	Pin, 2 7/8"
	R0193	Clip
11.	R0375	Pin, 3 1/2"
	R0193	Clip
12.	D0462	Lockup Pin
	10670	Hair Pin Clip, No. 3
	10187	Spring Pin, 5/32" x 2"
13.	D5892	Hose Clamp
14.	10133	Hex Head Cap Screw, 5/16"-18 x 1 1/2"
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18

LOW PROFILE MARKER ASSEMBLY 6 ROW 36/38 AND 8 ROW 30/36/38/40

MKR006/MKR009

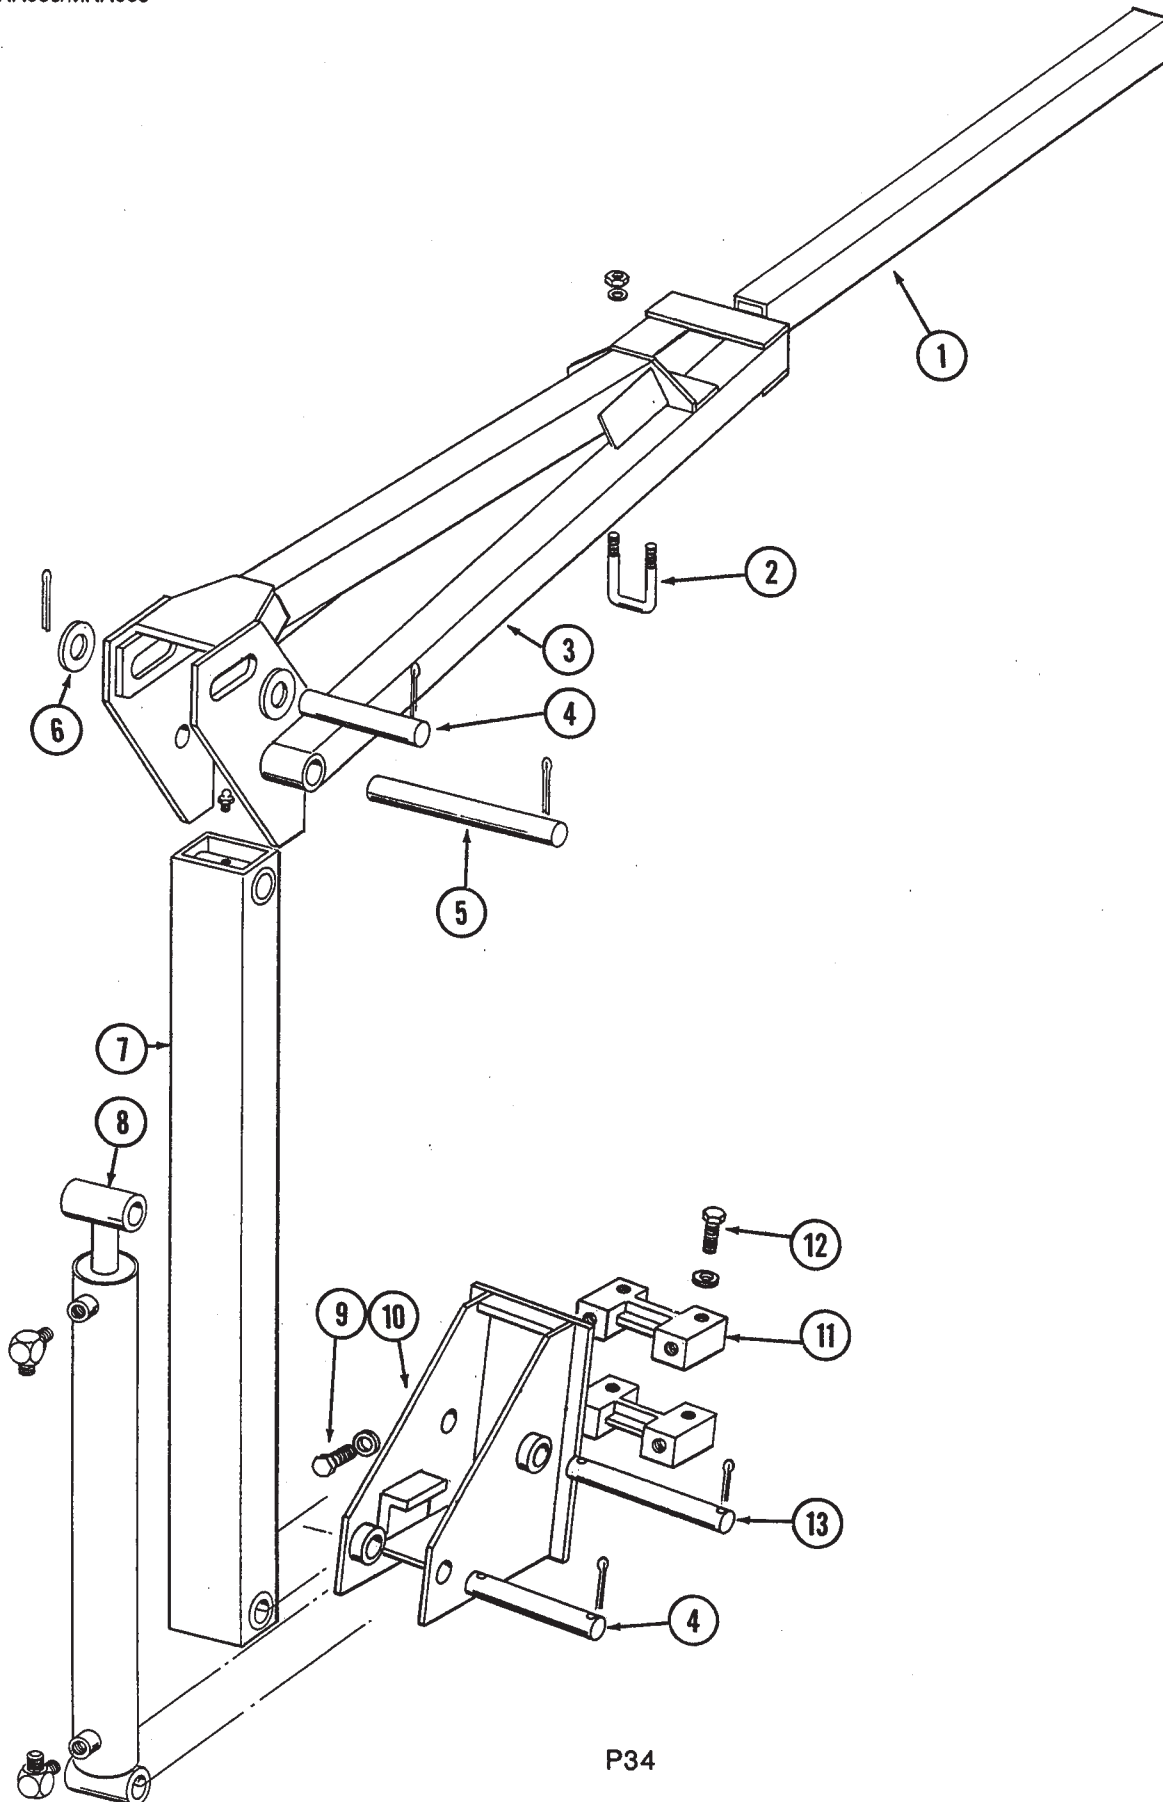


LOW PROFILE MARKER ASSEMBLY

6 ROW 36/38 AND 8 ROW 30/36/38/40

ITEM	PART NO.	DESCRIPTION
1.	D0453-03	Extension Tube, 50", 6 Row 36/38 and 8 Row 30
	D0453-04	Extension Tube, 60", 8 Row 36/38
	D0453-08	Extension Tube, 65", 8 Row 40
2.	D2721	U-Bolt, 2" x 2" x 1/2"-13
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
3.	A5190	Second Stage Arm, 35", 6 Row 36/38
	A5188	Second Stage Arm, 46", 8 Row 30
	A5192	Second Stage Arm, 67", 8 Row 36/38/40
4.	D2161	Pin, 1 1/4" x 8 1/4"
	10460	Cotter Pin, 1/4" x 2"
5.	D3214	Pin, 1 1/4" x 12 1/4"
	10460	Cotter Pin, 1/4" x 2"
6.	10226	Washer, 1 1/4" SAE
7.	A5173	First Stage Arm W/Grease Fittings
	10641	Grease Fitting, 1/8"
8.		See "Low Profile Marker Cylinder"
9.	10008	Hex Head Cap Screw, 5/8"-11 x 2", Grade 2
	10230	Lock Washer, 5/8"
10.	A5130	Mount
11.	B0177	Tap Block
12.	10026	Hex Head Cap Screw, 3/4"-10 x 2"
	10231	Lock Washer, 3/4"
13.	D0652	Pin, 1 1/4" x 9 1/2"
	10460	Cotter Pin, 1/4" x 2"

MARKER SPINDLE/HUB/BLADE


MKR020

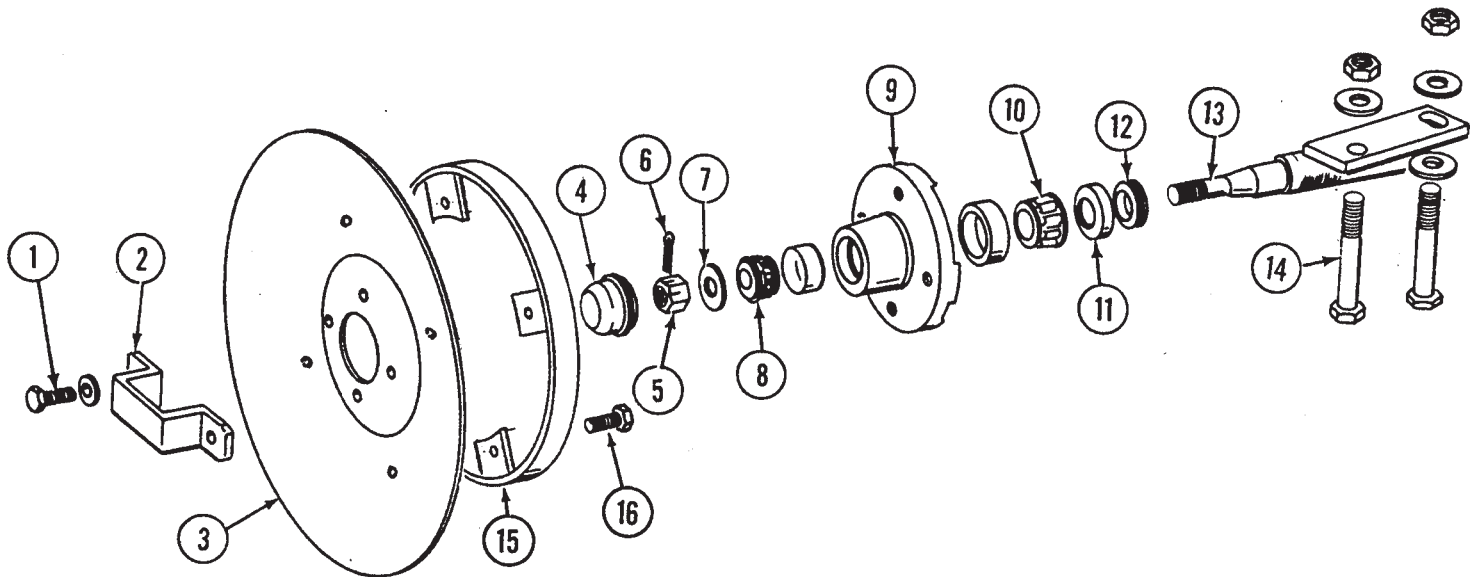

ITEM	PART NO.	DESCRIPTION
1.	10722	Hex Head Cap Screw, 1/2"-20 x 1"
	10228	Lock Washer, 1/2"
2.	D2597	Retainer
3.	D0746	Blade, 16"
4.	D0840	Cap
5.	10725	Hex Slotted Nut, 5/8"-18
6.	10544	Cotter Pin, 5/32" x 1"
7.	10724	Washer, 5/8"
8.	A0257	Outer Bearing
9.	A0167	Hub With Cups
	R0151	Outer Cup
	R0150	Inner Cup
10.	A0245	Inner Bearing
11.	A0243	Grease Seal
12.	A0899	Rubber Seal
13.	A1677	Spindle, L.H.
	A1676	Spindle, R.H.
14.	10033	Hex Head Cap Screw, 1/2"-13 x 3 1/2"
	10168	Machine Bushing, 1/2", 7 Gauge
	10102	Hex Nut, 1/2"-13
15.	A5853	Depth Band, 8 Row 36/38 And Up
16.	10019	Hex Head Cap Screw, 5/16"-18 x 1"
	10109	Lock Nut, 5/16"-18
A.	A1679	Hub And Spindle Assembly, L.H. (Items 1 And 4-13)
	A1678	Hub And Spindle Assembly, R.H. (Items 1 And 4-13)

MASTER LIFT CYLINDER, ALL MODELS


CYL038

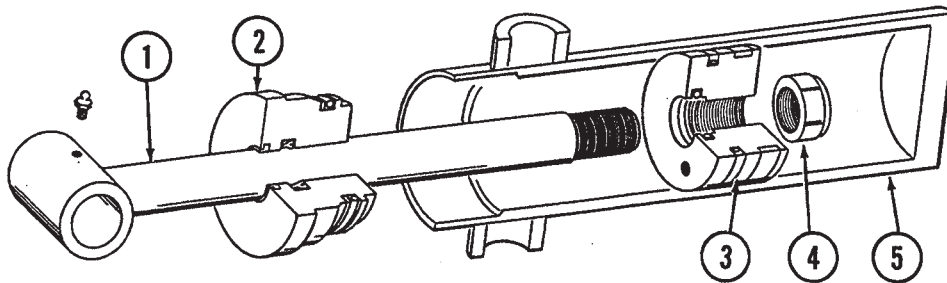

ITEM	PART NO.	DESCRIPTION
1.	A4320	Rod Assembly W/Grease Fitting
	10449	Grease Fitting
2.	D5947	Gland
3.	A4296	Piston W/Rephasing Valve
	R1169	Rephasing Valve Replacement Kit
4.	R0983	Lock Nut, 1"-14
5.	A4295	Barrel
A.	A4257	Cylinder Complete, 3 1/2" x 8"
B.	R0982	Seal Kit, Includes: (1)Wear Ring, (2)O-Rings, (1)BU Ring, (1)U-Cup, (1)Wiper, (1)Uniring

MASTER LIFT CYLINDER, ALL MODELS


CYL038

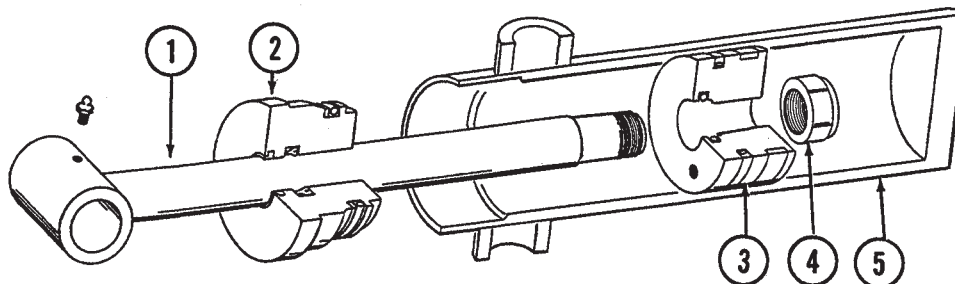

ITEM	PART NO.	DESCRIPTION
1.	A6137	Rod Assembly W/Grease Fitting
	10449	Grease Fitting
2.	D5947	Gland
3.	A6135	Piston W/Rephasing Valve
	R1169	Rephasing Valve Replacement Kit
4.	R0983	Lock Nut, 1"-14
5.	A4295	Barrel
A.	A6120	Cylinder Complete, 3 1/2" x 8"
B.	R0982	Seal Kit, Includes: (1)Wear Ring, (2)O-Rings, (1)BU Ring, (1)U-Cup, (1)Wiper, (1)Uniring

SLAVE LIFT CYLINDER, ALL MODELS


CYL038

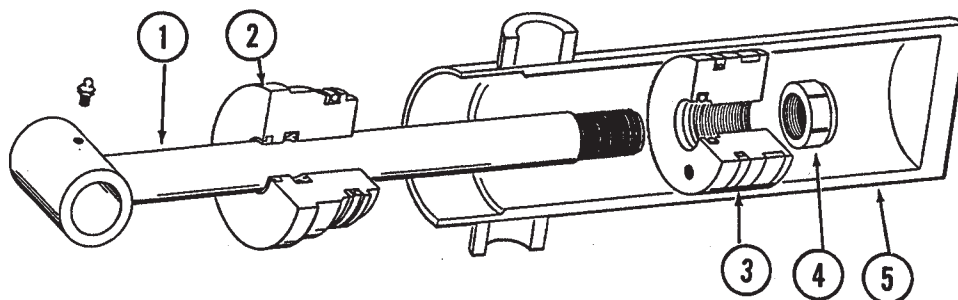

TEM	PART NO.	DESCRIPTION
1.	A4320	Rod Assembly W/Grease Fitting
	10449	Grease Fitting
2.	D5946	Gland
3.	A4298	Piston W/Rephasing Valve
	R1169	Rephasing Valve Replacement Kit
4.	R0983	Lock Nut, 1"-14
5.	A4297	Barrel
A.	A4258	Cylinder Complete, 3 1/4" x 8"
B.	R0984	Seal Kit, Includes: (2)O-Ring, (1)BU Ring, (1)Wear Ring, (1)Rod Wiper, (1)Uniring, (1)U-Cup

SLAVE LIFT CYLINDER, ALL MODELS


CYL038

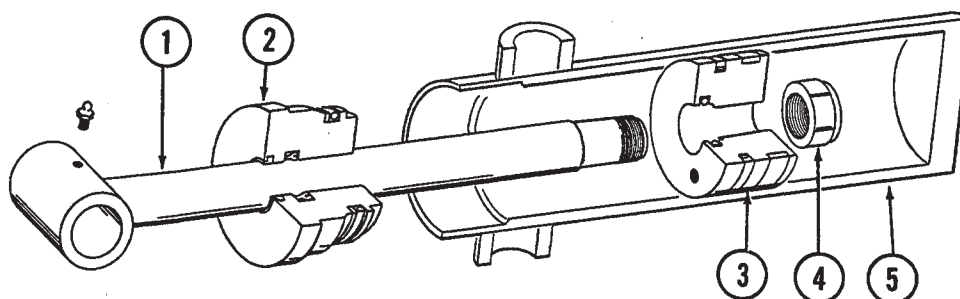

TEM	PART NO.	DESCRIPTION
1.	A6137	Rod Assembly W/Grease Fitting
	10449	Grease Fitting
2.	D5946	Gland
3.	A6134	Piston W/Rephasing Valve
	R1169	Rephasing Valve Replacement Kit
4.	R0983	Lock Nut, 1"-14
5.	A4297	Barrel
A.	A6119	Cylinder Complete, 3 1/4" x 8"
B.	R0984	Seal Kit, Includes: (2)O-Ring, (1)BU Ring, (1)Wear Ring, (1)Rod Wiper, (1)Uniring, (1)U-Cup

LIFT ASSIST CYLINDER, 6 ROW 30/36/38 AND 8 ROW 30/36/38/40


CYL026

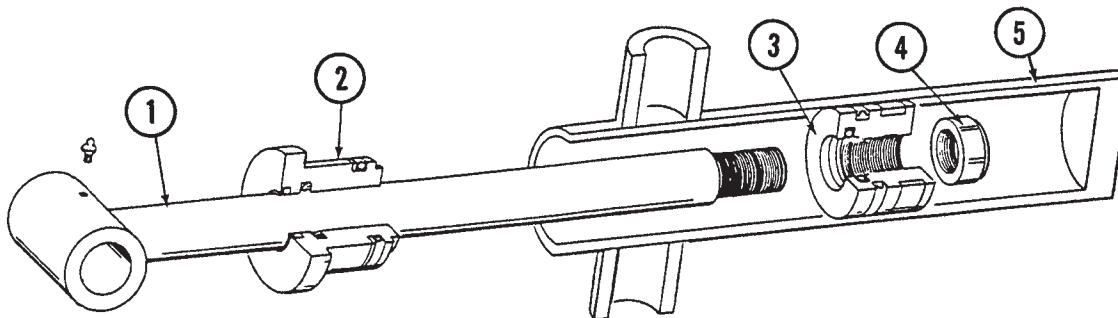

ITEM	PART NO.	DESCRIPTION
1.	A4322	Rod Assembly W/Grease Fitting
	10449	Grease Fitting
2.	D5954	Gland
3.	D5956	Piston
4.	R0923	Special Jam Nut, 1"-14
5.	A5455	Barrel
A.	A5093	Cylinder Complete, 2 1/2" x 8"
B.	R0930	Seal Kit, Includes: (1)Wear Ring, (1)T-Seal, (2)O-Rings, (1)BU Ring, (1)U-Cup, (1)Wiper

ROCK SHAFT LIFT CYLINDER


CYL032

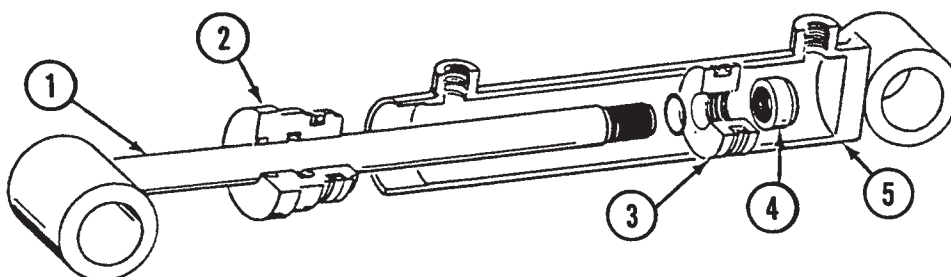

ITEM	PART NO.	DESCRIPTION
1.	A5563	Rod Assembly
2.	D6574	Gland
3.	D7629	Piston
4.	R1030	Lock Nut, 1 1/4"-12
5.	A5562	Barrel
A.	A5541	Cylinder Complete, 3" x 8" (3/4" O-Ring Ports)
B.	R1031	Seal Kit, Includes: (2)O-Rings, (1)BU Ring, (1)Rod Wiper, (1)Wear Ring, (1)Uniring, (1)U-Cup

CONVENTIONAL MARKER CYLINDER, 4 ROW 30/36/38 AND 6 ROW 30


CYL030

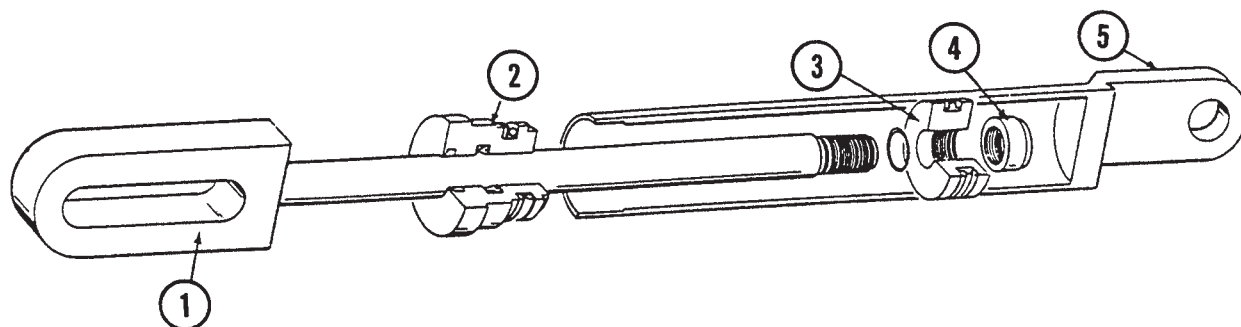

ITEM	PART NO.	DESCRIPTION
1.	A5453	Rod Assembly
2.	D5949	Gland
3.	D4632	Piston
4.	R0959	Lock Nut, 3/4"-16
5.	A5454	Barrel
A.	A5095	Cylinder Complete, 2" x 8"
B.	R0927	Seal Kit, Includes: (1)T Seal, (2)O-Rings, (1)BU Ring, (1)U-Cup (1)Wiper

LOW PROFILE MARKER CYLINDER, 6 ROW 36/38 AND 8 ROW 30/36/38/40


CYL039

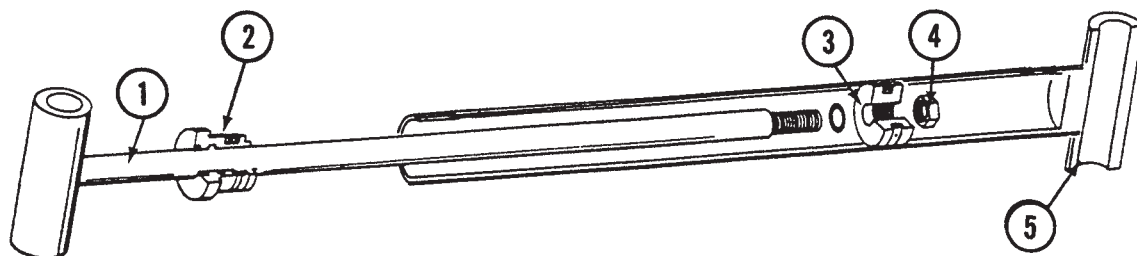

ITEM	PART NO.	DESCRIPTION
1.	A5459	Rod Assembly
2.	D5949	Gland
3.	D4632	Piston
4.	R0959	Lock Nut, 3/4"-16
5.	A5460	Barrel
A.	A5097	Cylinder Complete, 2" x 20"
B.	R0927	Seal Kit, Includes: (1)T Seal, (2)O-Rings, (1)BU Ring, (1)U-Cup, (1)Wiper

MARKER SEQUENCING/FLOW CONTROL VALVE

VVB025

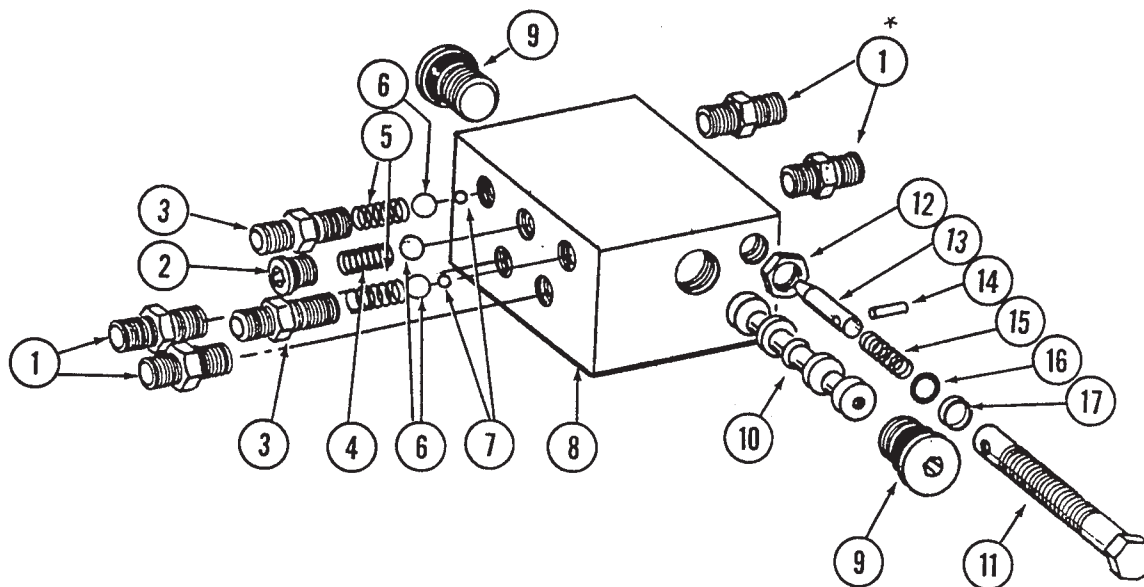


ITEM	PART NO.	DESCRIPTION
1.	6400-06	Connector, 9/16"-18 Male 37° JIC to 9/16"-18 O-Ring *
	R1045	O-Ring
2.	R1034	Hex Socket O-Ring Plug
	R1035	O-Ring
3.	R1032	Port Adapter
	R1045	O-Ring
4.	R1033	Detent Spring
5.	R1036	Spring
6.	R1044	7/16" Check Ball
7.	R1043	1/4" Steel Ball
8.		Valve Body (Non-stock Item)
9.	R1047	Hex Socket Plug
	R1037	O-Ring
10.		Spool (Non-stock Item)
11.	R1042	Adjustment Screw
12.	R1048	Hex Jam Nut, 1/2"-20
13.	R1038	Needle
14.	R1039	Spring Pin
15.	R1046	Compression Spring
16.	R1040	O-Ring
17.	R1041	Teflon BU Ring
A.	A5552	Valve Assembly Complete (Items 1-17)
B.	A5572	Flow Control Portion Only (Items 11-17)

*Not used on models with 3/8" hoses.


HYDRAULIC SYSTEM, 4 ROW 30/36/38 CONVENTIONAL MARKER

PHS001/PHS002/PHS003


Single Valve

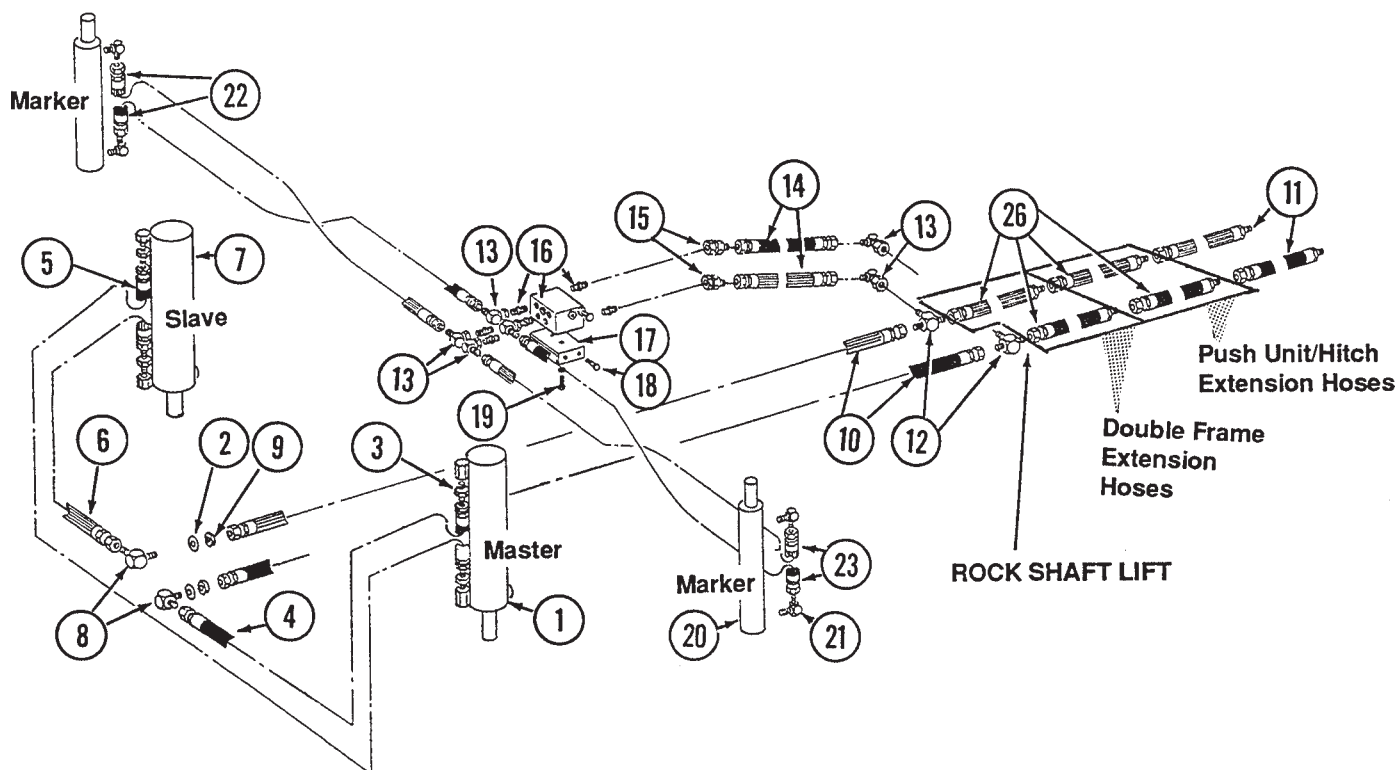

Dual Valve

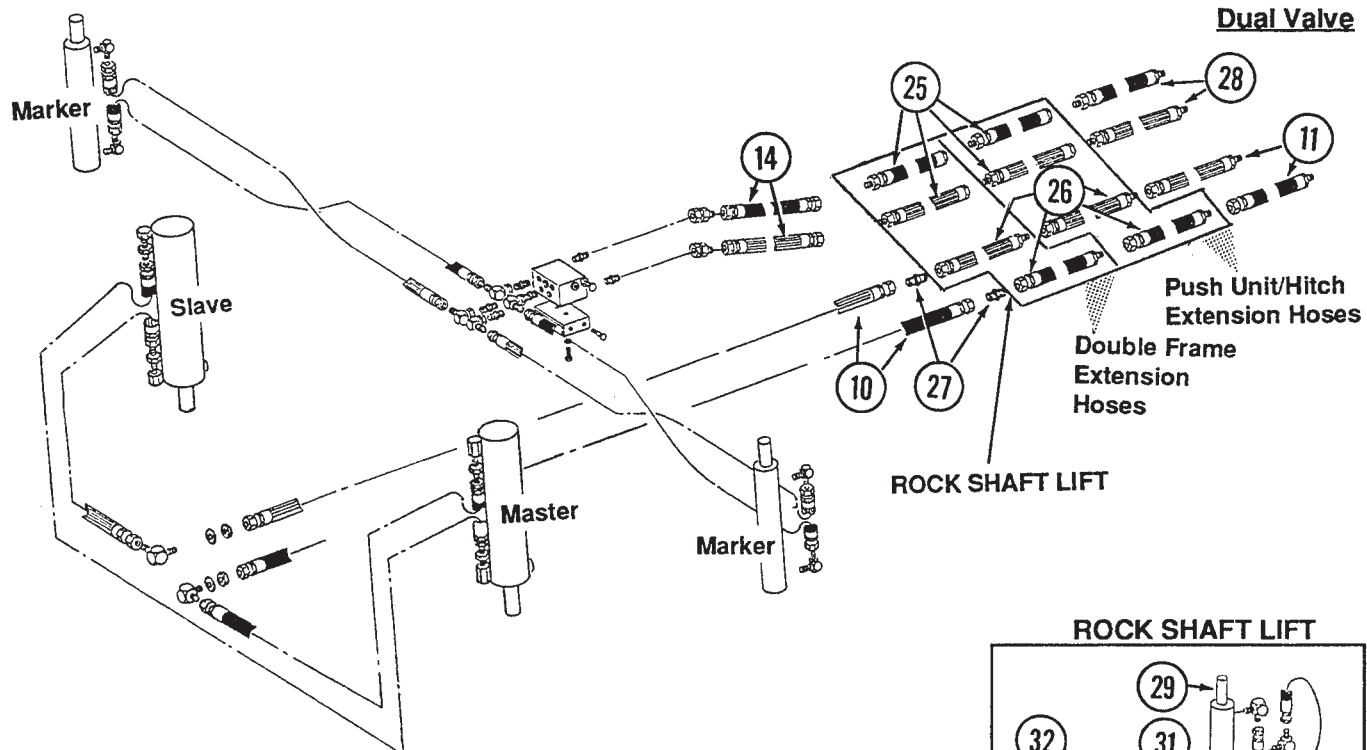

ROCK SHAFT LIFT

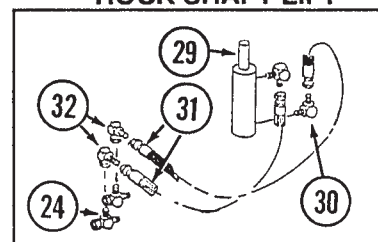

HYDRAULIC SYSTEM, 4 ROW 30/36/38

CONVENTIONAL MARKER

ITEM	PART NO.	DESCRIPTION
1.		See "Master Lift Cylinder"
2.	10215	Machine Bushing
3.	6400-08	Connector, 3/4"-16 Male O-Ring to 37° JIC
4.	A1018	Hose Assembly, 3/8" x 40", 4 Row 30
	A1020	Hose Assembly, 3/8" x 48", 4 Row 36/38
5.	A3113	Hose Assembly, 3/8" x 84", 4 Row 30
	A3136	Hose Assembly, 3/8" x 100", 4 Row 36/38
6.	A1020	Hose Assembly, 3/8" x 48", 4 Row 30
	A1021	Hose Assembly, 3/8" x 56", 4 Row 36/38
7.		See "Slave Lift Cylinder)
8.	2701-08	Elbow, 3/4"-16 Male 37° JIC
9.	306-08	Lock Nut, 3/4"-16
10.	A1076	Hose Assembly, 3/8" x 30"
11.	A3135	Hose Assembly, 3/8" x 100"
12.	2603-08-08-06	Tee, 3/4"-16 Male 37° JIC to 9/16"-18 37° JIC
13.	6500-06	Elbow, 9/16"-18 Male 37° JIC to Female 37° JIC
14.	A1138	Hose Assembly, 1/4" x 29"
15.	6502-06	Elbow, 45°, 9/16"-18 Male 37° JIC to Female
16.		See "Marker Sequencing/Flow Control Valve"
17.	D7630	Mounting Angle
18.	10004	Hex Head Cap Screw, 3/8"-16 X 1 1/4"
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
19.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10229	Lock Washer, 3/8"
20.		See "Conventional Marker Cylinder"
21.	6801-06-08	Elbow, 9/16"-18 Male 37° JIC to 3/4"-16 O-Ring
22.	A1102	Hose Assembly, 1/4" x 95", 4 Row 30
	A1171	Hose Assembly, 1/4" x 108", 4 Row 36/38
23.	A1170	Hose Assembly, 1/4" x 90", 4 Row 30
	A1150	Hose Assembly, 1/4" x 103", 4 Row 36/38
24.	6602-08	Tee, 3/4"-16 37° JIC
25.	A1182	Hose Assembly, 1/4" x 30", With Double Frame Package
	A1178	Hose Assembly, 1/4" x 46", With Push Unit Extension
	A1177	Hose Assembly, 1/4" x 24", With Hitch Extensions
26.	A3142	Hose Assembly, 3/8" x 30", With Double Frame Package
	A3149	Hose Assembly, 3/8" x 46", With Push Unit Extension
	A3147	Hose Assembly, 3/8" x 24", With Hitch Extensions
27.	2403-08	Union, 3/4"-16 Male 37° JIC
28.	A1173	Hose Assembly, 1/4" x 100"
29.		See "Rock Shaft Lift Cylinder"
30.	6801-08	Elbow, 3/4"-16 Male 37° JIC to 3/4" O-Ring
31.	A1079	Hose Assembly, 3/8" x 24"
32.	6500-08	Swivel Elbow

PHS001/PHS002/PHS003




HYDRAULIC SYSTEM, 6 ROW 30 CONVENTIONAL MARKER

ITEM	PART NO.	DESCRIPTION
1.		See "Master Lift Cylinder"
2.	10215	Machine Bushing
3.	6400-08	Connector, 3/4"-16 Male O-Ring to 37° JIC
4.	A1018	Hose Assembly, 3/8" x 40"
5.	A3115	Hose Assembly, 3/8" x 146"
6.		See "Lift Assist Cylinder"
7.	A1000	Hose Assembly, 3/8" x 15"
8.	A3119	Hose Assembly, 3/8" x 36"
9.	2603-08	Tee, 3/4"-16 Male 37° JIC
10.	A1086	Hose Assembly, 3/8" x 28"
11.	A1019	Hose Assembly, 3/8" x 44"
12.		See "Slave Lift Cylinder"
13.		See "Conventional Marker Cylinder"
14.	6801-06-08	Elbow, 9/16"-18 Male 37° JIC to 3/4"-16 O-Ring
15.	2703-08	Bulkhead Tee, 3/4"-16 Male 37° JIC
16.	306-08	Lock Nut, 3/4"-16
17.	A1076	Hose Assembly, 3/8" x 30"
18.	A3135	Hose Assembly, 3/8" x 100"
19.	2603-08-08-06	Tee, 3/4"-16 Male 37° JIC to 9/16"-18 37° JIC
20.	6500-06	Elbow, 9/16"-18 Male 37° JIC to Female 37° JIC
21.	A1138	Hose Assembly, 1/4" x 29"
22.	6502-06	Elbow, 45°, 9/16"-18 Male 37° JIC to Female
23.		See "Marker Sequencing/Flow Control Valve"
24.	D7630	Mounting Angle
25.	10004	Hex Head Cap Screw, 3/8"-16 X 1 1/4"
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
26.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10229	Lock Washer, 3/8"
27.	A1168	Hose Assembly, 1/4" x 120"
28.	A1105	Hose Assembly, 1/4" x 125"
29.	A1182	Hose Assembly, 1/4" x 30", With Double Frame Package
	A1178	Hose Assembly, 1/4" x 46", With Push Unit Extension
	A1177	Hose Assembly, 1/4" x 24", With Hitch Extensions
30.	A3142	Hose Assembly, 3/8" x 30", With Double Frame Package
	A3149	Hose Assembly, 3/8" x 46", With Push Unit Extension
	A3147	Hose Assembly, 3/8" x 24", With Hitch Extensions
31.	2403-08	Union, 3/4"-16 Male 37° JIC
32.	A1173	Hose Assembly, 1/4" x 100"
33.		See "Rock Shaft Lift Cylinder"
34.	6801-08	Elbow, 3/4"-16 Male 37° JIC to 3/4" O-Ring
35.	A1079	Hose Assembly, 3/8" x 24"
36.	6602-08	Tee, 3/4"-16 37° JIC
37.	6500-08	Swivel Elbow
38.	A3175	Hose Assembly, 3/8" x 38"


HYDRAULIC SYSTEM, 6 ROW 36/38 AND 8 ROW 30/36/38/40, LOW PROFILE MARKER

PHS001/PHS002/PHS003

Single Valve

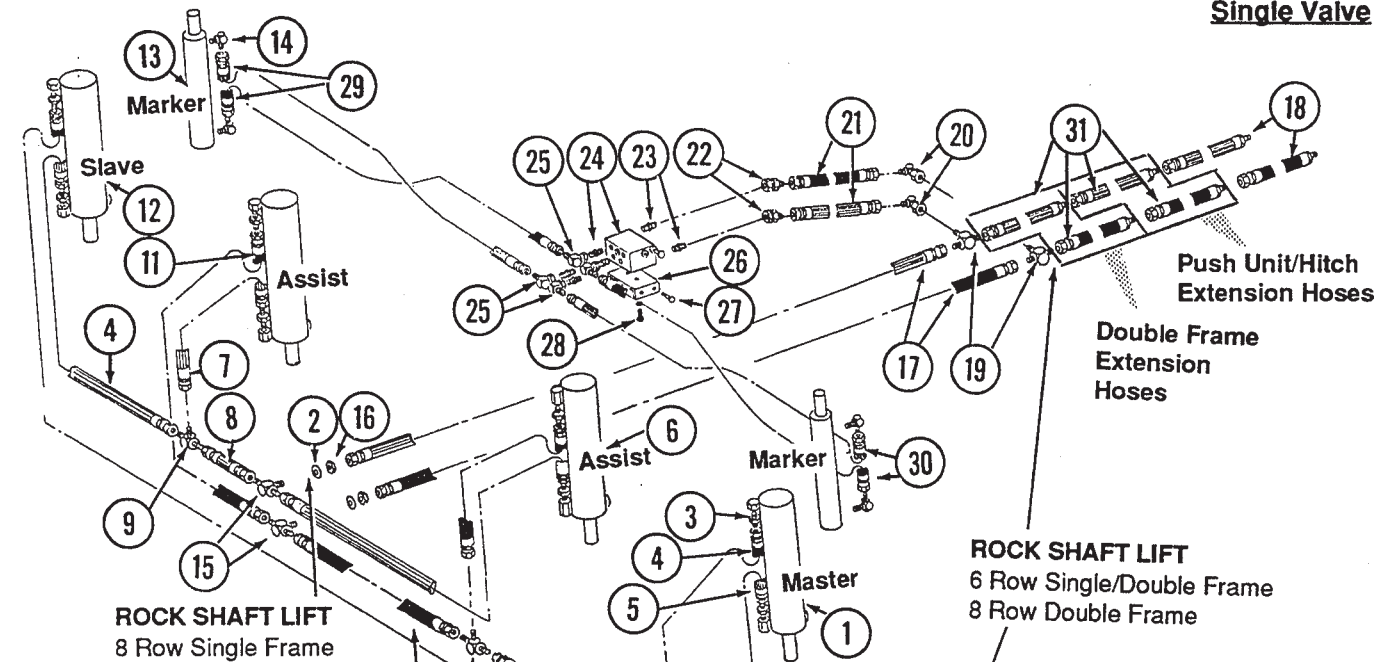

Dual Valve

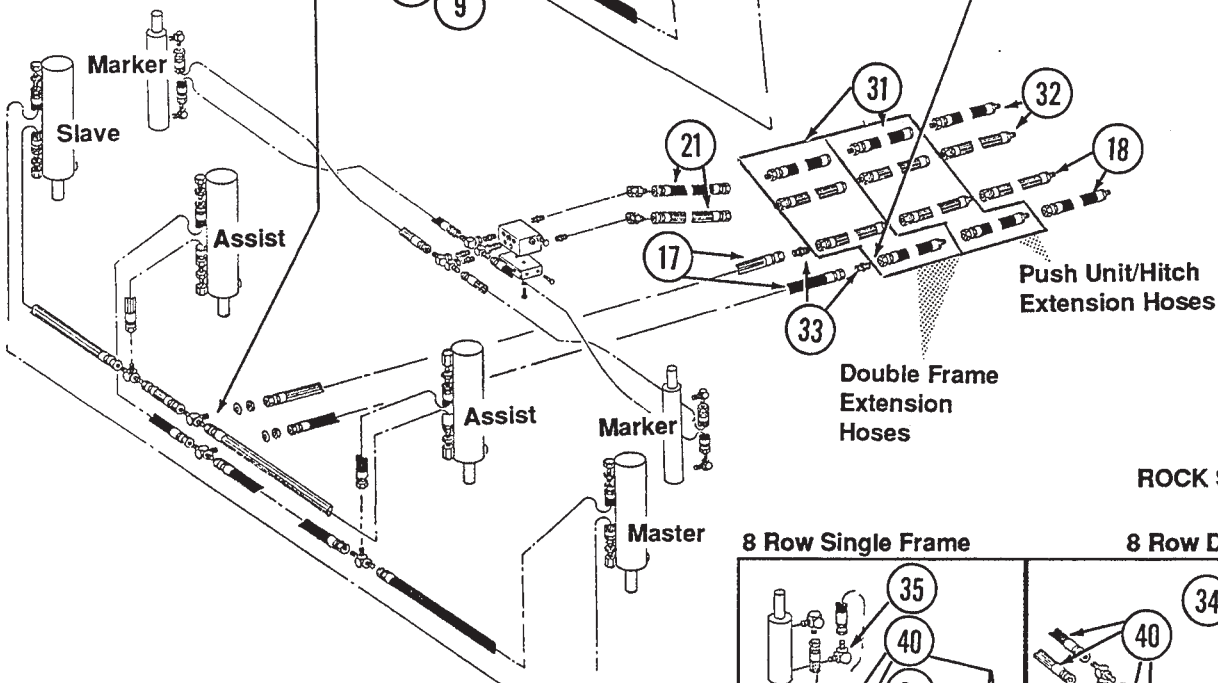








ITEM	PART NO.	DESCRIPTION
1.		See "Master Lift Cylinder"
2.	10215	Machine Bushing
3.	6400-08	Connector, 3/4"-16 Male O-Ring to 37° JIC
4.	A1020	Hose Assembly, 3/8" x 48", 6 Row 36/38 and 8 Row 36/38
	A1018	Hose Assembly, 3/8" x 40", 8 Row 30
	A1096	Hose Assembly, 3/8" x 50 1/2", 8 Row 40
5.	A3132	Hose Assembly, 3/8" x 178", 6 Row 36/38
	A1054	Hose Assembly, 3/8" x 204", 8 Row 30
	A3139	Hose Assembly, 3/8" x 254", 8 Row 36/38
	A3141	Hose Assembly, 3/8" x 260", 8 Row 40

HYDRAULIC SYSTEM, 6 ROW 36/38 AND 8 ROW 30/36/38/40, LOW PROFILE MARKER

ITEM	PART NO.	DESCRIPTION
6.		See "Lift Assist Cylinder"
7.	A1000	Hose Assembly, 3/8" x 15"
8.	A1019	Hose Assembly, 3/8" x 44", 6 Row 36/38
	A1055	Hose Assembly, 3/8" x 66", 8 Row 30
	A3138	Hose Assembly, 3/8" x 82", 8 Row 36/38
	A3113	Hose Assembly, 3/8" x 84", 8 Row 40
9.	2603-08	Tee, 3/4"-16 Male 37° JIC
10.	A1044	Hose Assembly, 3/8" x 34", 6 Row 36/38
	A1021	Hose Assembly, 3/8" x 56", 8 Row 30
	A1053	Hose Assembly, 3/8" x 72", 8 Row 36/38
	A1039	Hose Assembly, 3/8" x 76", 8 Row 40
11.	A3128	Hose Assembly, 3/8" x 52", 6 Row 36/38
	A1039	Hose Assembly, 3/8" x 76", 8 Row 30
	A1006	Hose Assembly, 3/8" x 90", 8 Row 36/38
	A3140	Hose Assembly, 3/8" x 94", 8 Row 40
12.		See "Slave Lift Cylinder"
13.		See "Low Profile Marker Cylinder"
14.	6801-08	Elbow, 3/4"-16 Male 37° to 3/4"-16 O-Ring
	6400-08	Connector, 3/4"-16 Male O-Ring to 37° JIC
15.	2703-08	Bulkhead Tee, 3/4"-16 Male 37° JIC
16.	306-08	Lock Nut, 3/4"-16
17.	A1076	Hose Assembly, 3/8" x 30"
18.	A3135	Hose Assembly, 3/8" x 100"
19.	2603-08	Tee, 3/4"-16 Male 37° JIC
20.	6500-08	Elbow, 3/4"-16 Male 37° JIC to Female 37° JIC
21.	A1079	Hose Assembly, 3/8" x 24"
22.	6502-08	Elbow, 45°, 3/4"-16 Male 37° JIC to Female 37° JIC
23.	6400-08-06	Adapter, 3/4"-16 Male 37° JIC to 9/16"-18 O-Ring
24.		See "Marker Sequencing/Flow Control Valve"
25.	6500-08-06	Elbow, 3/4"-16 Male 37° JIC to 9/16"-18 Female 37° JIC
26.	D7630	Mounting Angle
27.	10004	Hex Head Cap Screw, 3/8"-16 X 1 1/4"
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
28.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10229	Lock Washer, 3/8"
29.	A1013	Hose Assembly, 3/8" x 150", 6 Row 36/38
	A1090	Hose Assembly, 3/8" x 162", 8 Row 30
	A1028	Hose Assembly, 3/8" x 186", 8 Row 36/38
	A1029	Hose Assembly, 3/8" x 190", 8 Row 40
30.	A3137	Hose Assembly, 3/8" x 140", 6 Row 36/38
	A3114	Hose Assembly, 3/8" x 156", 8 Row 30
	A3132	Hose Assembly, 3/8" x 178", 8 Row 36/38
	A1028	Hose Assembly, 3/8" x 186", 8 Row 40
31.	A3142	Hose Assembly, 3/8" x 30", With Double Frame Package
	A3149	Hose Assembly, 3/8" x 46", With Push Unit Extension
	A3147	Hose Assembly, 3/8" x 24", With Hitch Extensions
32.	A3148	Hose Assembly, 3/8" x 100"
33.	2403-08	Union, 3/4"-16 Male 37° JIC
34.		See "Rock Shaft Lift Cylinder"
35.	6801-08	Elbow, 3/4"-16 JIC To 3/4" O-Ring
36.	A1079	Hose Assembly, 3/8" x 24", 6 Row 36/38
37.	6602-08	Tee, 3/4"-16 37° JIC
38.	6600-08	Tee, Outlet 3/4"-16 37° JIC
39.	6500-08	Swivel Elbow
40.	A3156	Hose Assembly, 3/8" x 68", 8 Row 30/36/38

ELECTRONIC SEED MONITOR

 ECP017/D-0640-0001/D-0640-0003/D-0640-0004/D-1172-0001/D-1172-0002/ECP019/ECP020/ECP021/ECP022

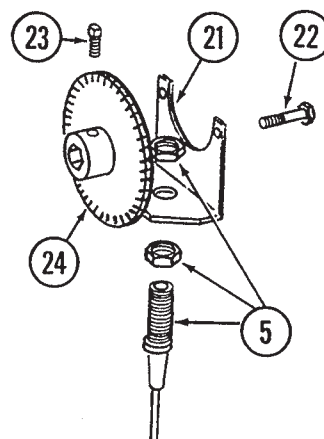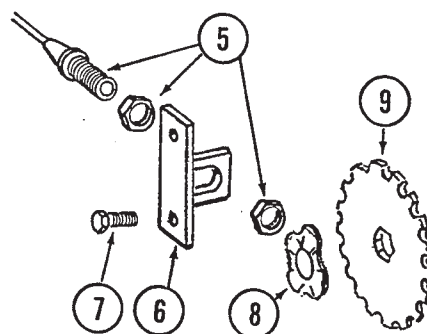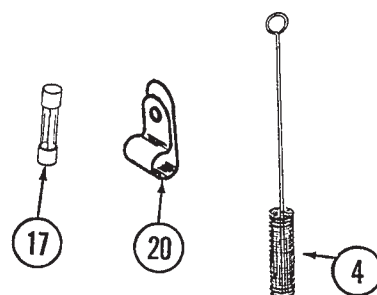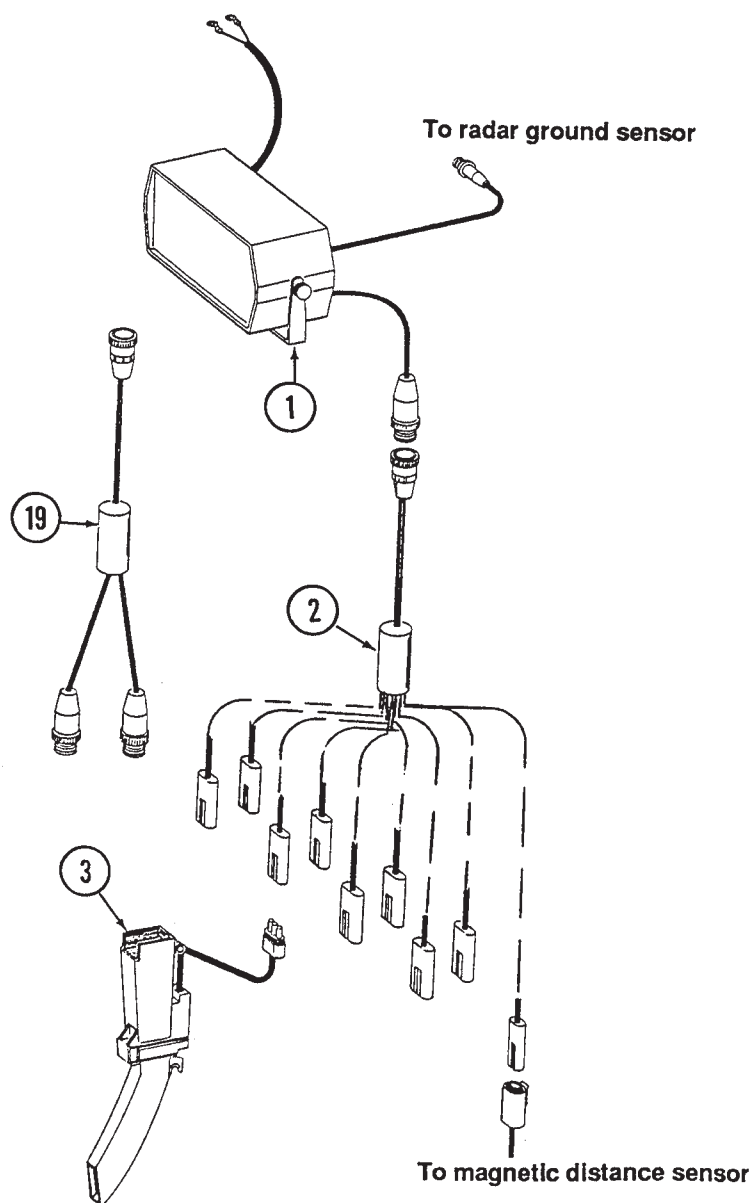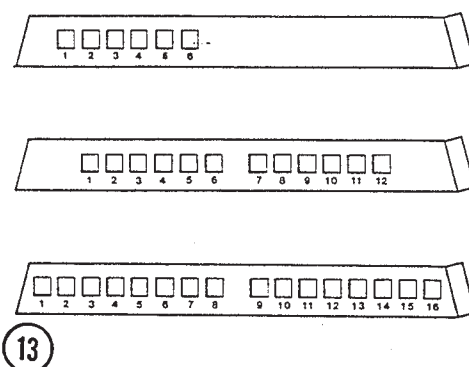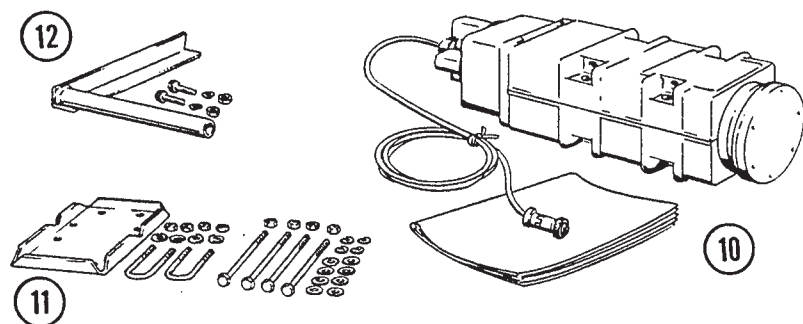


ELECTRONIC SEED MONITOR

ITEM	PART NO.	DESCRIPTION
1.	A5873	Console W/Mounting Bracket, KM1000
	A5874	Console W/Mounting Bracket, KM3000
	R1077	Mounting Bracket, KM1000
	R1078	Mounting Bracket, KM3000
	R1079	Console Mounting Bracket Hardware Package(Includes 2 wellnuts, 2 knobs and 1/4" hardware)
2.	A5875	Planter Harness, 4 Row
	A5876	Planter Harness, 6 Row
	A5877	Planter Harness, 8 Row
3.	A5880	Seed Tube W/High Rate Sensor
	R1062	Seed Tube (With holes for high rate sensor installation)
	R1087	Sensor Only (For A5880)
4.	R0594	Brush
5.	A5600	Magnetic Distance Sensor (Use W/KM3000 Console Only)
6.	D8770	Bracket
7.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
8.	D8771	Spring Wave Washer
9.	D8751	Magnetic Distance Sensor Pulse Wheel (Use W/KM3000 Console Only)
10.	A4223	Radar Ground Sensor (Use W/KM3000 Console Only)
11.	A4229	Radar Sensor Mounting Bracket Package
12.	A4230	Radar Sensor Pipe Mounting Package
13.	R1082	KM1000 Bezel Decal, 12 Row (Used On 4 Row)
	R1081	KM1000 Bezel Decal, 6 Row
	R1083	KM1000 Bezel Decal, 16 Row (Used On 8 Row)
14.	R1080	KM1000 Bezel
15.	R0595	Bulb, KM1000 Row Lamp (Not Shown)
16.	R1084	Bulb, KM3000 Backlite (Not Shown)
17.	R0866	Fuse, 5-amp, Type AGC
	R1085	Fuse, 2-amp, Type AGC
18.	R0582	Male Hitch Connector Kit (Not Shown)
	R0583	Female Hitch Connector Kit (Not Shown)
19.	A5884	Y-Connector, 16 Row
20.	D6291	Insulated Clamp
21.	D7632	Magnetic Distance Sensor Bracket
22.	10171	Hex Head Cap Screw, 5/16"-18 x 1 1/4"
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
23.	10145	Set Screw, 5/16"-18 x 1/2"
24.	A5549	Magnetic Distance Sensor Pulse Wheel W/Hub (Use W/KM3000 Console Only)

INTERPLANT PUSH UNIT TRANSMISSION AND DRIVE

PTD031/PTD066

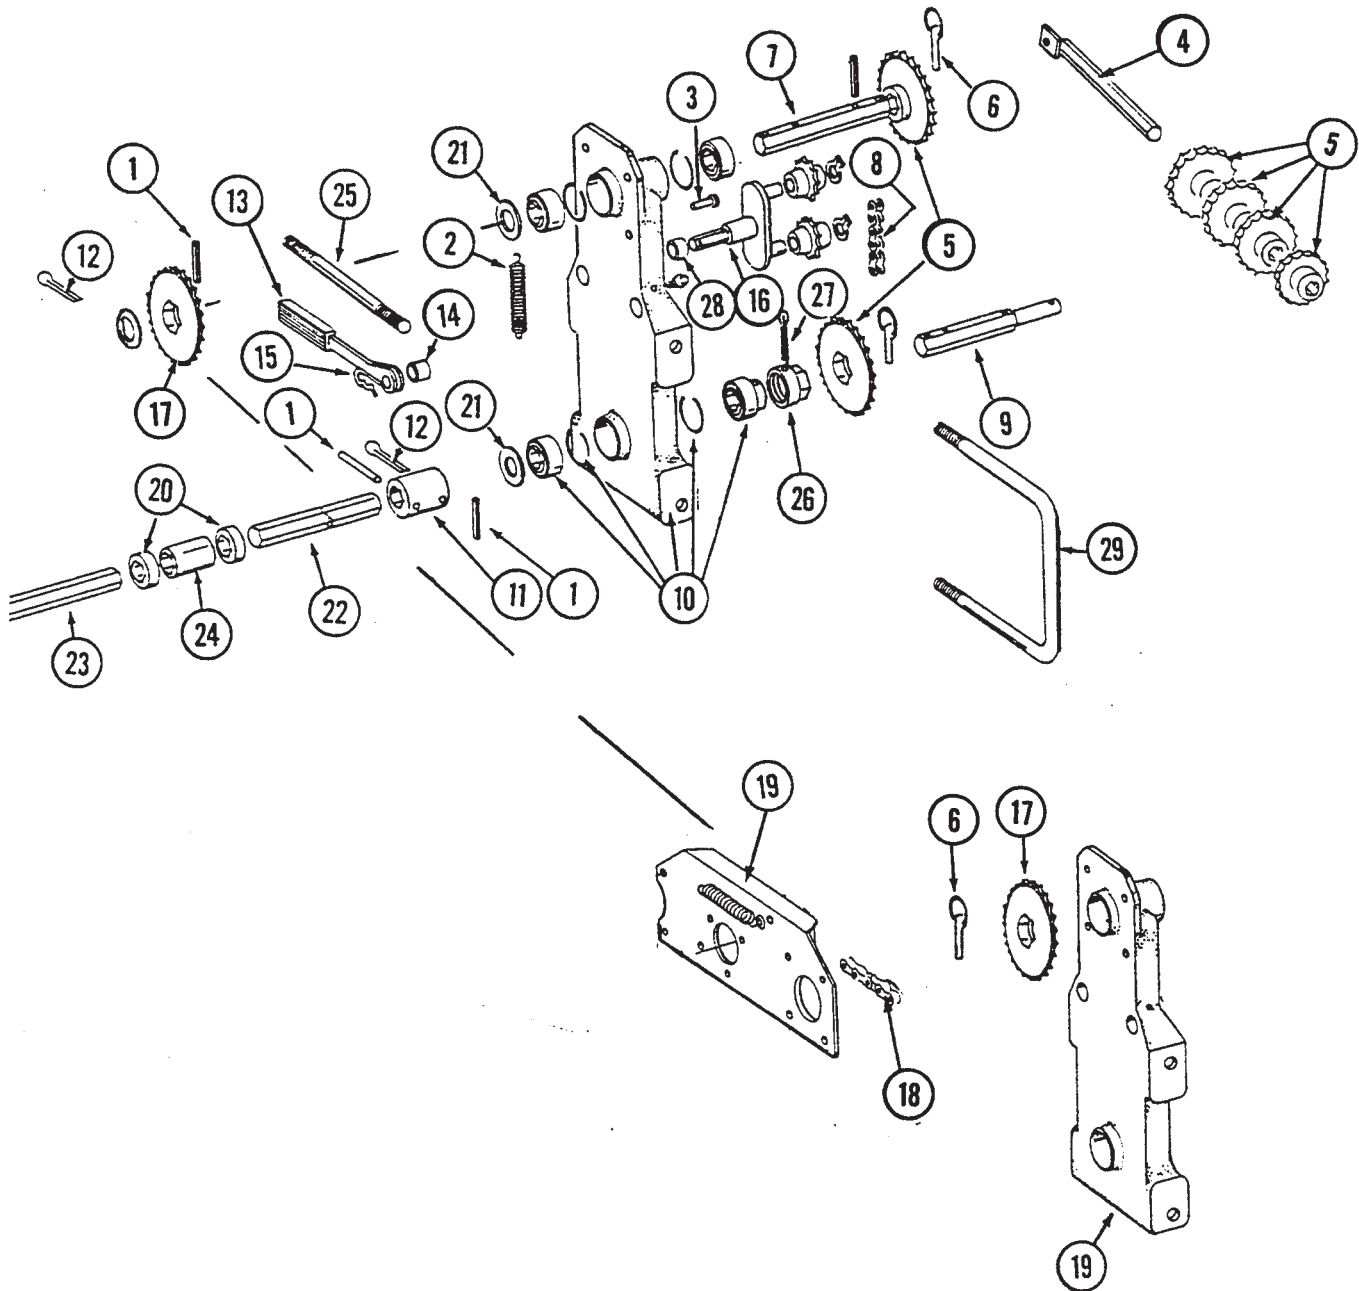

ITEM	PART NO.	DESCRIPTION
1.	10602	Spring Pin, 1/4" x 1 1/2"
2.	D5857	Spring
3.	10478	Clevis Pin, 5/16" x 1"
	10409	Retaining Ring, 5/16"

INTERPLANT PUSH UNIT TRANSMISSION AND DRIVE

ITEM	PART NO.	DESCRIPTION
4.	A5146	Sprocket Storage Rod
5.	A5106	Sprocket, 17 Tooth
	A5107	Sprocket, 19 Tooth
	A5108	Sprocket, 23 Tooth (Qty. 2)
	A5109	Sprocket, 24 Tooth
	A5110	Sprocket, 25 Tooth
	A5111	Sprocket, 26 Tooth
	A5112	Sprocket, 27 Tooth
	A5113	Sprocket, 28 Tooth
6.	D2558	Lynch Pin, 1/4"
7.	D5835	Shaft, 7/8" x 7"
8.	3310-80	Chain, No. 40, 80 Pitch Including Connector Link
	R0912	Connector Link, No. 40
9.	D7822	Shaft, 7/8" x 7"
10.	A5629	Transmission Plate W/Bearings, Grease Fittings And Retaining Rings
	A5116	Bearing, 7/8" Hex Bore, Cylindrical
	A5624	Special Bearing, 7/8" Hex Bore x 1.6"
	D6551	Ring
	10641	Grease Fitting, 1/8" NPT
11.	D5886	Coupler, 1 3/4"
12.	10460	Cotter Pin, 1/4" x 2"
13.	A4235	Ratchet Wrench W/Protective Closure
	10445	Protective Closure
14.	D6819	Idler Sleeve, 7/16"
15.	10670	Hair Pin Clip, No. 3
16.	A5628	Idler W/Sprockets and Rings
	D7426	Sprocket
	10435	Ring
17.	A5202	Sprocket, 34 Tooth
18.	3310-26	Chain, No. 40, 26 Pitch Including Connector Link (To be added to 3310-89 on single frame planters)
	3310-226	Chain, No. 40, 226 Pitch Including Connector And Offset Links (Used on Double Frame planters)
	R0912	Connector Link, No. 40
	R0911	Offset Link, No. 40
19.		See "Transmission Assembly"
20.	D0917	Lock Collar, Less Set Screws
	10145	Set Screw, 5/16"-18 x 1/2"
21.	10233	Machine Bushing
22.	D5887-95	Drill Shaft, 4 Row 30
	D5887-109	Drill Shaft, 4 Row 36/38
	D5887-155	Drill Shaft, 6 Row 30
	D5887-185	Drill Shaft, 6 Row 36/38
	D5887-215	Drill Shaft, 8 Row 30
	D5887-144	Drill Shaft, 8 Row 36/38
23.	D0914-118	Drill Shaft, 8 Row 36/38
24.	D1719	Coupler, 8 Row 36/38
25.	D6793	Stud, 5/8"-11 x 9 1/2" (Used on single frame planters)
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
26.	D7127	Shear Coupler
27.	10462	Cotter Pin, 3/16" x 2"
28.	D2734-01	Sleeve, 1/2"
29.	D1113	U-Bolt, 5" x 7" x 5/8"-11 (Used on Double Frame planters)
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11

PRS002/PRS004/PRS006/PRS008/PRS009


Rev. 10/92

INTERPLANT ROCK SHAFT ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1.	A5313	End Support Mount W/Grease Fitting, L.H.
	10641	Grease Fitting, 1/8" NPT
2.	D6136	Pin, 1 1/4" x 5"
	10460	Cotter Pin, 1/4" x 2"
3.	A5315	End Mount Clamp
4.	10581	Hex Head Cap Screw, 1/2"-13 x 2 1/4"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
5.	A5312	End Mount W/Grease Fitting, R.H.
	10641	Grease Fitting, 1/8" NPT
6.	A5865	Chain, No. 60 Roller, 9 Pitch Including Connector Links
	R1022	Connector Link, No. 2060 Roller
	10641	Grease Fitting, 1/8" NPT
7.		See "Rock Shaft Lift Cylinder"
8.	D3550	Pin, 1 1/4" x 5 5/8"
	10460	Cotter Pin, 1/4" x 2"
9.	A5839	Lockup
10.	A4569	Cylinder Pivot Mount
11.	D6869	Shaft, 1 1/4" x 6 1/2"
	10460	Cotter Pin, 1/4" x 2"
12.	D6870	Pin, 1 1/4" x 6"
	10460	Cotter Pin, 1/4" x 2"
13.	A4570	Cylinder Mount W/Grease Fitting
14.	D1113	U-Bolt, 5" x 7" x 5/8"-11
	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
15.	D3518-09	Tube, 3" x 3" x 90", 4 Row 30
	D3518-10	Tube, 3" x 3" x 114", 4 Row 36/38
	D3518-11	Tube, 3" x 3" x 150", 6 Row 30
	D3518-12	Tube, 3" x 3" x 190", 6 Row 36/38
	D3518-13	Tube, 3" x 3" x 210", 8 Row 30
	D3518-14	Tube, 3" x 3" x 266", 8 Row 36/38
16.	A5471	Unit Lift
17.	A6519	Support Mount Clamp
18.	D9231	Clamp
19.	D9233	Clamp
20.	A6518	Unit Lift Clamp
21.	A6517	Cylinder Pivot Mount
22.	A6516	Pivot Clamp
23.	10009	Hex Head Cap Screw, 5/8"-11 x 2 1/2"

DOUBLE DISC FERTILIZER OPENER

FOC007

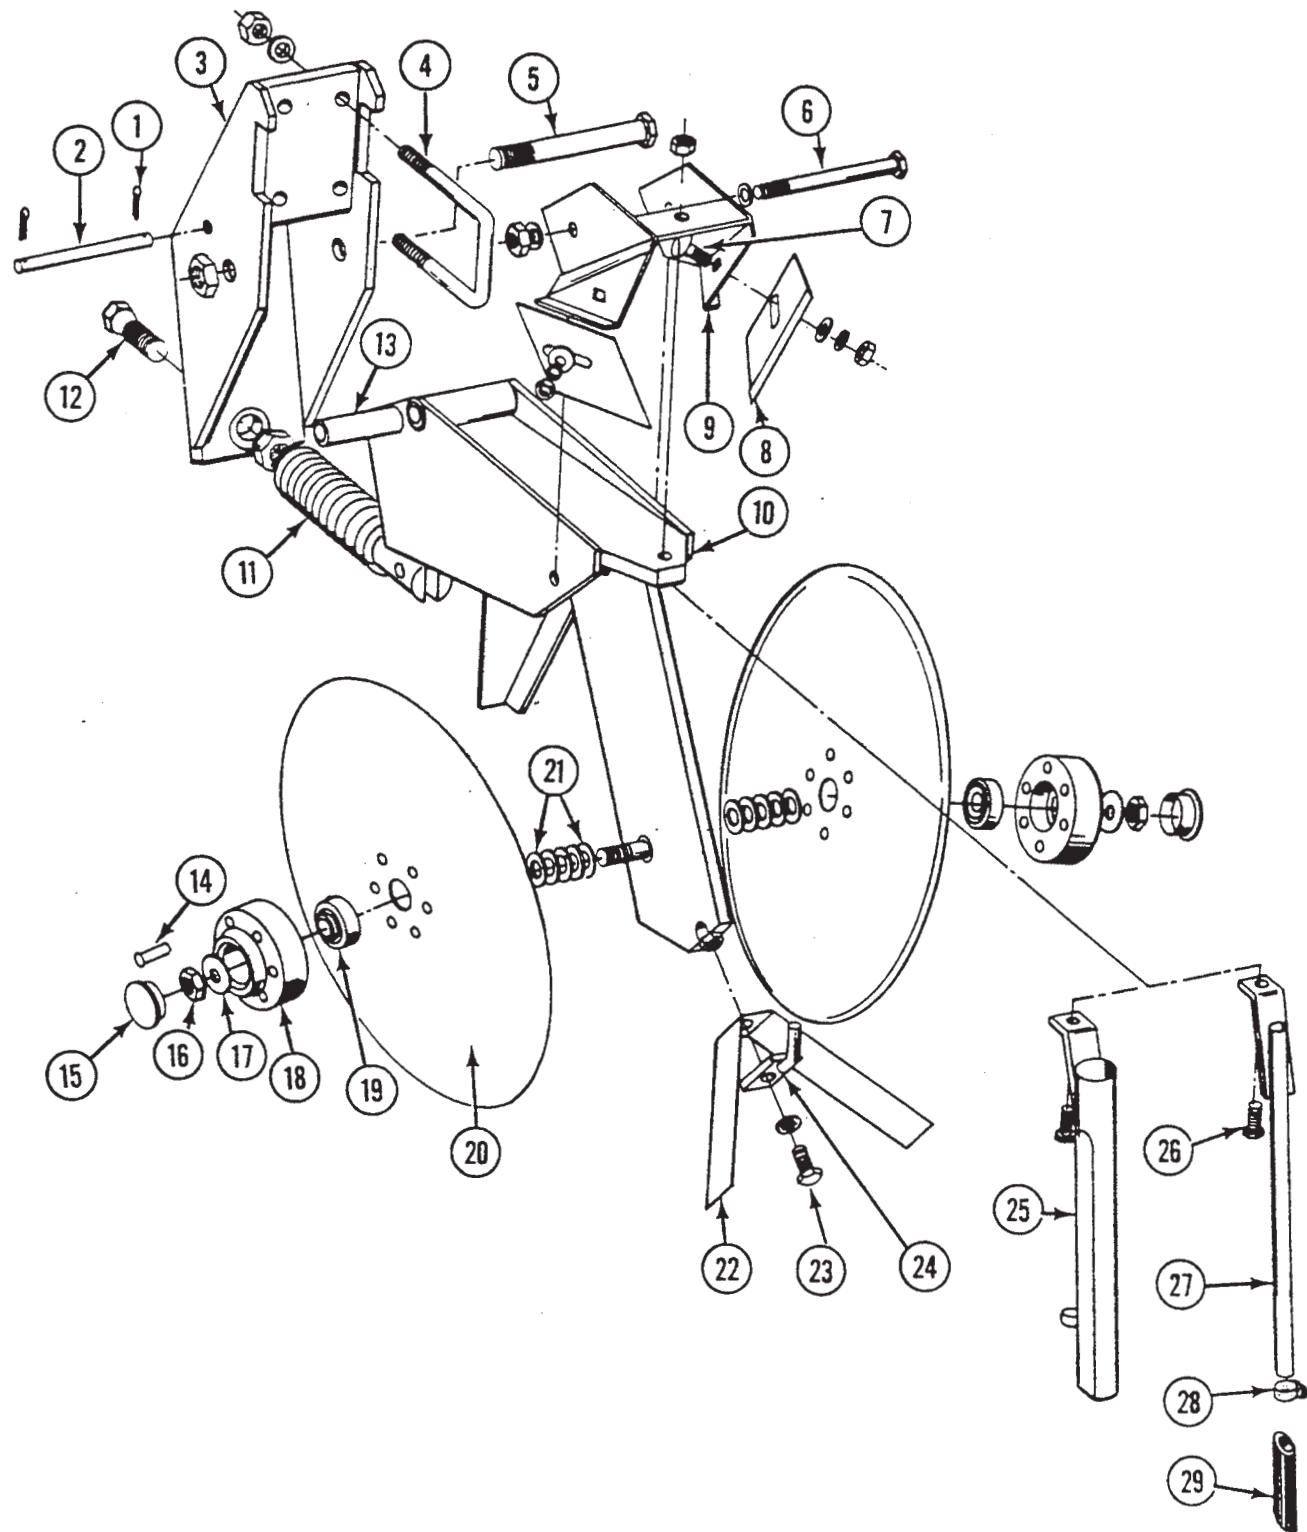


DOUBLE DISC FERTILIZER OPENER

ITEM	PART NO.	DESCRIPTION
1.	10451	Cotter Pin, 1/8" x 1"
2.	D1657	Lockup Pin
3.	A0785	Bracket
4.	D1339	U-Bolt, 2 1/2" x 2 1/2" x 1/2"-13
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
5.	10046	Hex Head Cap Screw, 5/8"-11 x 5"
	10107	Lock Nut, 5/8"-11
6.	10045	Hex Head Cap Screw, 1/2"-13 x 4 1/2"
	10111	Lock Nut, 1/2"-13
7.	10305	Carriage Bolt, 3/8"-16 x 1"
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
8.	D1673	Scraper
9.	A0810	Scraper Mount
10.	A0308	Shank
11.	A0328	Spring
12.	D0962	Hex Head Adjusting Bolt, 5/8"-18
	10499	Jam Nut, 5/8"-18
13.	D0487	Bushing
14.	10542	Rivet, 1/4" x 1 5/16"
15.	D1132	Cap
16.	10503	Jam Nut, R.H., 5/8"-11
	10504	Jam Nut, L.H., 5/8"-11
17.	10204	Machine Bushing, 21/32"
18.	B0134	Hub
19.	A2014	Bearing
20.	D1030	Blade
21.	10213	Machine Bushing, 11/16"
22.	D2589	Inner Scraper
23.	10019	Hex Head Cap Screw, 5/16"-18 x 1"
	10232	Lock Washer, 5/16"
24.	A0312	Mount
25.	A1369	Drop Tube, Dry Fertilizer
26.	10133	Hex Head Cap Screw, 5/16"-18 x 1 1/2"
	10109	Lock Nut, 5/16"-18
27.	A0318	Drop Tube, Liquid Fertilizer
28.	10681	Clamp, No. 6
29.	D1797	Extension
A.	A0320	Disc And Bearing Assembly (Items 18-20)

SINGLE DISC FERTILIZER OPENER

FOC016/FOC007

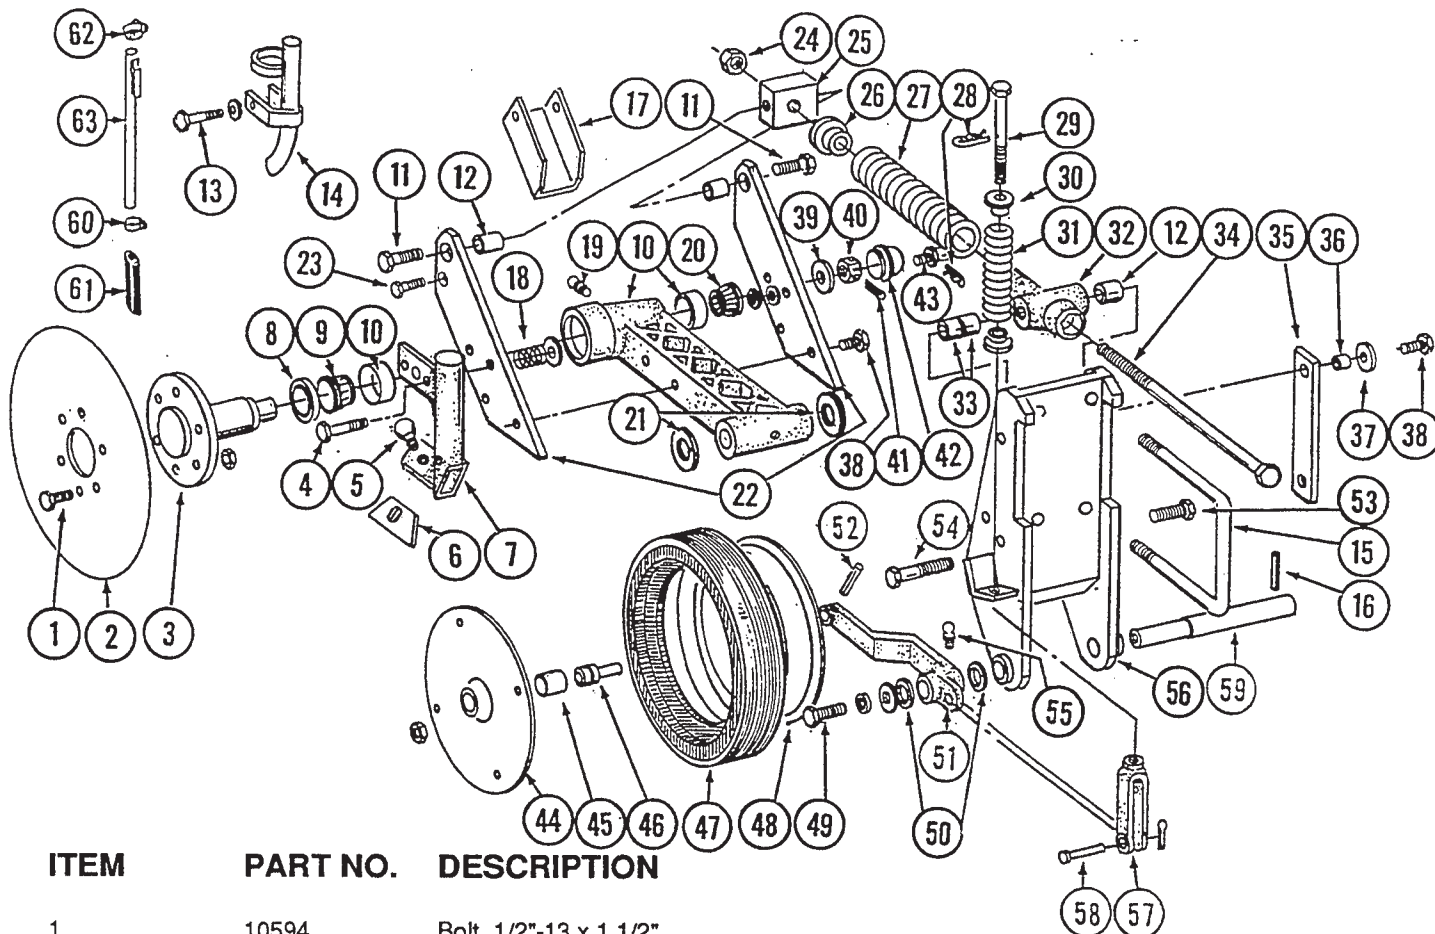


ITEM	PART NO.	DESCRIPTION
1.	10594	Bolt, 1/2"-13 x 1 1/2"
	10111	Lock Nut, 1/2"-13
2.	D7900	Blade, 18"
3.	B0205	Spindle
4.	10049	Hex Head Cap Screw, 3/8"-16 x 2 1/2"
	10210	Lock Washer, 3/8"
	10108	Lock Nut, 3/8"-16
5.	10599	Carriage Bolt, 3/8"-16 x 1 1/4"
	10210	Washer, 3/8"
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
6.	D7912	Scraper
7.	B0210	DropTube, R.H.
	B0209	Drop Tube, L.H. (Shown)
8.	A4286	Seal
9.	A4287	Outer Bearing
10.	A5887	Arm W/Cups
	D6553	Outer Cup
	R0188	Inner Cup
11.	10055	Hex Head Cap Screw, 5/8"-11 x 1 1/4"
	10230	Lock Washer, 5/8"
	10205	Washer, 5/8" SAE
12.	B0218	Bushing
13.	10403	Hex Head Cap Screw, 1/4"-20 x 2 1/2"
	10209	Washer, 1/4" USS
	10110	Lock Nut, 1/4"-20
14.	A6408	Liquid Drop Tube
15.	D1113	U-Bolt, 5" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11

SINGLE DISC FERTILIZER OPENER

ITEM	PART NO.	DESCRIPTION
16.	10610	Spring Pin, 3/8" x 2"
17.	D8238	Channel
18.	D7962	Spring
19.	10641	Grease Fitting, 1/8" NPT
20.	A0237	Inner Bearing
21.	10322	Bushing (As Required)
22.	D8224	Bar
23.	10001	Hex Head Cap Screw, 3/8"-16 x 1"
	10108	Lock Nut, 3/8"-16
24.	10105	Hex Nut, 3/4"-10
25.	D7908	Tap Block
26.	B0213	Spring Guide
27.	D2115	Compression Spring
28.	10592	Hair Pin Clip, No. 11
29.	D8214	Special Bolt
30.	B0212	Washer
31.	D8308	Spring
32.	B0206	Guide Rod
33.	D8815	Bushing, 1 1/8"
34.	D7907	Special Bolt
35.	D8239	Bar Hook
36.	D7904-02	Tube
37.	10206	Washer, 1/2" SAE
38.	10039	Hex Head Cap Screw, 1/2"-13 x 1 3/4"
	10111	Lock Nut, 1/2"-13
39.	10220	Machine Bushing
40.	10507	Slotted Nut, 1"-14
41.	10459	Cotter Pin, 3/16" x 1 1/2"
42.	D1104	Cap
43.	D8276	Pin
	10237	Lock Washer, 7/16"
	10100	Hex Nut, 7/16"-14
44.	D4888	Half Wheel
45.	B0118	Sleeve
46.	A2022	Bearing
47.	D4850	Offset Tire
48.	D1048	Half Wheel
49.	10438	Hex Head Cap Screw, 1/2"-13 x 3/4"
	10228	Lock Washer, 1/2"
	10216	Washer, 1/2" USS
50.	10526	Bushing
51.	D8030	Wheel Arm, R.H.
	D8031	Wheel Arm, L.H. (Shown)
52.	10603	Spring Pin, 1/4" x 1 1/4"
53.	10007	Hex Head Cap Screw, 5/8"-11 x 1 1/2"
	10230	Lock Washer, 5/8"
54.	10010	Hex Head Cap Screw, 5/8"-11 x 3"
	10205	Washer, 5/8" SAE
	10230	Lock Washer, 5/8"
55.	10640	Grease Fitting, 1/4"-28
56.	A5728	Opener Mount, R.H.
	A5727	Opener Mount, L.H. (Shown)
57.	D8218	Yoke
58.	10560	Clevis Pin, 1/2" x 1 3/4"
	10456	Cotter Pin, 1/8" x 3/4"
59.	D7911	Pivot Pin
60.	10673	Clamp, No. 8
61.	D1797	Extension
62.	10672	Clamp, No. 28
63.	A5791	Liquid Drop Tube

FERTILIZER OPENER MOUNTING BAR (Double Disc Fertilizer Openers)


FOC008

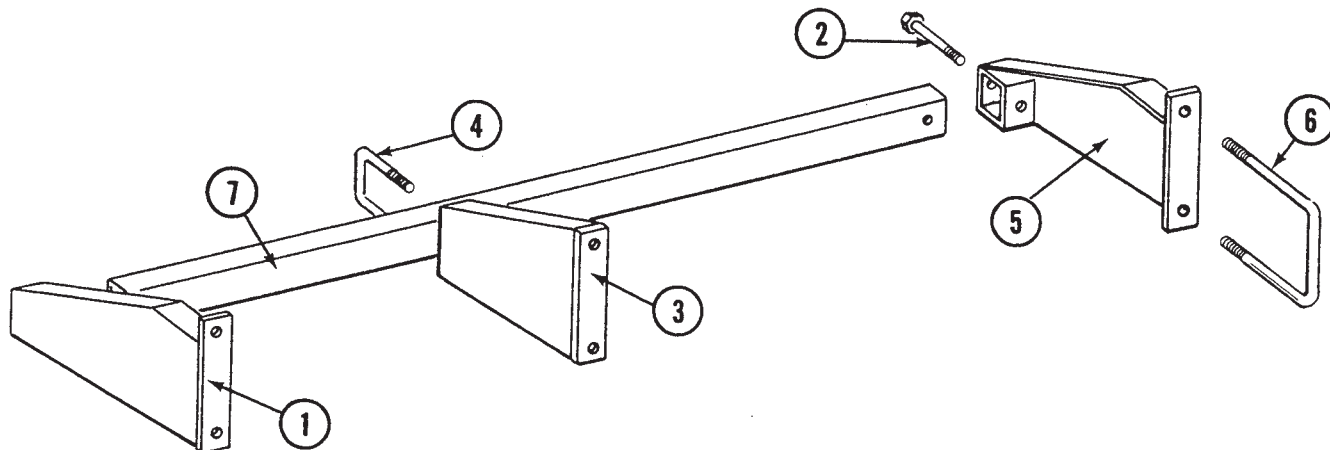

ITEM	PART NO.	DESCRIPTION
1.	A5231	Support, L.H., Single Frame Planters Only
2.	10035	Hex Head Cap Screw, 1/2"-13 x 4"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
3.	A5237	Support, L.H. (Shown), 8 Row Only
	A5236	Support, R.H., 8 Row Only
4.	D1138	U-Bolt, 2 1/2" x 2 1/2" x 1/2"-13
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
5.	A5230	Support, R.H., Single Frame Planters Only
6.	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
7.	D1685-14	Bar, 105", 4 Row 30
	D1685-15	Bar, 129", 4 Row 36/38
	D1685-13	Bar, 165", 6 Row 30
	D1685-12	Bar, 205", 6 Row 36/38
	D1685-16	Bar, 225", 8 Row 30
	D1685-17	Bar, 281", 8 Row 36/38

DRY FERTILIZER TRANSMISSION ASSEMBLY


DFC008rev

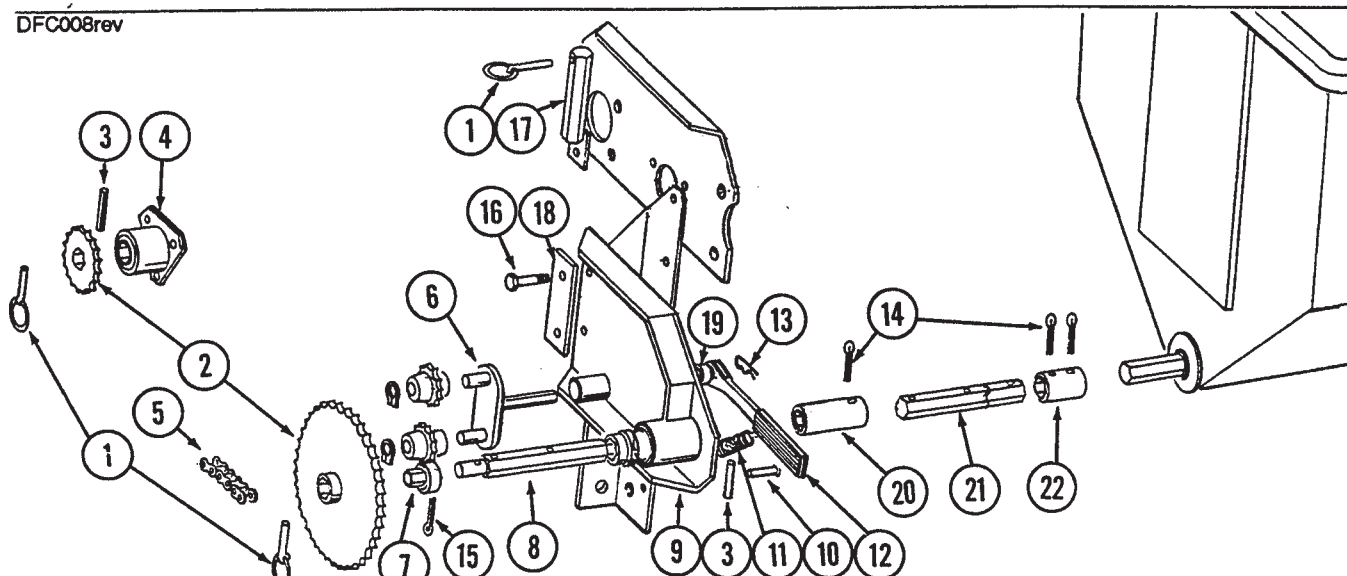

ITEM	PART NO.	DESCRIPTION
1.	D2558	Lynch Pin, 1/4"
2.	A5368	Sprocket, 15 Tooth
	A5107	Sprocket, 19 Tooth
	A5114	Sprocket, 30 Tooth
	A5115	Sprocket, 33 Tooth
	A5194	Sprocket, 50 Tooth
	A5195	Sprocket, 66 Tooth, Optional Low Rate Sprocket
3.	10602	Spring Pin, 1/4" x 1 1/2"
4.	A5223	Spacer W/Bearing
	A5116	Bearing
5.	3310-106	Chain, No. 40, 106 Pitch Including Connector Link
	R0912	Connector Link, No. 40
6.	A5136	Idler W/Sprockets And Rings
	D7426	Sprocket
	10435	Ring
7.	D7127	Shear Coupler
8.	D7870	Shaft, 7"
9.	A5678	Plate W/Bearings And Grease Fitting
	A5116	Bearing
	A5624	Extended Bearing
	10640	Grease Fitting, 1/4"-28
10.	10408	Clevis Pin, 5/16" x 3/4"
	10409	Ring, 5/16"
11.	D5857	Spring
12.	A4235	Ratchet Arm W/Protective Closure
	10445	Protective Closure
13.	10670	Hair Pin Clip, No. 3
14.	10460	Cotter Pin, 1/4" x 2"
15.	10462	Cotter Pin, 3/16" x 2"
16.	10016	Hex Head Cap Screw, 1/2"-13 x 2"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
17.	A5229	Sprocket Storage Rod
18.	D8246	Overlay
19.	D6819	Sleeve
20.	D7867	Coupler, 3", 4 Row 36/38, 6 Row 36/38 And 8 Row 36/38 Only
21.	D7871	Hex Shaft, 6", 4 Row 36/38, 6 Row 36/38 And 8 Row 36/38 Only
22.	D5886	Coupler, 1 3/4"

DRY FERTILIZER HOPPER AND MOUNTS

DFC009/DFC014/DFC018

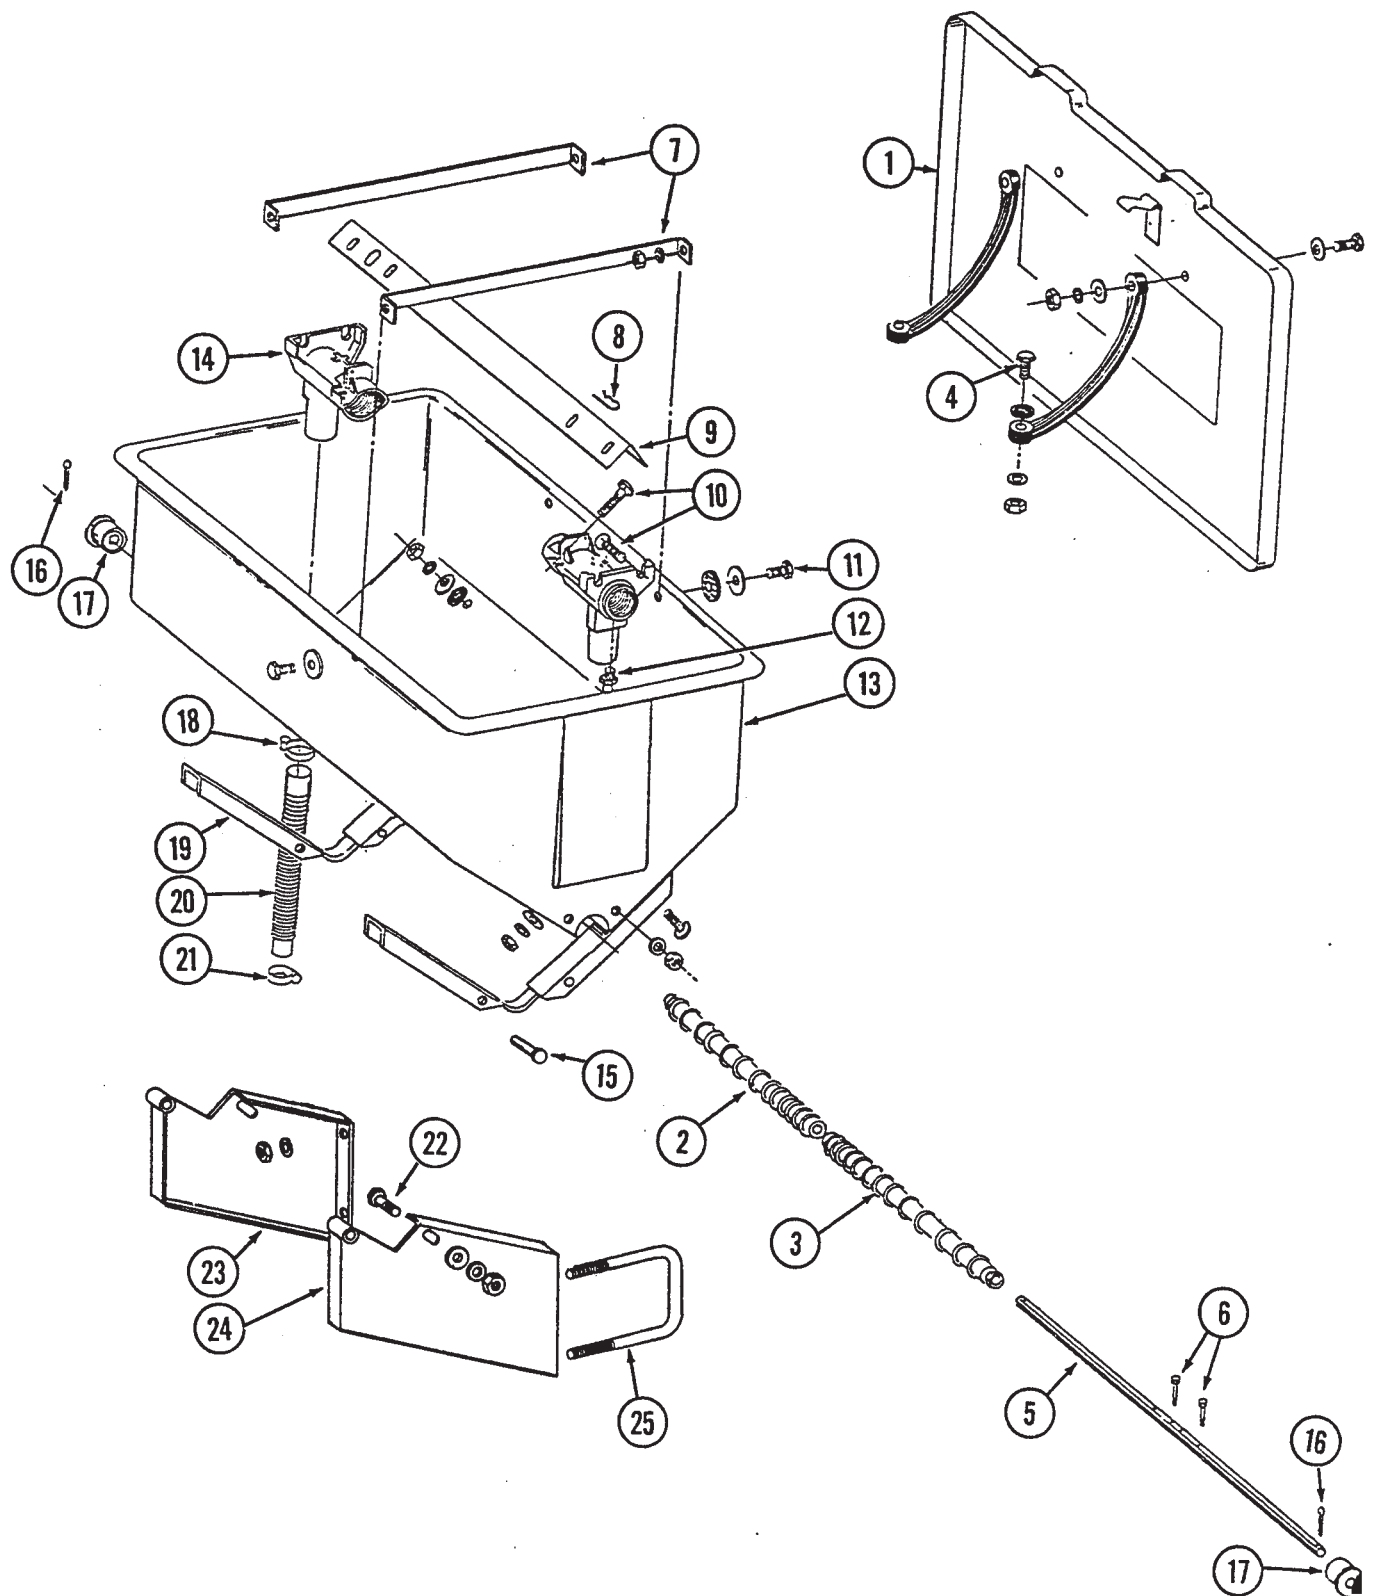


DRY FERTILIZER HOPPER AND MOUNTS

ITEM	PART NO.	DESCRIPTION
1.	A0898	Lid With Retainers, Clips, Rivets, Rubber Straps And Hardware
	D1380	Front Clip
	D2412	Rear Retainer
	10655	Rivet, 3/16" x 13/32"
	D1210	Rubber Strap
	10171	Hex Head Cap Screw, 5/16"-18 x 1 1/4"
	10219	Washer, 5/16" USS
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
2.	B0198	Auger, R.H.
3.	B0199	Auger, L.H.
4.	10133	Hex Head Cap Screw, 5/16"-18 x 1 1/2"
	10219	Washer, 5/16" USS
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
5.	D7848	Shaft
6.	10587	Hex Head Cap Screw, 1/4"-20 x 2", Stainless Steel
	10588	Hex Nut, 1/4"-20, Stainless Steel
7.	D1209	Strap
8.	10670	Hair Pin Clip, No. 3
9.	D1207	Baffle
10.	10303	Carriage Bolt, 5/16"-18 x 1", Grade 2
	10219	Washer, 5/16" USS
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
11.	10171	Hex Head Cap Screw, 5/16"-18 x 1 1/4"
	10201	Special Washer
	D1213	Rubber Washer
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
12.	10641	Grease Fitting, 1/8" NPT
13.	D1379	Hopper
14.	D1200	Outlet Housing
15.	10561	Clevis Pin, 1/2" x 3"
	10451	Cotter Pin, 1/8" x 1"
16.	10460	Cotter Pin, 1/4" x 2"
17.	B0200	Bearing
18.	10676	Clamp, No. 36
19.	A5652	Saddle
20.	D3790	Rubber Tube
21.	10672	Clamp, No. 28
22.	10037	Hex Head Cap Screw, 1/2"-13 x 1 1/4"
	10206	Washer, 1/2" SAE
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
23.	A0864	Hopper Mount, R.H.
24.	A0863	Hopper Mount, L.H.
25.	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10177	Hex Head Cap Screw, 5/8"-11 x 9 1/2"
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11


DRY FERTILIZER COUPLERS/SHAFTS

RH101190


4 Row 30 Model

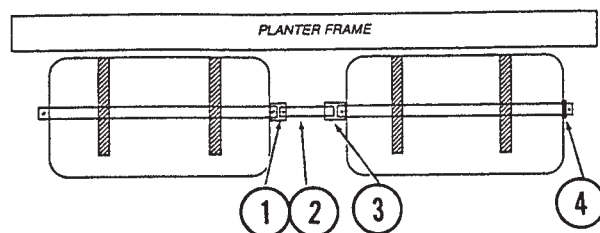


4 Row 36/38 Models

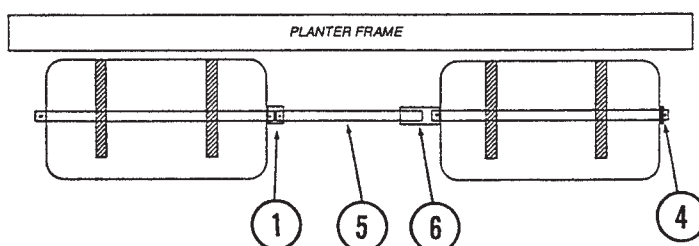

6 Row 30 Model

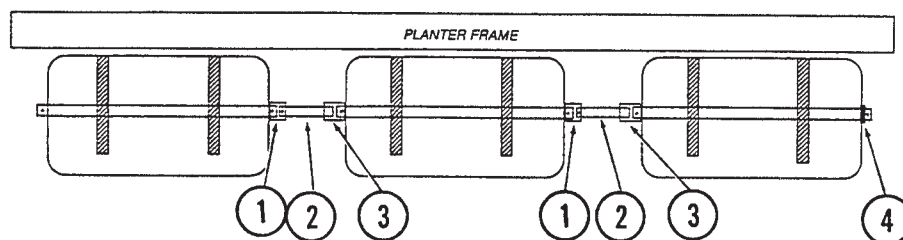


6 Row 36/38 Models

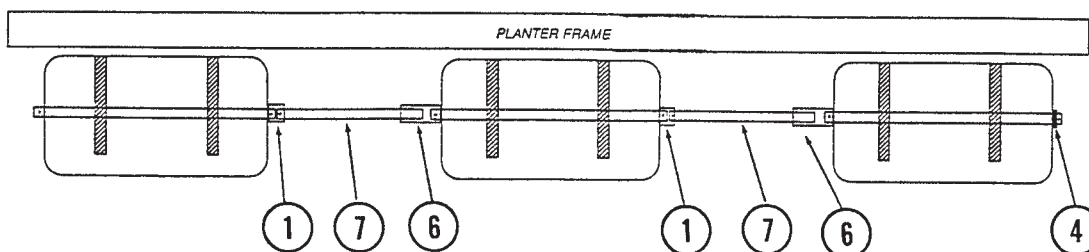


DRY FERTILIZER COUPLERS/SHAFTS

8 Row 30 Model

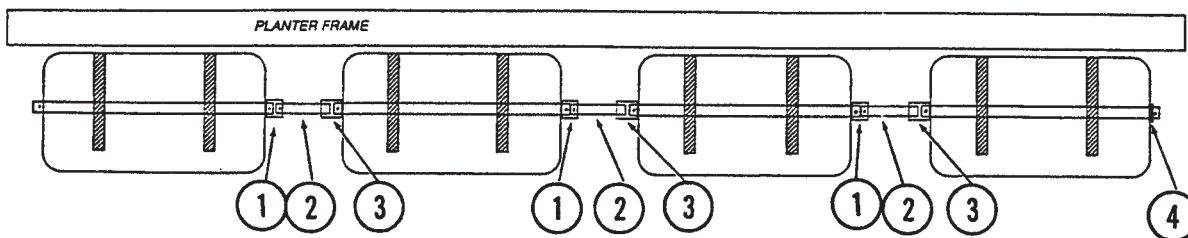


8 Row 36/38 Models

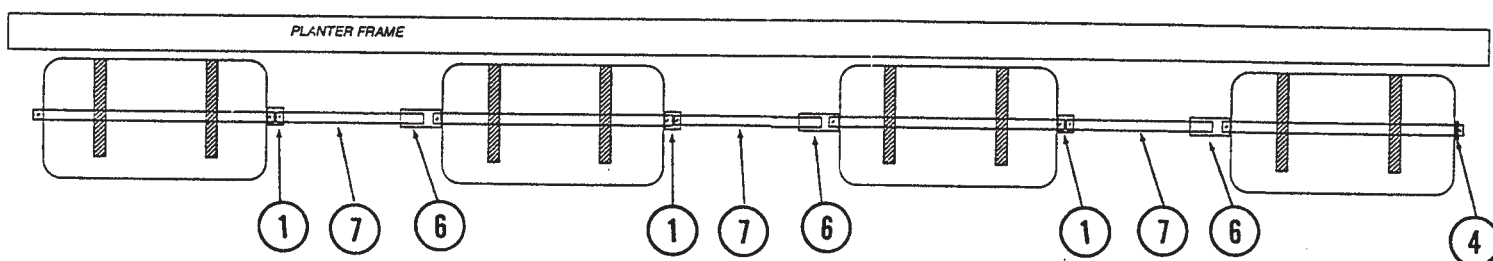

ITEM	PART NO.	DESCRIPTION
1.	D5886	Coupler, 1 3/4"
2.	D2548-15.5	Shaft, 15 1/2"
3.	D7867	Coupler, 3"
4.	10233	Machine Bushing
5.	D2548-25.5	Shaft, 25 1/2"
6.	D7868	Coupler, 7"
7.	D2548-27.5	Shaft, 27 1/2"

LIQUID FERTILIZER TANKS, SADDLES, MOUNTS, HOSES AND FITTINGS

LFC012rev

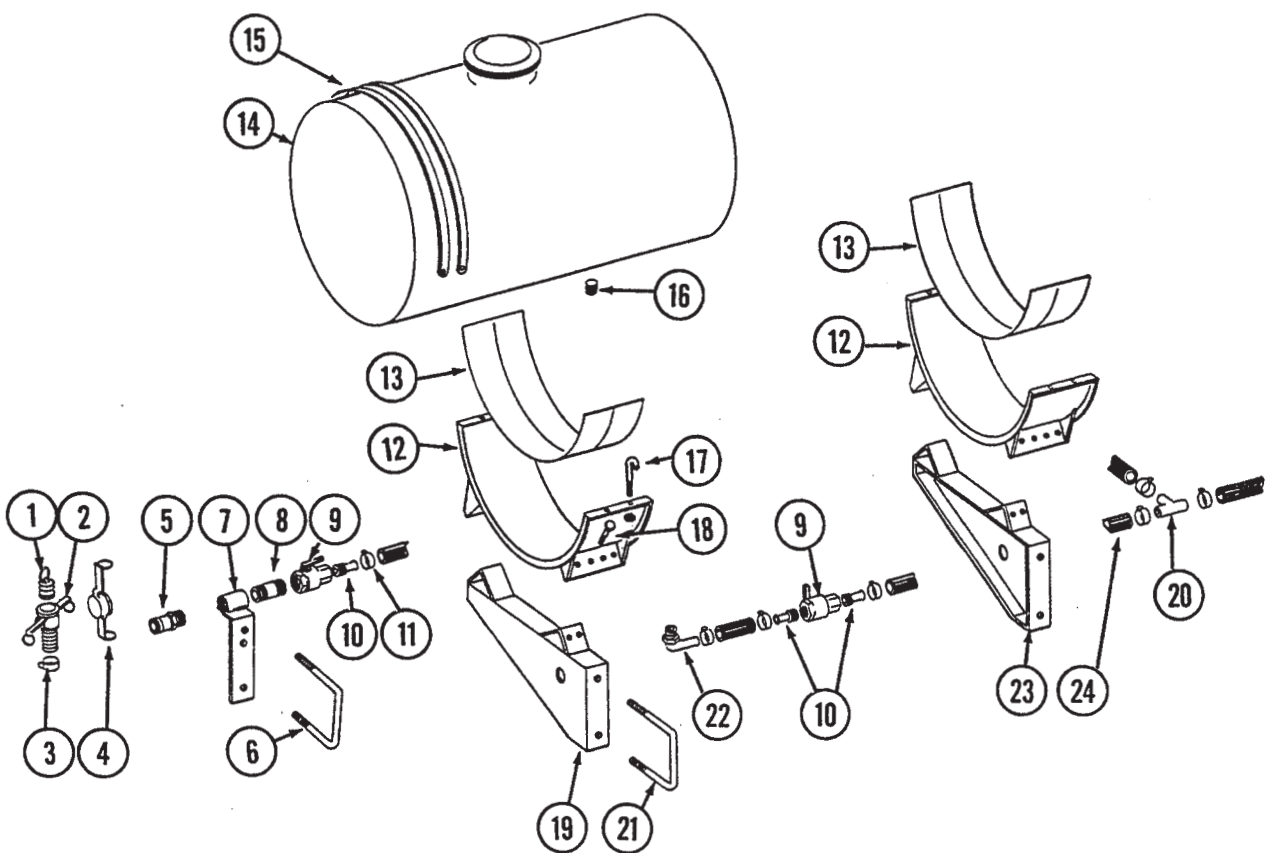


LIQUID FERTILIZER TANKS, SADDLES, MOUNTS, HOSES AND FITTINGS

ITEM	PART NO.	DESCRIPTION
1.	D1517	Dust Plug
2.	D1516	Adapter
3.	10672	Clamp, No. 28
4.	D1515	Dust Cap, 1 1/4"
5.	D1514	Adapter
6.	D7145	U-Bolt, 7" x 7" x 1/2"-13
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
7.	A5917	Quick Fill Mount
8.	10619	Pipe Nipple, 1 1/4" x 3"
9.	A4976	Ball Valve, Full Port
	R1015	Body O-Ring
	R1016	Stem O-Ring
	R1017	Teflon Seat
	R1018	Ball
	R1019	Handle
10.	10626	Adapter, 1 1/4" NPT to 1 1/4" Barb Fitting
11.	10674	Clamp, No. 24
12.	A5264	Saddle
13.	D1862	Pad, 8" x 14'
14.	A5258	Tank W/Lid and Fittings, 30" x 110 Gallon, 4 Row Models
	D1812	Tank W/Lid and Fittings, 30" x 150 Gallon, 6 and 8 Row Models
	R0508	1 1/4" Nylon Fitting
	R0509	Fillwell (Use With R0510)
	R1005	Fillwell, Threaded (Use With R1006)
	R0510	Lid, 10" (Use With R0509)
	R1006	Lid, 10", Thread (Use With R1005)
	R0513	3/8" Nylon Fitting
15.	D1520	Band, 30"
16.	10096	Plug, 3/4" Nylon
17.	D1337	J-Bolt, 5/16"
	10109	Lock Nut, 5/16"-18
18.	10003	Hex Head Cap Screw, 3/8"-16 x 1 1/2"
	10210	Washer, 3/8" USS
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
19.	A5799	Saddle Mount
20.	10633	Tee, 1 1/4"
21.	D1114	U-Bolt, 7" x 7" x 5/8"-11
	10230	Lock Washer, 5/8"
	10104	Hex Nut, 5/8"-11
22.	10629	Elbow
23.	A5800	Saddle Mount
24.	4200-01	Hose, 1 1/4" x 22', 4 Row Models
	4200-02	Hose, 1 1/4" x 27', 6 Row Models
	4200-03	Hose, 1 1/4" x 32', 8 Row Models

LIQUID FERTILIZER PISTON PUMP DRIVE

LFC009/LFC024/LFC026/LFC027

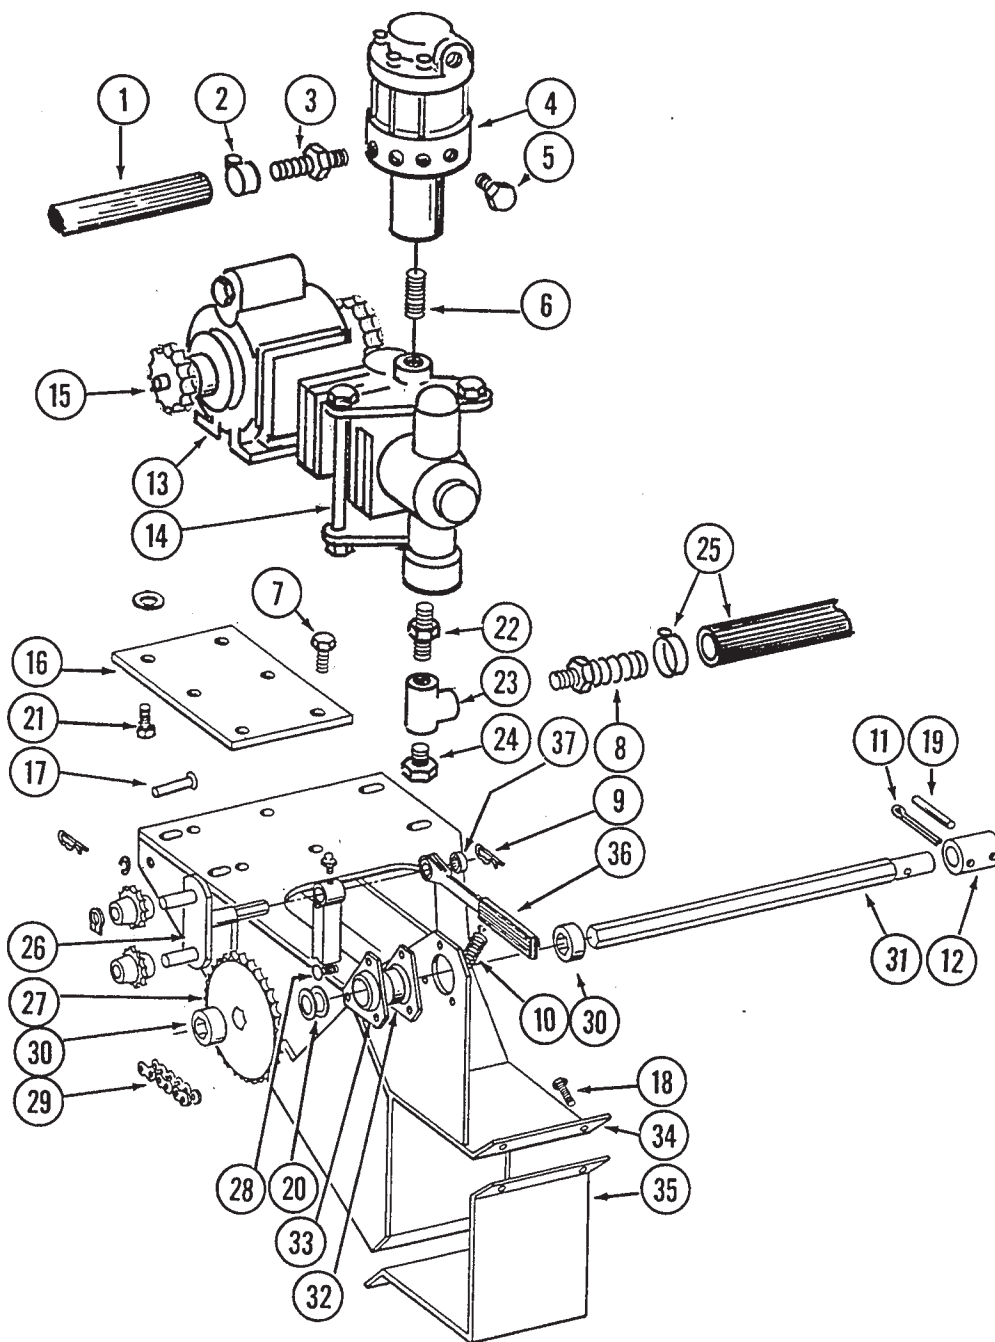


ITEM	PART NO.	DESCRIPTION
1.	4300-03 4300-10 4300-05	Hose, 1/2" x 30', 4 Row Models Hose, 1/2" x 60', 6 Row Models Hose, 1/2" x 100', 8 Row Models
2.	10673	Clamp, No. 8
3.	D8816	Hose Barb
4.		See "Liquid Fertilizer Flow Divider"
5.	10292	Plug, 1/4" NPT

LIQUID FERTILIZER PISTON PUMP DRIVE

ITEM	PART NO.	DESCRIPTION
6.	10389	Reducer Nipple, 1 1/2" To 1 1/4"
7.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
8.	10626	Adapter, 1 1/4" NPT To Barb Fitting
9.	10670	Hair Pin Clip, No. 3
10.	D5857	Spring
11.	10460	Cotter Pin, 1/4" x 2"
12.	D3839	Coupler, 2"
13.		See "Liquid Fertilizer Piston Pump (Crankcase Assembly)"
14.		See "Liquid Fertilizer Piston Pump (Cylinder Assembly)"
15.	A6509	Sprocket W/Set Screw, 23 Tooth
16.	D9226	Plate
17.	10478	Clevis Pin, 5/16" x 1"
	10409	Retaining Ring
	10669	Hair Pin Clip, No. 22
18.	10017	Hex Head Cap Screw, 1/2"-13 x 1 1/2"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
19.	10602	Spring Pin, 1/4" x 1 1/2"
20.	10233	Machine Bushing
21.	10047	Hex Head Cap Screw, 3/8"-16 x 1 3/4"
	10210	Washer, 3/8" USS
	R1122	Mounting Pad
	10229	Lock Washer, 3/8"
	10101	Hex Nut, 3/8"-16
22.	10728	Reducing Nipple, 1 1/2" To 1 1/4"
23.	10719	Tee, 1 1/4"
24.	10739	Pipe Plug, 1 1/4"
25.		See "Liquid Fertilizer Tanks, Saddles, Mounts And Hoses"
26.	A5136	Idle W/Sprockets And Rings
	D7426	Sprocket
	10435	Ring
27.	A5194	Sprocket, 50 Tooth
28.	10303	Carriage Bolt, 5/16"-18 x 1"
	10232	Lock Washer, 5/16"
	10106	Hex Nut, 5/16"-18
29.	3310-144	Chain, No. 40, 144 Pitch Including Connector
	R0912	Connector Link, No. 40
30.	D0917	Lock Collar, 7/8" Hex, Less Set Screws
	10145	Set Screw, 5/16"-18 x 1/2"
31.	D5990	Shaft, 74"
32.	2100-03	Bearing, 7/8" Hex Bore, Spherical
33.	3400-01	Flangette
34.	A6501	Drive Plate W/Grease Fitting
	10641	Grease Fitting, 1/8" NPT
35.	D6182	Clamp
36.	A4235	Ratchet Arm W/Protective Closure
	10445	Protective Closure
37.	D6819	Sleeve

LIQUID FERTILIZER PISTON PUMP (Crankcase Assembly)

JB-L4400-991/CCU007

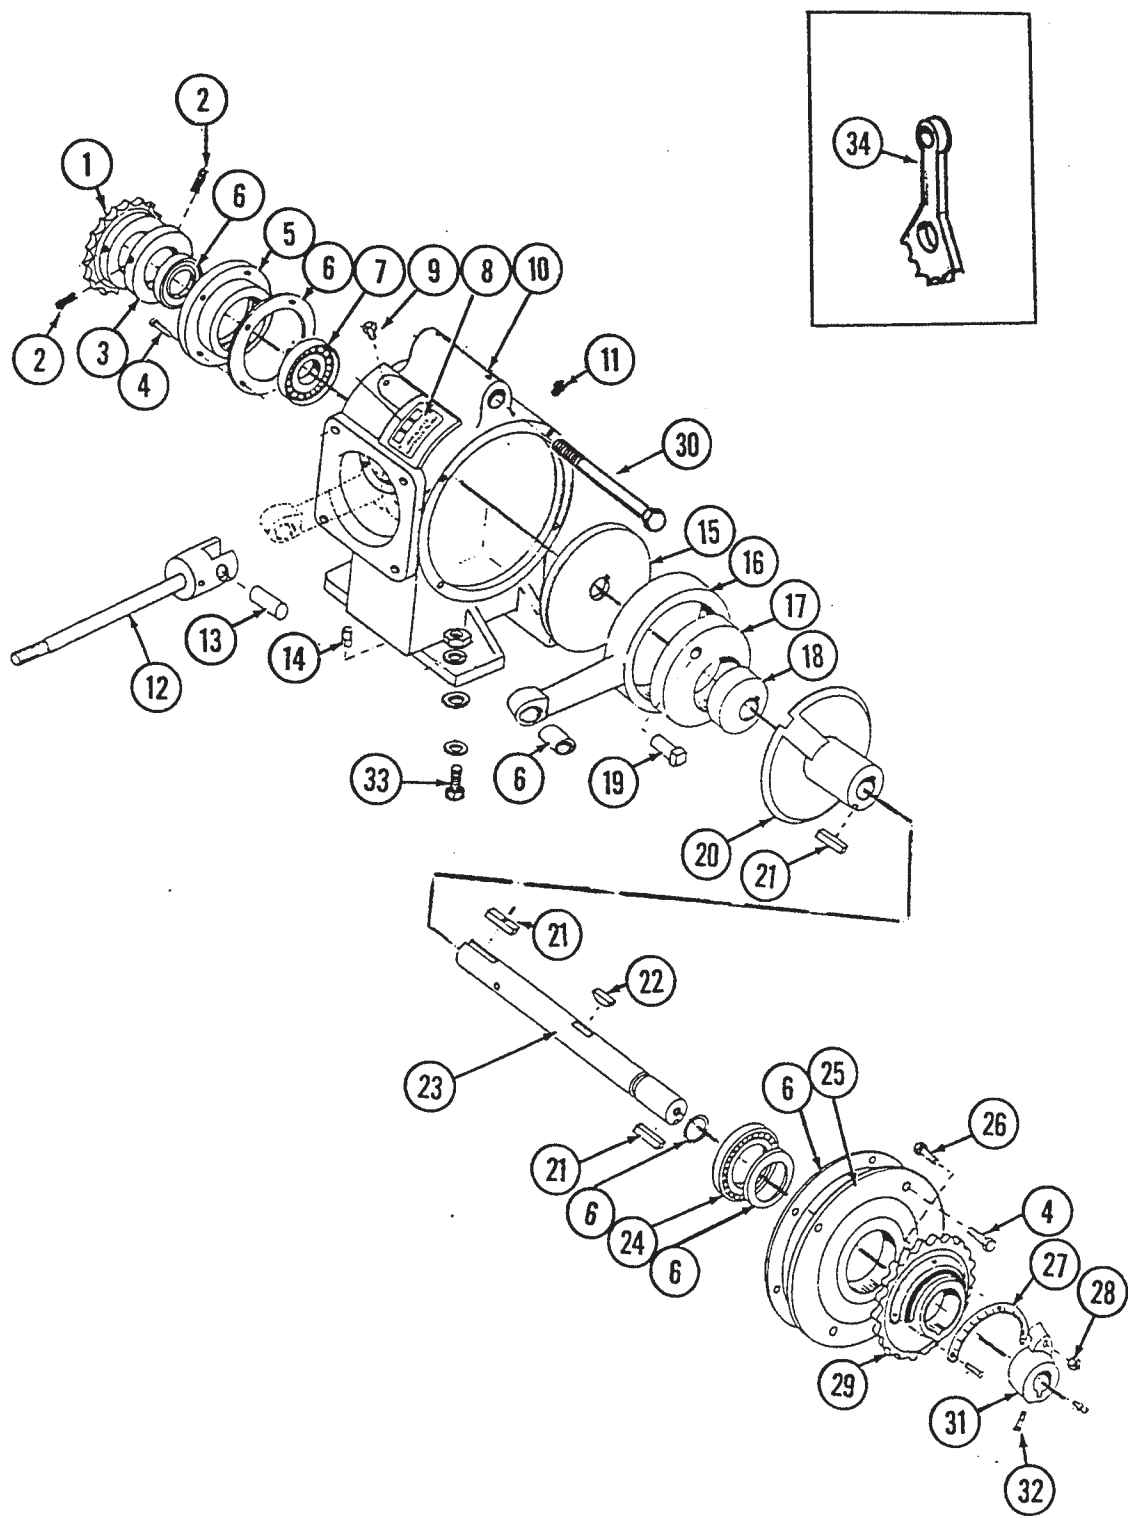


LIQUID FERTILIZER PISTON PUMP (Crankcase Assembly)

ITEM	PART NO.	DESCRIPTION
1.		See "Liquid Fertilizer Piston Pump Drive"
2.	10688	Hex Socket Head Set Screw, 3/8"-16 x 5/8"
3.	R1147	Spacer
4.	10019	Hex Bolt, 5/16"-18 x 1"
5.	R1102	Housing
6.	R1173	Repair Kit, Also Includes Item 5 On "Liquid Fertilizer Piston Pump (Cylinder Assembly)" Pages
7.	R1104	Bearing
8.	R1105	Name Plate
9.	10054	Hex Bolt, 5/16"-18 x 1/2"
10.	R1106	Crankcase
11.	R1107	Vent Plug
12.		See "Liquid Fertilizer Piston Pump (Cylinder Assembly)"
13.		See "Liquid Fertilizer Piston Pump (Cylinder Assembly)"
14.	R1123	Plug
15.	R1108	Disc
16.	R1109	Connecting Rod
17.	R1110	Large Eccentric
18.	R1111	Small Eccentric
19.	R1120	Eccentric Pin
20.	R1119	Sleeve
21.	R1118	Setting Arm Key
22.	R1112	Woodruff Key
23.	R1148	Crankshaft
24.	R1116	Bearing
25.	R1166	Cover Plate
26.	R1167	Square Head Bolt, 3/8"-16 x 1 3/4"
27.	R1168	Scale
28.	10108	Lock Nut, 3/8"-16
29.	R1114	Flange
30.	10318	Hex Head Cap Screw, 5/8"-11 x 4 1/2"
	10104	Hex Nut, 5/8"-11
31.	R1165	Arm
32.	10693	Hex Socket Head Set Screw, 5/16"-18 x 3/8"
33.		See "Liquid Fertilizer Piston Pump Drive"
34.	R1100	Adjustment Wrench
A.	A6154	Piston Pump Complete, Includes Crankcase (Items 2-34) and Cylinder (Items 1-22) Assemblies

LIQUID FERTILIZER PISTON PUMP (Cylinder Assembly)

JB-L4400-991/SKH007

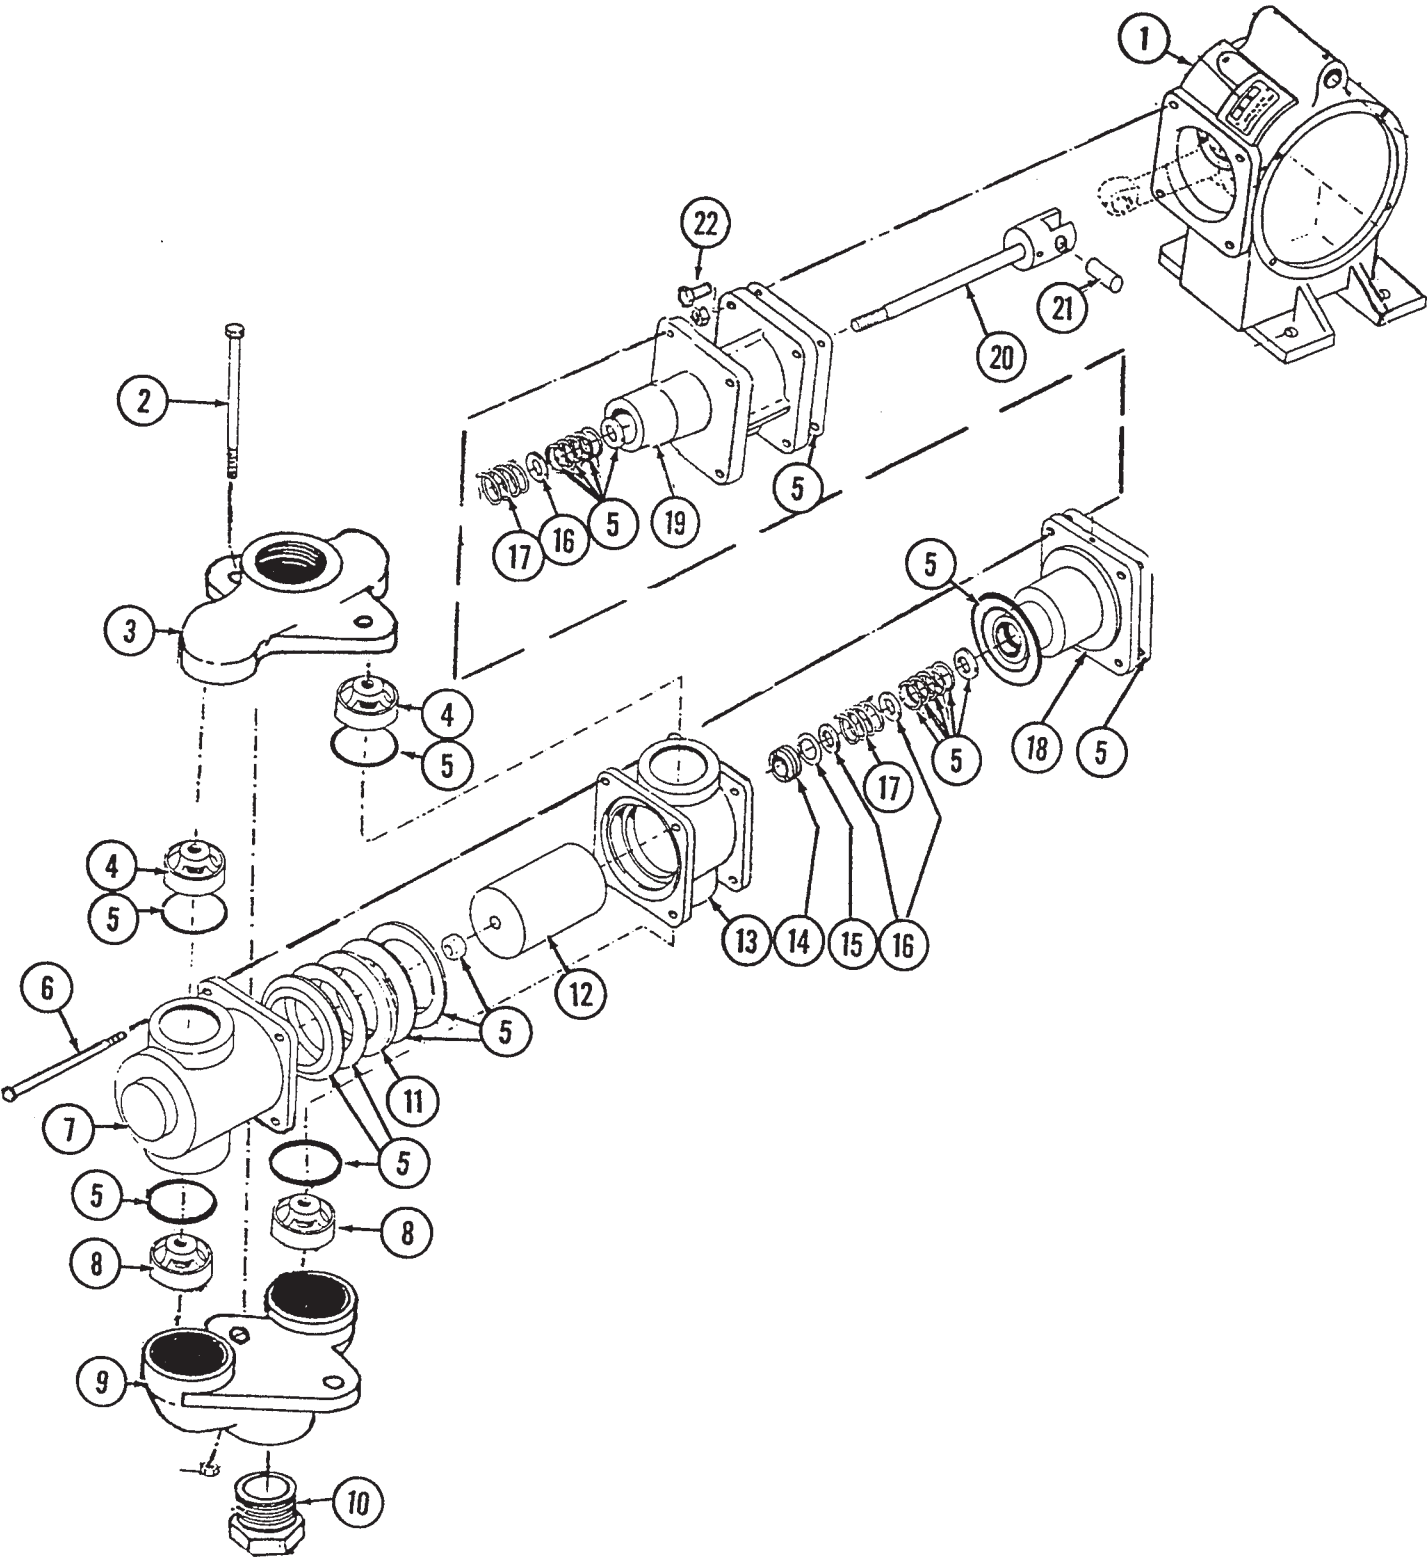


LIQUID FERTILIZER PISTON PUMP (Cylinder Assembly)

ITEM	PART NO.	DESCRIPTION
1.		See "Liquid Fertilizer Piston Pump (Crankcase Assembly)"
2.	10686	Hex Head Cap Screw, 3/8"-16 x 8"
	10101	Hex Nut, 3/8"-16
3.	R1145	Discharge Manifold
4.	R1144	Discharge Valve
5.	R1173	Repair Kit, Also Includes Item 6 On "Liquid Fertilizer Piston Pump (Crankcase Assembly)" Pages
6.	10687	Hex Head Cap Screw, 3/8"-16 x 5 1/2"
	10101	Hex Nut, 3/8"-16
7.	R1143	Outboard Cylinder
8.	R1142	Suction Valve
9.	R1140	Suction Manifold
10.		See "Liquid Fertilizer Piston Pump Drive"
11.	R1137	Flange Packing Washer
12.	R1136	Plunger
13.	R1135	Inboard Cylinder
14.	R1134	Stuffing Box Insert
15.	R1133	Retaining Ring
16.	R1129	Washer
17.	R1130	Packing Spring
18.	R1132	Outboard Stuffing Box
19.	R1127	Crosshead Guide
20.	R1125	Piston Rod
21.	R1124	Pin
22.	10019	Hex Head Cap Screw, 5/16"-18 x 1"

LIQUID FERTILIZER PISTON PUMP FLOW DIVIDER

JB-L2190-991

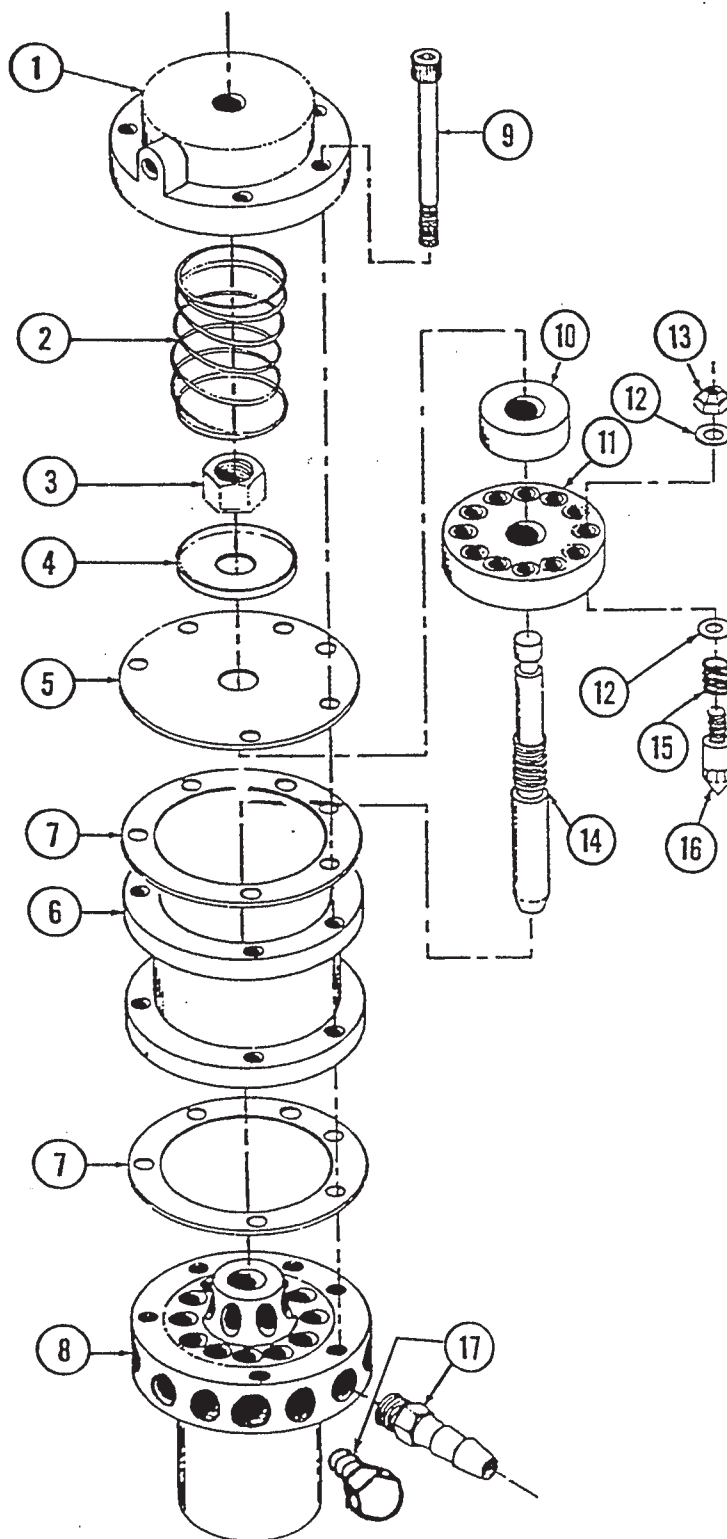


LIQUID FERTILIZER PISTON PUMP FLOW DIVIDER

ITEM	PART NO.	DESCRIPTION
1.	R1150	Cap
2.	R1151	Spring
3.	10358	Hex Nut, 9/16"-18
4.	R1152	Plate
5.	R1153	Diaphragm
6.	R1154	Housing
7.	R1155	Gasket
8.	*	Manifold
9.	R1157	Socket Screw, 1/4"
10.	R1158	Lock
11.	*	Disk
12.	*	Stainless Steel Washer
13.	*	Valve Nut
14.	R1162	Plunger
15.	*	Spring
16.	*	Valve
17.		See "Liquid Fertilizer Piston Pump Drive"
A.	A6158	Liquid Fertilizer Piston Pump Flow Divider Complete

* Factory calibration required. Replacement not recommended. Always be sure timing marks on disk and manifold line up.

LIQUID FERTILIZER SQUEEZE PUMP MOUNTING BRACKET, SPROCKET AND ADAPTER PACKAGE AND DRIVE LINE

LFC009

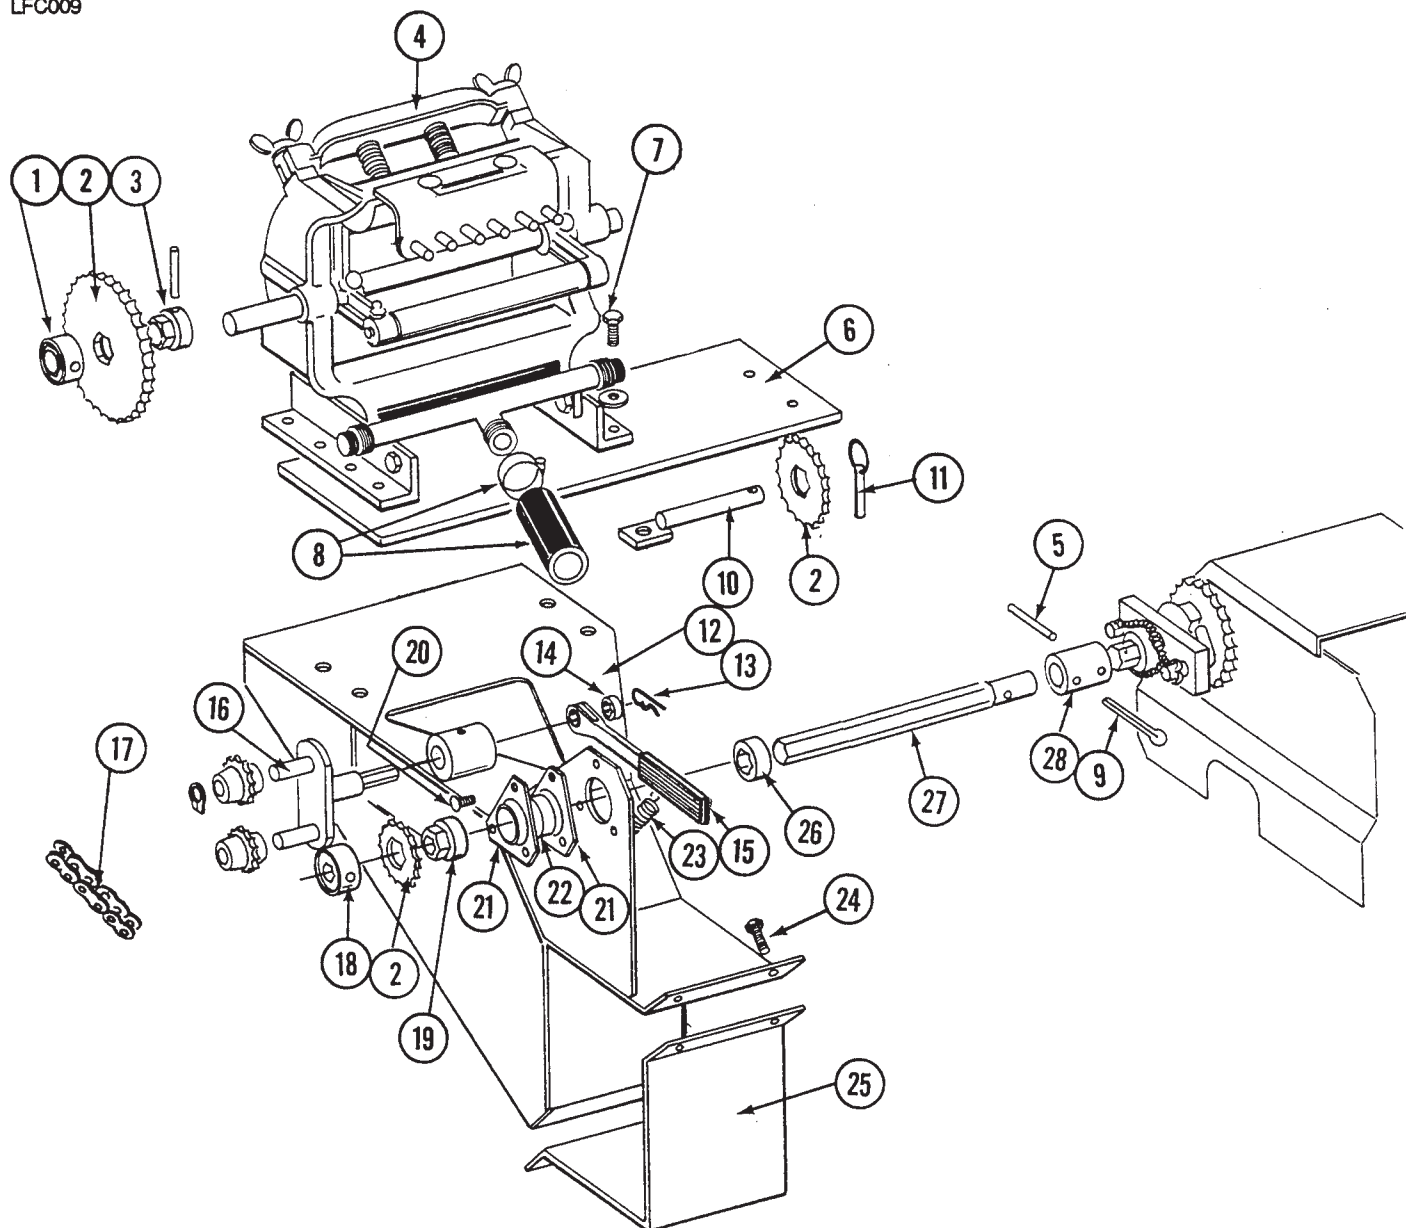


ITEM	PART NO.	DESCRIPTION
1.	D1215	Lock Collar W/Set Screws
	10120	Set Screw, 3/8"-16 x 1/2"
2.	2500-70	Sprocket, 16 Tooth
	2500-71	Sprocket, 18 Tooth
	2500-72	Sprocket, 20 Tooth
	2500-73	Sprocket, 30 Tooth
	2500-74	Sprocket, 44 Tooth
	2500-75	Sprocket, 46 Tooth
	2500-76	Sprocket, 52 Tooth
	2500-78	Sprocket, 62 Tooth
	2500-77	Sprocket, 60 Tooth (Optional)

LIQUID FERTILIZER SQUEEZE PUMP MOUNTING BRACKET, SPROCKET AND ADAPTER PACKAGE AND DRIVE LINE

ITEM	PART NO.	DESCRIPTION
3.	D1216 10600 10120	Adapter (Less Spring Pin) W/Set Screws Spring Pin, 5/16" x 2 1/4" Set Screw, 3/8"-16 x 1/2"
4.		See "Liquid Fertilizer Squeeze Pump"
5.	10602	Spring Pin, 1/4" x 1 1/2"
6.	D6165	Plate, 8 Row Only
7.	10004 10210 10229 10101	Hex Head Cap Screw, 3/8"-16 x 1 1/4" Washer, 3/8" USS Lock Washer, 3/8" Hex Nut, 3/8"-16
8.		See "Liquid Fertilizer Tanks, Saddles, Mounts, Hoses And Fittings"
9.	10640	Cotter Pin, 1/4" x 2"
10.	A5251	Sprocket Storage Rod
11.	D2558	Lynch Pin, 1/4"
12.	A5366	Mount
13.	10670	Hair Pin Clip, No. 3
14.	D0935	Sleeve
15.	A4235 10445	Ratchet Arm W/Protective Closure Protective Closure
16.	A5136 D7426 10435	Idler W/Sprockets And Rings Sprocket Ring
17.	3310-155 R0912 R0911	Chain, No. 40, 155 Pitch Including Connector And Offset Link Connector Link, No. 40 Offset Link, No. 40
18.	A2355 10120	Lock Collar W/Set Screws Set Screws, 3/8"-16 x 1/2"
19.	A2354 10120	Adapter W/Set Screws Set Screw, 3/8"-16 x 1/2"
20.	10303 10232 10106	Carriage Bolt, 5/16"-18 x 1" Lock Washer, 5/16" Hex Nut, 5/16"-18
21.	3400-01	Flangette
22.	2100-03	Bearing, 7/8" Hex Bore, Spherical
23.	D5857	Spring
24.	10017 10228 10102	Hex Head Cap Screw, 1/2"-13 x 1 1/2" Lock Washer, 1/2" Hex Nut, 1/2"-13
25.	D6182	Saddle Clamp
26.	D0917 10145	Lock Collar, 7/8" Hex, Less Set Screws Set Screw, 5/16"-18 x 1/2"
27.	D5987 D5988 D5989 D5990	Shaft, 30", 4 Row 30 And 6 Row 30 Shaft, 36", 4 Row 36/38 And 6 Row 36/38 Shaft, 60", 8 Row 30 Shaft, 74", 8 Row 36/38
28.	D3839	Coupler
A.	6801X	Sprocket And Adapter Package, Includes: (1)10600, (1)2500-70, (1)2500-71, (1)2500-72, (1)2500-73, (1)2500-74, (1)2500-75, (1)2500-76, (1)2500-78, (1)A2354, (1)D1213, (1)D1216, (1)A2355

LIQUID FERTILIZER SQUEEZE PUMP 4 ROW MODELS


LFC011

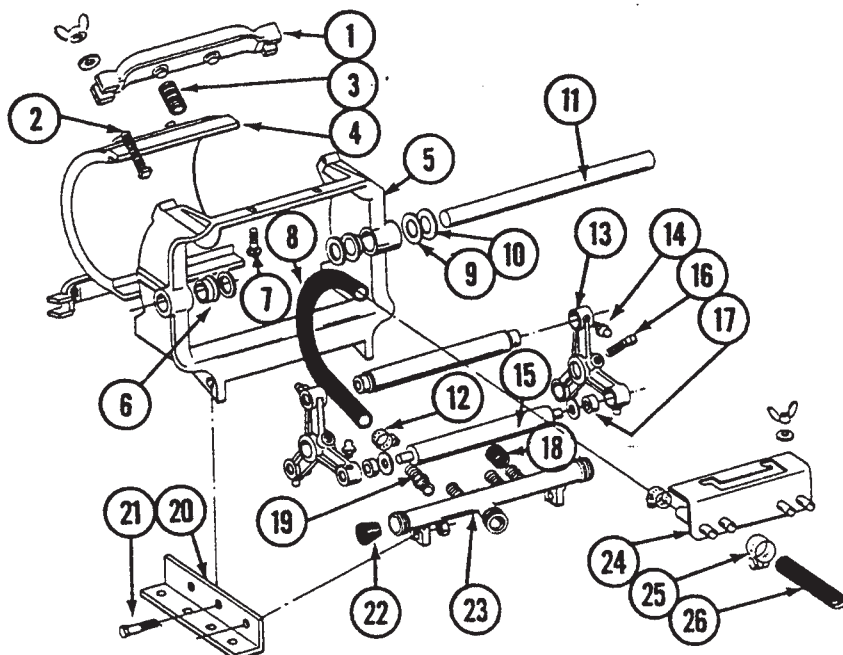

ITEM	PART NO.	DESCRIPTION
1.	R0216	Spring Anchor Bar
2.	10130	Square Head Machine Bolt, 5/16"-18 x 1 3/4"
	10219	Washer, 5/16" USS
	10144	Wing Nut, 5/16"-18
3.	R0214	Spring
4.	R0212	Plate
5.	R0208	Frame
6.	R0207	Nylon Bushing
7.	10303	Carriage Bolt, 5/16"-18 x 1"
	10219	Washer, 5/16" USS
	10144	Wing Nut, 5/16"-18
8.	R0215	Metering Hose, 1/2" x 13"
9.	R0225	Shim, 1/32"
10.	R0226	Shim, 3/64"
11.	R0210	Shaft
12.	10681	Clamp, No. 6
13.	R0223	Roller Arm
14.	10640	Grease Fitting, 1/4"-28
15.	R0209	Roller
16.	10131	Set Screw, 5/16"-18 x 3/4"
17.	R0227	Nylon Bushing
18.	R0211	Rubber Cap
19.	R0232	Adapter
20.	R0213	Angle
21.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10101	Hex Nut, 3/8"-16
22.	R0217	Manifold Plug
23.	R0228	Intake Manifold
24.	R0224	Discharge Manifold
25.	10673	Clamp, No. 8
26.	4300-03	Hose, 1/2" x 30'
A.	A0321	Squeeze Pump Complete, 4 Rows (Items 1-24)

LIQUID FERTILIZER SQUEEZE PUMP 6 ROW MODELS


LFC011

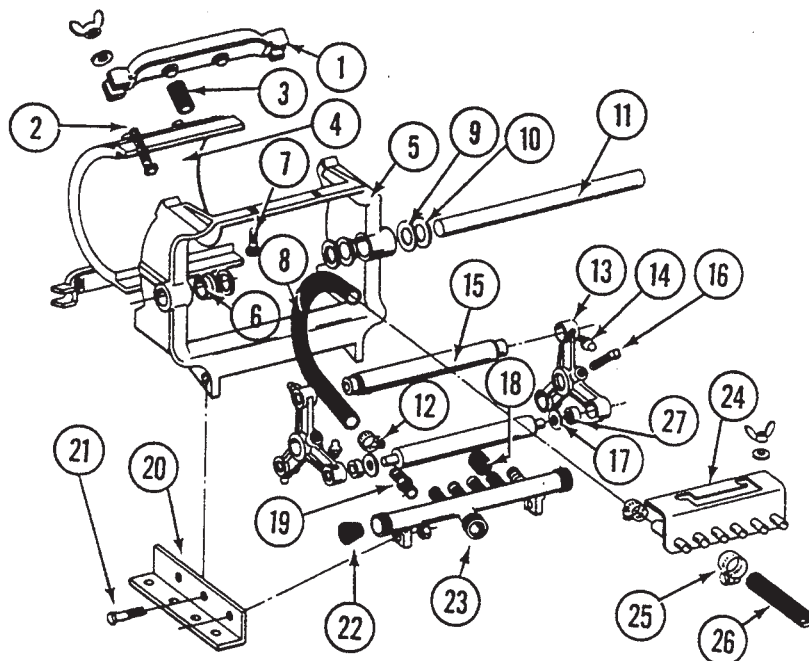

ITEM	PART NO.	DESCRIPTION
1.	R0216	Spring Anchor Bar
2.	10130	Square Head Machine Bolt, 5/16"-18 x 1 3/4"
	10219	Washer, 5/16" USS
	10144	Wing Nut, 5/16"-18
3.	R0214	Spring
4.	R0212	Plate
5.	R0208	Frame
6.	R0207	Nylon Bushing
7.	10303	Carriage Bolt, 5/16"-18 x 1"
	10219	Washer, 5/16" USS
	10144	Wing Nut, 5/16"-18
8.	R0215	Metering Hose, 1/2" x 13"
9.	R0225	Shim, 1/32"
10.	R0226	Shim, 3/64"
11.	R0210	Shaft
12.	10681	Clamp, No. 6
13.	R0231	Roller Arm
14.	10640	Grease Fitting, 1/4"-28
15.	R0233	Roller
16.	10131	Set Screw, 5/16"-18 x 3/4"
17.	R0229	Nylon Bushing
18.	R0211	Rubber Cap
19.	R0232	Adapter
20.	R0213	Angle
21.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10101	Hex Nut, 3/8"-16
22.	R0217	Manifold Plug
23.	R0228	Intake Manifold
24.	R0224	Discharge Manifold
25.	10673	Clamp, No. 8
26.	4300-04	Hose, 1/2" x 50'
27.	R0230	Roller Bearing
A.	A0322	Squeeze Pump Complete, 6 Rows (Items 1-24 And 27)

LIQUID FERTILIZER SQUEEZE PUMP 8 ROW MODELS


LFC010

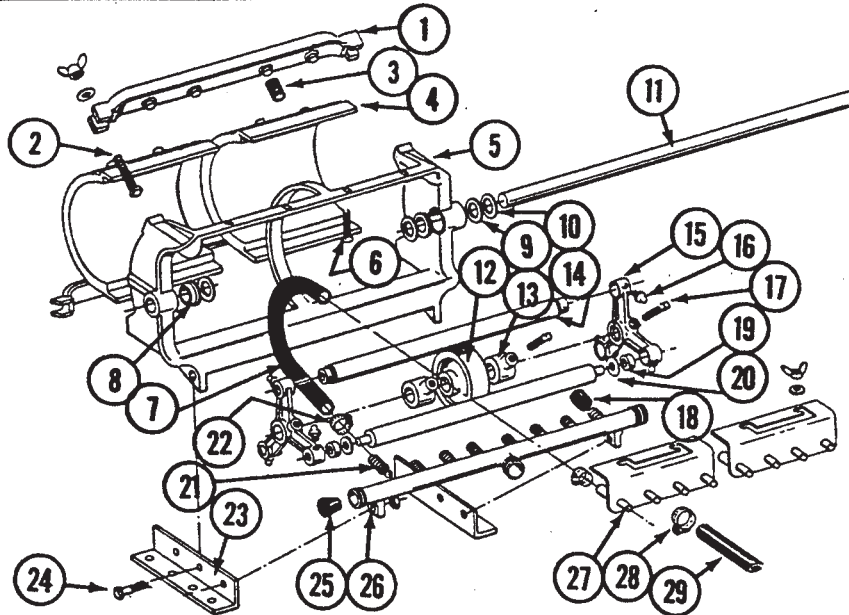

ITEM	PART NO.	DESCRIPTION
1.	R0221	Spring Anchor Bar
2.	10130	Square Head Machine Bolt, 5/16"-18 x 1 3/4"
	10219	Washer, 5/16" USS
	10144	Wing Nut, 5/16"-18
3.	R0214	Spring
4.	R0212	Plate
5.	R0222	Frame
6.	10303	Round Head Machine Bolt, 5/16"-18 x 1"
	10219	Washer, 5/16" USS
	10144	Wing Nut, 5/16"-18
7.	R0215	Metering Hose, 1/2" x 13"
8.	R0207	Nylon Bushing
9.	R0225	Shim, 1/32"
10.	R0226	Shim, 3/64"
11.	R0220	Shaft
12.	R0281	Back Up Roller
13.	R0282	Set Collar
14.	R0283	Roller
15.	R0231	Roller Arm
16.	10640	Grease Fitting, 1/4"-28
17.	10131	Set Screw, 5/16"-18 x 3/4"
18.	R0211	Rubber Cap
19.	R0230	Bearing
20.	R0229	Nylon Washer
21.	R0232	Adapter
22.	10681	Clamp, No. 6
23.	R0279	Angle, Left
	R0280	Angle, Right
24.	10004	Hex Head Cap Screw, 3/8"-16 x 1 1/4"
	10101	Hex Nut, 3/8"-16
25.	R0217	Manifold Plug
26.	R0284	Intake Manifold
27.	R0236	Discharge Manifold
28.	10673	Clamp, No. 8
29.	4300-05	Hose, 1/2" x 100'
A.	A0323	Squeeze Pump Complete, 8 Rows (Items 1 - 27)

WARNING LIGHTS AND SMV SIGN


PFA052

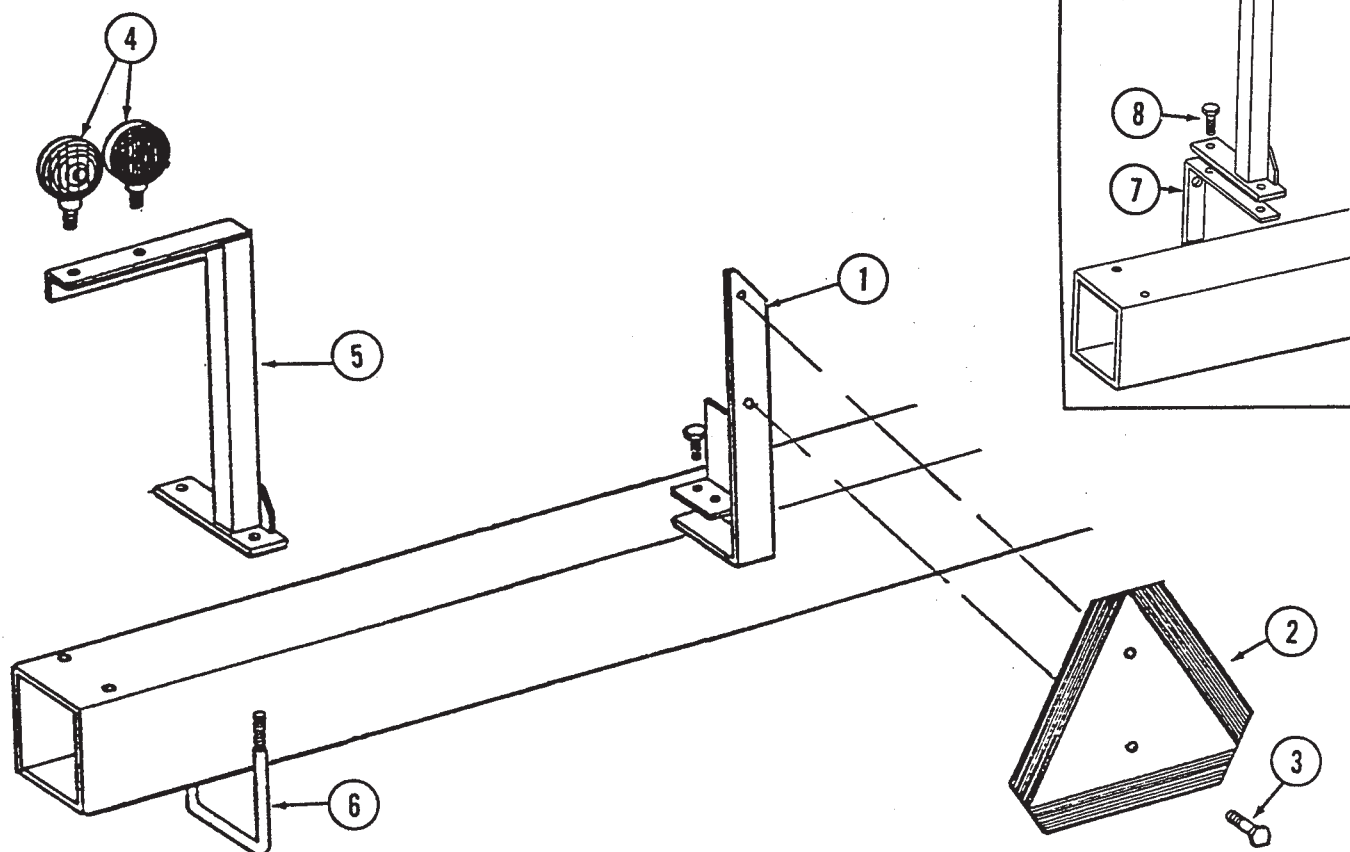


ITEM	PART NO.	DESCRIPTION
1.	D7152	Bracket
2.	D2199	SMV Sign
3.	10023	Hex Head Cap Screw, 1/4"-20 x 3/4"
	10110	Lock Nut, 1/4"-20
4.	A4122	Single Red Light Assembly Complete W/Female Terminal
	A4123	Double Amber Light Assembly Complete W/Male Terminal
	R0968	Bulb, No. 1156
	R0970	Red Lens
	R0969	Amber Lens
	10289	Hex Nut, 1/2"-20
	10266	Female Terminal
	10269	Male Terminal
5.	A4775	Bracket, L.H. (Shown)
	A4776	Bracket, R.H.
6.	D7145	U-Bolt, 7" x 7" x 1/2"-13
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13
7.	D8304	Bracket (Used to mount light bracket when single disc fertilizer openers are used.)
8.	10039	Hex Head Cap Screw, 1/2"-13 x 1 3/4"
	10228	Lock Washer, 1/2"
	10102	Hex Nut, 1/2"-13

DECALS, REFLECTORS AND TIE STRAPS

2

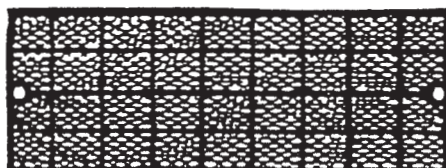


3

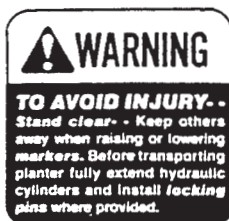

4



5

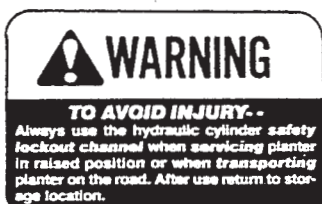

6

KINZE

7



8

Double Frame

9

2000

10




11




12


DECALS, REFLECTORS AND TIE STRAPS

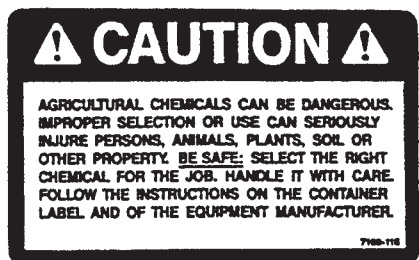

13

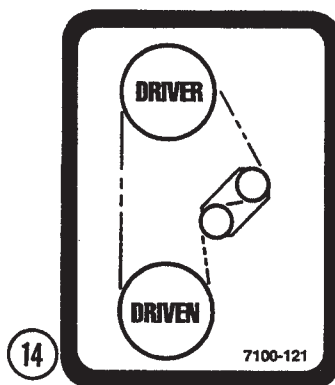


14

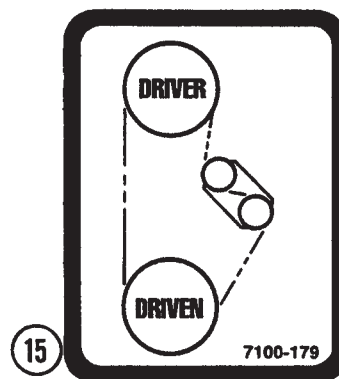

15



16

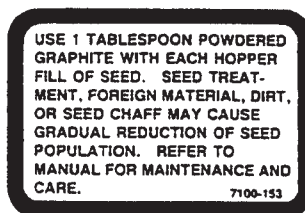

17



18

ITEM	PART NO.	DESCRIPTION
1.	R0155	Blue Paint, Aerosol (Not Shown)
	R0439	Blue Paint, Quart
	R0440	Blue Paint, Gallon
2.	D1162	Tie Strap, 28"
	D1512	Tie Strap, 6"
	D2117	Tie Strap, 14 1/2"
	D2984	Tie Strap, 33"
3.	7200-03	Reflector, Red
	7200-04	Reflector, Amber
4.	7100-42	Decal, Warning
5.	7100-46	Decal, Caution
6.	7100-47	Decal, Warning
7.	7100-104	Decal, KINZE, 3" x 12"
8.	7100-56	Decal, Warning
9.	7100-60	Decal, Double Frame®
10.	7100-156	Decal, 2000
11.	7100-89	Decal, Danger
12.	7100-90	Decal, Warning
13.	7100-115	Decal, Caution
14.	7100-121	Decal, Transmission
15.	7100-179	Decal, Transmission (Interplant)
16.	7100-144	Decal, Logo
17.	7100-153	Decal, Information
18.	7100-182	Decal, Meter Alignment

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
1K149	P5	7100-56	P73	10061	P23
306-08	P43, P45, P47	7100-60	P73	10064	P6
2100-03	P27, P30, P65b, P67	7100-89	P73	10068	P17
2403-08	P43, P45, P47	7100-90	P73	10069	P5
2500-70	P66	7100-104	P73	10087	P25
2500-71	P66	7100-115	P73	10096	P65
2500-72	P66	7100-121	P73	10100	P57
2500-73	P66	7100-144	P73	10101	P3, P4, P7, P8, P11, P13, P21, P27, P43, P45, P47, P49, P55, P56, P65, P65b, P65f, P67, P68, P69, P70
2500-74	P66	7100-153	P73	10102	P4, P17, P21, P22, P25, P30, P31, P33, P35, P36, P53, P55, P58, P59, P61, P65, P65b, P67, P71
2500-75	P66	7100-156	P73	10103	P6, P11, P27
2500-76	P66	7100-179	P73	10104	P4, P17, P21, P23, P25, P51, P53, P56, P58, P61, P65, P65d
2500-77	P66	7100-182	P73	10105	P23, P25, P57
2500-78	P66	7192X	P4	10106	P5, P15, P17, P27, P31, P33, P49, P61, P65b, P67
2603-08-08-06	P43, P45	7200-03	P73	10107	P4, P14, P15, P17, P27, P31, P55
2603-08	P45, P47	7200-04	P73	10108	P3, P21, P23, P27, P56, P57, P65d
2701-08	P43	10001	P2	10109	P5, P18, P36, P55, P65
2703-08	P45, P47	10001	P23, P27, P31, P43, P45, P47, P57	10110	P8, P56, P71
3303-96	P21	10003	P2, P6, P23, P65	10111	P6, P14, P15, P17, P18, P21, P55, P56, P57
3303-98	P7	10004	P4, P21, P43, P45, P47, P49, P65b, P67, P68, P69, P70	10112	P23
3303-114	P13	10005	P4, P27	10120	P66, P67
3305-01	P19	10006	P4	10128	P30, P31
3310-08	P31	10007	P57	10130	P68, P69, P70
3310-26	P51	10008	P4, P17, P25, P33, P35	10131	P68, P69, P70
3310-80	P31, P51	10009	P25, P53	10133	P33, P55, P61
3310-89	P31	10010	P57	10139	P25
3310-106	P59	10012	P17	10144	P68, P69, P70
3310-132	P27	10014	P3	10145	P29, P49, P51, P65b, P67
3310-144	P65b	10015	P6	10168	P36
3310-155	P67	10016	P6, P31, P59	10171	P49, P61
3310-226	P51	10017	P15, P18, P21, P65b, P67	10177	P4, P61
3314-40	P13	10018	P5	10187	P33
3400-01	P27, P30, P65b, P67	10019	P7, P36, P55, P65d, P65f	10197	P17
4100-02	P22	10020	P9	10201	P61
4200-01	P65	10021	P9	10203	P31
4200-02	P65	10022	P9, P13	10204	P3, P7, P55
4200-03	P65	10023	P13, P27, P71	10205	P27, P56, P57
4300-03	P65a, P68	10025	P25	10206	P3, P17, P57, P61
4300-04	P69	10026	P23, P25, P33, P35	10207	P13
4300-05	P65a, P70	10027	P23	10208	P2
4300-10	P65a	10033	P30, P36	10209	P8, P13, P56
6400-06	P41	10035	P58	10210	P2, P3, P4, P6, P8, P21, P23, P27, P31,
6400-08-06	P47	10036	P14, P17, P21		
6400-08	P43, P45, P46, P47	10037	P4, P25, P31, P61		
6500-06	P43, P45	10039	P15, P18, P57, P71		
6500-08-06	P47	10045	P55		
6500-08	P43, P45, P47	10046	P55		
6502-06	P43, P45	10047	P23, P65b		
6502-08	P47	10049	P56		
6600-08	P47	10051	P27		
6602-08	P43, P45, P47	10053	P30		
6801-06-08	P43, P45	10054	P65d		
6801-08	P43, P45, P47	10055	P17, P56		
6801X	P67				
7100-42	P73				
7100-46	P73				
7100-47	P73				

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
10210	P43, P45, P47, P55, P56, P65, P65b, P67	10401	P9	10581	P17, P53
10213	P3, P55	10403	P56	10582	P17
10215	P43, P45, P46	10408	P59	10584	P10
10216	P3, P6, P14, P15, P18, P21, P22, P25, P30, P31, P57	10409	P30, P50, P59, P65b	10585	P15, P18
10217	P17	10417	P22	10587	P61
10219	P18, P61, P68, P69, P70	10418	P22	10588	P61
10220	P57	10427	P3	10592	P57
10226	P35	10430	P29	10594	P56
10227	P11, P27	10435	P3, P13, P21, P31, P51, P59, P65b, P67	10597	P15, P18
10228	P3, P4, P17, P21, P22, P25, P30, P31, P33, P35, P36, P53, P55, P57, P58, P59, P61, P65, P65b, P67, P71, P71	10438	P57	10599	P56
10229	P2, P3, P4, P6, P7, P8, P11, P13, P21, P27, P43, P45, P47, P49, P55, P56, P65, P65b, P67	10445	P31, P51, P59, P65b, P67	10600	P67
10230	P4, P21, P23, P25, P31, P33, P35, P51, P53, P56, P57, P58, P61, P65	10449	P37, P38, P39	10601	P3
10231	P23, P25, P33, P35	10451	P3, P55, P61	10602	P9, P10, P13, P27, P28, P29, P30, P50, P59, P65b, P67
10232	P5, P7, P27, P31, P33, P49, P55, P61, P65b, P67	10452	P11	10603	P5, P6, P9, P10, P57
10233	P27, P28, P29, P31, P51, P63, P65b	10455	P7	10604	P9
10235	P27	10456	P57	10605	P2
10237	P57	10457	P7	10609	P13
10266	P71	10459	P57	10610	P25, P57
10269	P71	10460	P25, P28, P29, P31, P33, P35, P51, P53, P59, P61, P65b, P67	10619	P65
10289	P71	10462	P31, P51, P59	10620	P3, P7, P9, P13
10292	P65a	10464	P29	10621	P7, P8, P9, P13, P19
10303	P3, P18, P61, P65b, P67, P68, P69, P70	10470	P9	10622	P19
10304	P3	10478	P30, P50, P65b	10626	P65, P65b
10305	P3, P7, P13, P19, P55	10499	P55	10629	P65
10306	P11, P27	10500	P9	10633	P65
10307	P2	10501	P27	10637	P13
10308	P19	10503	P3, P15, P18, P55	10640	P3, P5, P14, P17, P33, P57, P59, P68, P69, P70
10309	P7	10504	P3, P55	10641	P25, P31, P35, P51, P53, P57, P61, P65b
10310	P8, P11	10507	P57	10645	P23
10311	P13	10520	P8	10646	P23
10312	P7, P13, P27, P31	10521	P13	10647	P23
10313	P25	10523	P11	10655	P61
10318	P15, P65d	10524	P13	10660	P13
10322	P57	10525	P6	10661	P5
10323	P9	10526	P3, P57	10669	P3, P65b
10328	P3	10529	P19	10670	P7, P31, P33, P51, P59, P61, P65b, P67
10348	P22	10531	P10	10672	P57, P61, P65
10358	P65h	10536	P15, P18	10673	P57, P65a, P68, P69, P70
10384	P3, P21	10542	P55	10674	P65
10389	P65b	10544	P36	10676	P61
		10545	P4, P21	10680	P11
		10546	P13	10681	P55, P68, P69, P70
		10551	P3	10686	P65f
		10552	P3	10687	P65f
		10553	P7	10688	P65d
		10555	P3	10690	P9
		10560	P57	10693	P65d
		10561	P61	10719	P65b
		10567	P13	10722	P36
		10570	P13	10724	P36
		10572	P15, P17	10725	P36
		10573	P17		
		10574	P14, P17		

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
10728	P65b	A1369	P55	A4223	P49
10739	P65b	A1676	P36	A4229	P49
A0167	P36	A1677	P36	A4230	P49
A0237	P57	A1678	P36	A4235	P31, P51, P59, P65b, P67
A0243	P36	A1679	P36	A4257	P37
A0245	P36	A1720	P4	A4258	P38
A0257	P36	A2007	P7	A4262	P23
A0308	P55	A2008	P13	A4264	P23
A0312	P55	A2012L	P3	A4265	P23
A0318	P55	A2012R	P3	A4275	P22
A0320	P55	A2013	P3	A4286	P56
A0321	P68	A2014	P3, P15, P17, P55	A4287	P56
A0322	P69	A2016	P7	A4295	P37
A0323	P70	A2018	P9	A4296	P37
A0328	P55	A2019	P9	A4297	P38
A0378	P29	A2020	P9	A4298	P38
A0485	P11	A2021	P5	A4320	P37, P38
A0785	P55	A2022	P5, P6, P57	A4322	P39
A0810	P55	A2027	P8	A4444	P13
A0811	P2	A2054	P6	A4469	P30
A0860	P2	A2056	P3, P21	A4470	P30
A0863	P61	A2058	P8	A4569	P53
A0864	P61	A2068	P27	A4570	P53
A0895	P25	A2075	P11	A4775	P71
A0898	P61	A2076	P13	A4776	P71
A0899	P36	A2094	P19	A4822	P7
A1000	P45, P47	A2116	P3, P5	A4976	P65
A1006	P47	A2142	P25	A5089	P27
A1013	P47	A2147	P25	A5090	P27
A1018	P43, P45, P46	A2148	P25	A5093	P39
A1019	P45, P47	A2327	P8	A5095	P40
A1020	P43, P46	A2354	P67	A5097	P40
A1021	P43, P47	A2355	P67	A5103	P30
A1028	P47	A2558	P25	A5105	P27, P31
A1029	P47	A3086	P6	A5106	P31, P51
A1039	P47	A3113	P43, P47	A5107	P31, P51, P59
A1044	P47	A3114	P47	A5108	P31, P51
A1053	P47	A3115	P45	A5109	P31, P51
A1054	P46	A3119	P45	A5110	P31, P51
A1055	P47	A3128	P47	A5111	P31, P51
A1076	P43, P45, P47	A3132	P46, P47	A5112	P31, P51
A1079	P43, P45, P47	A3135	P43, P45, P47	A5113	P31, P51
A1086	P45	A3136	P43	A5114	P28, P59
A1090	P47	A3137	P47	A5115	P59
A1096	P46	A3138	P47	A5116	P27, P31, P51, P59
A1102	P43	A3139	P46	A5118	P27
A1105	P45	A3140	P47	A5120	P27
A1138	P43, P45	A3141	P46	A5121	P25
A1150	P43	A3142	P43, P45, P47	A5122	P25
A1168	P45	A3145	P45	A5123	P25
A1170	P43	A3147	P43, P45, P47	A5124	P25
A1171	P43	A3148	P47	A5130	P35
A1173	P43, P45	A3149	P43, P45, P47	A5136	P59, P65b, P67
A1177	P43, P45	A3156	P47	A5141	P23
A1178	P43, P45	A4122	P71	A5146	P31, P51
A1182	P43, P45	A4123	P71	A5157	P27

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
A5158	P27	A5625	P14	A6154	P65d
A5164	P29	A5628	P31, P51	A6158	P65h
A5165	P29	A5629	P31, P51	A6168	P10
A5173	P35	A5630	P17	A6182	P10
A5175	P33	A5631	P17	A6184	P10
A5177	P33	A5635	P17	A6187	P10
A5178	P33	A5636	P17	A6408	P56
A5180	P27	A5637	P17	A6476	P11
A5182	P27	A5643	P17	A6478	P10
A5183	P33	A5651	P4	A6501	P65b
A5184	P33	A5652	P61	A6509	P65b
A5188	P35	A5678	P59	A6516	P53
A5190	P35	A5698	P10	A6517	P53
A5192	P35	A5699	P10	A6518	P53
A5194	P59, P65b	A5715	P15, P18	A6519	P53
A5195	P59	A5718	P15	A6633	P10
A5196	P25	A5719	P15, P18	B0100	P9
A5197	P23	A5727	P57	B0102	P2
A5198	P23	A5728	P57	B0103	P3
A5199	P23	A5761	P27	B0104	P3
A5200	P23	A5786	P21	B0105	P3
A5201	P23	A5787	P21	B0107	P7
A5202	P31, P51	A5788	P21	B0108	P7
A5223	P59	A5791	P57	B0109	P7
A5229	P59	A5794	P10	B0111	P9
A5230	P58	A5795	P10	B0113	P6
A5231	P58	A5796	P10	B0115	P13
A5236	P58	A5798	P4	B0116	P13
A5237	P58	A5799	P65	B0118	P5, P57
A5251	P67	A5800	P65	B0120	P9
A5258	P65	A5834	P10	B0121	P13
A5264	P65	A5839	P53	B0123	P27
A5269	P23	A5846	P21	B0134	P55
A5270	P23	A5853	P36	B0177	P33, P35
A5312	P53	A5865	P53	B0181	P22
A5313	P53	A5873	P49	B0183	P13
A5315	P53	A5874	P49	B0184	P13
A5366	P67	A5875	P49	B0186	P4, P21
A5368	P59	A5876	P49	B0191	P14, P17
A5453	P40	A5877	P49	B0195	P15, P17
A5454	P40	A5880	P3, P49	B0196	P17
A5455	P39	A5884	P49	B0198	P61
A5459	P40	A5887	P56	B0199	P61
A5460	P40	A5892	P18	B0200	P61
A5471	P53	A5906	P7	B0205	P56
A5533	P13	A5917	P65	B0206	P57
A5541	P39	A5921	P23	B0209	P56
A5549	P49	A5982	P10	B0210	P56
A5552	P41	A6027	P10	B0212	P57
A5562	P39	A6038	P10	B0213	P57
A5563	P39	A6056	P6	B0218	P4, P17, P56
A5564	P21	A6119	P38	D0438	P33
A5572	P41	A6120	P37	D0453-02	P33
A5600	P49	A6134	P38	D0453-03	P35
A5622	P14, P17	A6135	P37	D0453-04	P35
A5624	P31, P51, P59	A6137	P37, P38	D0453-07	P33

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
D0453-08	P35	D1114	P4, P21, P23, P53, P58, P61, P65	D2199	P71
D0462	P33	D1115L	P11	D2412	P61
D0487	P55	D1115R	P11	D2423	P11
D0652	P35	D1116	P11	D2460	P19
D0746	P36	D1118	P11	D2548-15.5	P63
D0840	P36	D1120	P2	D2548-25.5	P63
D0844	P25	D1121	P8	D2548-27.5	P63
D0914-118	P51	D1128	P11	D2558	P31, P51, P59, P67
D0914-137	P29	D1130	P3	D2589	P55
D0917	P29, P51, P65b, P67	D1132	P15, P17, P55	D2597	P36
D0935	P67	D1138	P58	D2721	P33, P35
D0962	P55	D1143	P19	D2734-01	P31, P51
D0973	P5	D1144	P19	D2864	P11
D1026	P3, P21, P27	D1145	P19	D2947	P11
D1027	P2	D1162	P73	D2984	P73
D1030	P3, P55	D1166	P25	D3214	P35
D1031	P3	D1200	P61	D3518-09	P53
D1033	P3	D1207	P61	D3518-10	P53
D1035	P7	D1209	P61	D3518-11	P53
D1036	P7	D1210	P61	D3518-12	P53
D1037	P7	D1213	P61	D3518-13	P53
D1039	P9	D1215	P66	D3518-14	P53
D1040	P9	D1216	P67	D3550	P53
D1041	P9	D1255	P29	D3790	P61
D1042	P9	D1256	P29	D3839	P65b, P67
D1044	P9	D1323	P11	D4167	P25
D1045	P9	D1337	P65	D4455	P6
D1046	P9	D1339	P55	D4632	P40
D1048	P5, P57	D1353	P5	D4850	P57
D1051L	P8	D1379	P61	D4887-03	P31
D1051R	P8	D1380	P61	D4888	P57
D1053	P8	D1512	P73	D5752	P27
D1054	P8	D1514	P65	D5753	P27
D1055	P8	D1515	P65	D5756	P27, P31
D1056	P13	D1516	P65	D5789	P27
D1058	P13	D1517	P65	D5790	P27
D1059L	P13	D1520	P65	D5797	P27
D1059R	P13	D1657	P55	D5804	P25
D1060	P13	D1673	P55	D5824	P30
D1061	P13	D1685-12	P58	D5825	P30
D1063	P13	D1685-13	P58	D5827	P27, P30
D1065	P2	D1685-14	P58	D5829	P30
D1066	P3	D1685-15	P58	D5830	P30
D1072	P13	D1685-16	P58	D5831	P30
D1081	P11	D1685-17	P58	D5835	P31, P51
D1082	P11	D1719	P29, P51	D5841	P25
D1083	P9	D1755	P10	D5845	P25
D1085	P6	D1797	P55, P57	D5846	P25
D1086	P5	D1812	P65	D5847	P25
D1089	P13	D1862	P65	D5857	P27, P30, P50, P59, P65b, P67
D1090	P11	D2115	P57	D5860	P27
D1104	P57	D2117	P73	D5875	P23
D1109	P4	D2128	P7, P21	D5884-01	P29
D1110	P3	D2134	P21	D5884-02	P29
D1111	P6	D2161	P35	D5885-01	P29
D1113	P21, P23, P51, P53, P56				

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
D5885-02	P28	D7587	P13	D8308	P57
D5885-03	P28	D7588	P13	D8458	P7, P13
D5885-05	P29	D7589	P13	D8750	P13
D5886	P28, P29, P51, P59, P63	D7591	P13	D8751	P49
D5887-95	P51	D7592	P13	D8770	P49
D5887-105	P28	D7618	P7	D8771	P49
D5887-109	P51	D7619	P4	D8778	P10
D5887-128	P28	D7626	P21	D8811	P5
D5887-144	P29, P51	D7627	P21	D8815	P57
D5887-154	P29	D7629	P39	D8816	P65a
D5887-155	P51	D7630	P43, P45, P47	D8843	P14, P17
D5887-165	P29	D7632	P49	D8844	P14, P17
D5887-185	P51	D7803	P14, P17	D9226	P65b
D5887-204	P29	D7804	P14, P17	D9231	P53
D5887-215	P51	D7805	P4, P15, P17	D9233	P53
D5887-225	P29	D7811	P17	D9254	P14, P17
D5888	P22	D7815	P17	GA5640	P14, P17
D5892	P33	D7816	P17	GB0227	P14, P17
D5930	P23	D7817-01	P15, P17	R0150	P36
D5946	P38, P38	D7817-04	P15, P17	R0151	P36
D5947	P37	D7817-09	P17	R0155	P73
D5949	P40	D7818	P17	R0188	P56
D5954	P39	D7819	P28	R0193	P33
D5956	P39	D7822	P31, P51	R0196	P7, P13, P21
D5958	P28	D7823	P15, P17	R0207	P68, P69, P70
D5959	P29	D7831	P17	R0208	P68, P69
D5960	P29	D7848	P61	R0209	P68
D5961	P28, P29	D7867	P59, P63	R0210	P68, P69
D5987	P67	D7868	P63	R0211	P68, P69, P70
D5988	P67	D7870	P59	R0212	P68, P69, P70
D5989	P67	D7871	P59	R0213	P68, P69
D5990	P65b, P67	D7878	P10	R0214	P68, P69, P70
D6027	P23	D7889	P15, P18	R0215	P68, P69, P70
D6136	P53	D7890	P15, P18	R0216	P68, P69
D6161	P21	D7900	P56	R0217	P68, P69, P70
D6165	P67	D7904-02	P57	R0220	P70
D6177	P25	D7907	P57	R0221	P70
D6182	P65b, P67	D7908	P57	R0222	P70
D6291	P49	D7911	P57	R0223	P68
D6501	P9	D7912	P56	R0224	P68, P69
D6533	P3	D7944	P27	R0225	P68, P69, P70
D6551	P31, P51	D7962	P57	R0226	P68, P69, P70
D6553	P56	D8030	P57	R0227	P68
D6574	P39	D8031	P57	R0228	P68, P69
D6793	P31, P51	D8214	P57	R0229	P69, P70
D6819	P31, P51, P59, P65b	D8218	P57	R0230	P69, P70
D6869	P53	D8224	P57	R0231	P69, P70
D6870	P53	D8237	P10	R0232	P68, P69, P70
D7127	P31, P51, P59	D8238	P57	R0233	P69
D7140	P22	D8239	P57	R0236	P70
D7145	P65, P71	D8246	P59	R0255	P22
D7148	P13	D8249	P4, P21	R0270	P25
D7152	P71	D8266	P18	R0279	P70
D7258	P13	D8276	P57	R0280	P70
D7426	P3, P13, P21, P27, P31, P51, P59, P65b, P67	D8304	P71	R0281	P70
		D8307	P15, P17	R0282	P70

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page
R0283	P70	R1047	P41	R1157	P65h
R0284	P70	R1048	P41	R1158	P65h
R0367	P33	R1062	P3, P49	R1162	P65h
R0375	P33	R1077	P49	R1165	P65d
R0434	P25	R1078	P49	R1166	P65d
R0439	P73	R1079	P49	R1167	P65d
R0440	P73	R1080	P49	R1168	P65d
R0508	P65	R1081	P49	R1169	P37, P38
R0509	P65	R1082	P49	R1173	P65d, P65f
R0510	P65	R1083	P49		
R0513	P65	R1084	P49		
R0582	P49	R1085	P49		
R0583	P49	R1087	P3, P49		
R0594	P49	R1099	P5		
R0595	P49	R1100	P65d		
R0664	P9	R1102	P65d		
R0866	P49	R1104	P65d		
R0911	P31, P51, P67	R1105	P65d		
R0912	P27, P31, P31, P51, P59, P65b, P67	R1106	P65d		
R0923	P39	R1107	P65d		
R0927	P40	R1108	P65d		
R0930	P39	R1109	P65d		
R0933	P9	R1110	P65d		
R0959	P40	R1111	P65d		
R0968	P71	R1112	P65d		
R0969	P71	R1114	P65d		
R0970	P71	R1116	P65d		
R0982	P37	R1118	P65d		
R0983	P37, P38	R1119	P65d		
R0984	P38	R1120	P65d		
R1005	P65	R1122	P65b		
R1006	P65	R1123	P65d		
R1015	P65	R1124	P65f		
R1016	P65	R1125	P65f		
R1017	P65	R1127	P65f		
R1018	P65	R1129	P65f		
R1019	P65	R1130	P65f		
R1022	P53	R1132	P65f		
R1030	P39	R1133	P65f		
R1031	P39	R1134	P65f		
R1032	P41	R1135	P65f		
R1033	P41	R1136	P65f		
R1034	P41	R1137	P65f		
R1035	P41	R1140	P65f		
R1036	P41	R1142	P65f		
R1037	P41	R1143	P65f		
R1038	P41	R1144	P65f		
R1039	P41	R1145	P65f		
R1040	P41	R1147	P65d		
R1041	P41	R1148	P65d		
R1042	P41	R1150	P65h		
R1043	P41	R1151	P65h		
R1044	P41	R1152	P65h		
R1045	P41	R1153	P65h		
R1046	P41	R1154	P65h		
		R1155	P65h		